
Assemblies & Ramps

Optional Kits available through your Distributor:

Flipper Rebuild Kit (Left) 500-6307-10
Flipper Base Plate Kit (Left) 515-6617-01
Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.
Flipper Rebuild Kit (Right) 500-6307-00
Flipper Base Plate Kit (Right)515-6617-00
Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.
Pinball Location Maintenance Standard Kit (for X-MEN LE Pinball)502-6002-D2
Standard Kit includes: 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. Note: Quanties, sizes and contents subject to change without notice.
Pinball Location Maintenance Deluxe Kit (for X-MEN LE Pinball)502-6003-D2
Deluxe Kit includes: Pinball Location Maintenance Standard Kit as described above plus a quantity of Flipper Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game. ▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲
Plastics*Kit (for X-MEN LE Pinball)803-5000-D2
Plastics Kit includes: Plastic Sets (830-6161-XX)
Decals*Kit (for X-MEN LE Pinball)802-5000-D2
Decals Kit includes: Decal Set (820-6901-XX),(820-6912-XX),(820-6913-XX),(820-6914-XX)

^{*}Attention: No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.

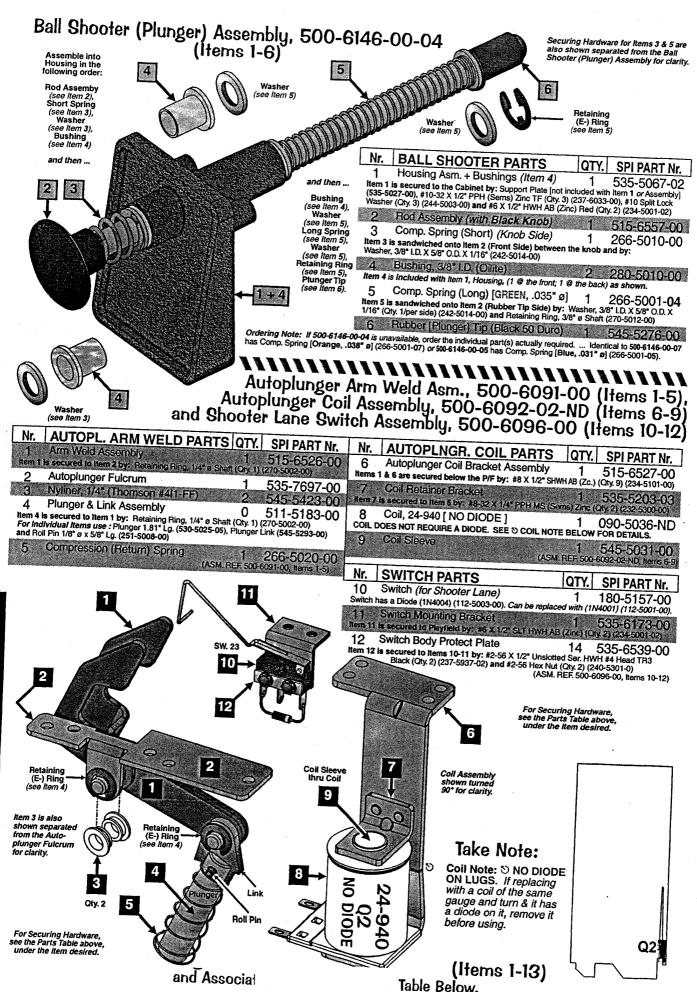




4-Ball Trough Assembly, 500-6318-24-ND (Items 1-13) and Associated Parts: See Parts Table Below.


Ordering Note: Identical to 500-6318-14 with exceptions, see note below Item 13 (Parts Table).

3	OX9 IIIIW PI-OLOG-O-	eptions, see note below Ite	em 13 (Parts Table).
Nr. 4-BALL TROUGH PARTS 1 Ball Trough Outhole Mounting Bracks		Nr. 4-BALL TROUGH PARTS	QTY. SPI PART Nr.
Item 1 is secured below the playfield by: #8 X 1/2" SH		1 Trough Ball Guide Plate	
2 Coil Mounting Bracket Item 2 is secured to Item 1 by: #8-32 X 3/8" HWH Swag	1 505 7000 41 12	em 11 is secured to Item 1 by: 1/4* X 5/16* X 14: 54-5014-03) and #2-56 X 1/2* HWH (Ser) UNS #4# 12 Dual OPTO TRANS Board Assen	
3 Coil Retaining Bracket Item 3 is secured to Item 2 by: #8-32 X 1/4* SHWH (Ser	1 535-5203-03 1	3 Dual OPTO REC Board Assemble	V 1 515 0174 00
4 Coil. 26-1200 I NO DIODE 1	1 090-5044-ND 6	ems 12 & 13 are secured by: #6-32 X 5/8' HWH S or Individual Items use: Dual OPTO Transmitter P PTO Receiver Board (0), 1) (520-5174-00), OPTO 30-5308-02) and OPTO PCB Rubber Comment (0)	wg (Ser) Zc (Ory 3/per) (237-5976-04) Joard (City 1) (520-5173-00), Dual
COIL DOES NOT REQUIRE A DIODE. SEE S COIL NOT 5 Coil Sieeve (Short) (Formost #10-7077)	E BELOW FOR DETAILS. (5	rdering Note: If 500 6218 24 ND is assemble to	A 2shail (242-2219-00)
6 Steel & Nylon Plunger Asm. (3.57") 7 Compression (Return) Spring	1 515-7309-01 10	nis assembly is identical to 500-518-14-ND, -15 or -25 (Cty. 4/per on 5-Ball Trough) and Item 11, required meND means no diode on Item 4, Coil, 26-1200	except for the quantity of Items 9 &
8 Rubber Bumper (Grommet)	1 266-5020-00 ^{ga} 1 545-5105-00	10 diode on nem 4, Con, 26-1200	•
9 Micro Switch (Roller Actuator, Lite Force) Item 9 requires: Heat Shrink Tubing 1/8* ø PUI-24 (Ory. 1*	3 180-5119-02 N		QTY. SPI PART Nr.
Switch has a Diode (1N4004) (112-5003-00). Can be replaced by Protect Plate	ed with (1N4001) (112 5001 00) AP	-A Ball Trough Enter / Exit Scoop m AP-A secured to the playfield by: #8 X 1/2" SH	1 505 7000 04
	AP	B Steel Balls (1-1/16" ø)	4 260-5000-00
	Take Special Item AP-A, Ball Trough Ente 535-7329-01 (not included Trough Assembly), is sho above and rotated sligh Enter / E	r / Exit Scoop, with the 5-Ball wn floating thy for clarity.	AP AP
City, 4		PLAYFIELD CUT-AWAY VIEW	2
1			
Spacer (see Item 11) For Securing Hardware, see the Parts Table above, under the Item desired.	Oty. 3 9 See securing hunder items 1 SW 9 SW 9 SW 19 O 0 O 0	3 13 → 8 SW. 21 SW. 21 SW. 21	sedway security is in the Trough Assemble is
S Coil Note: S NO DIO with a coil of the same remove it before using	ake Note: DE ON LUGS. If replacing a gauge and turn and it has a literal of items 12 & 13, Dual O is (515-0173-00 and 515-017.	diode on it,	the Trough Assembly, in line with ltem 13, Dual OPTO REC (Receiver) Board, 515-0174-00, using same hardware. Cable Wiring Harness 036-5508-04 3-Pin Connector 045-5007-03 12-Pin Connector 045-5007-12

Flipper (Left) Assembly, 500-6543-12-ND (Items 1-15) and Associated Parts: YELLOW Flipper Bat & Shaft Asm., 515-5133-06-06 (Items AP-A / AP-B)

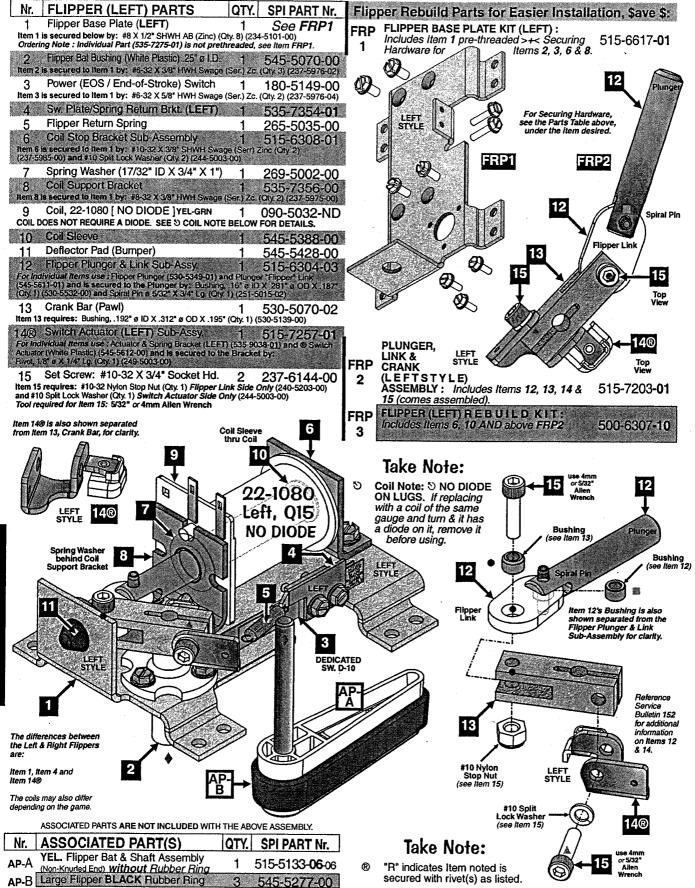



Flipper (Right) Assembly, 500-6543-02-ND (Items 1-15) and Associated Parts: Yellow Flipper Bat & Shaft Asm., 515-5133-06-06 (Items AP-A / AP-B)

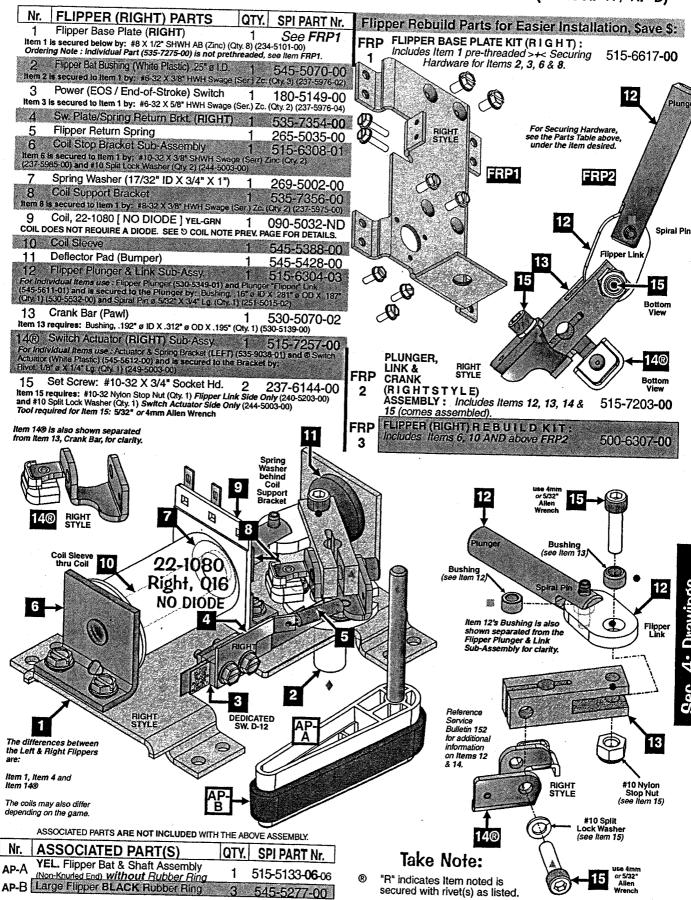


Slingshot (Left & Right) Assemblies, 500-5849-01-ND (Qty. 2) (Items 1-9)



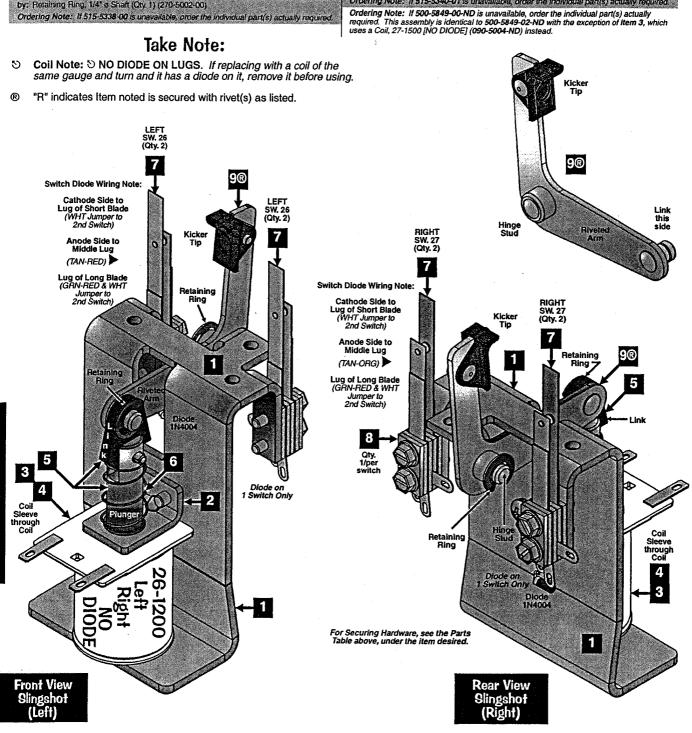

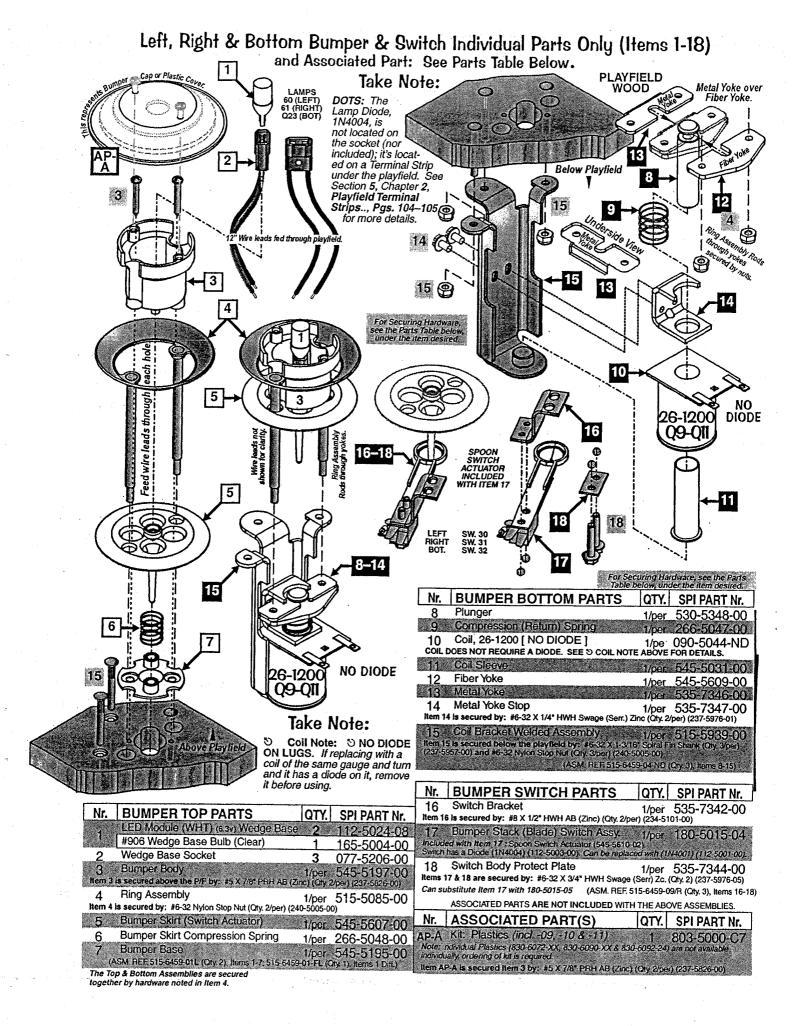

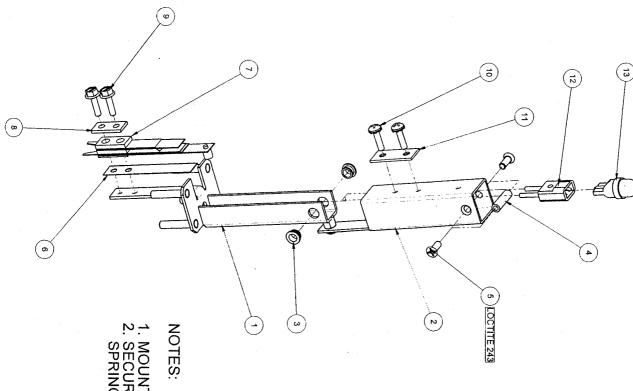

036-5583-10-D1 CABLE ASSEMBLY	036-5583-10		NOT SHN
00 WOLVERINE - TRIMMED	545-7312-00		NOT SHN
02 2-PIN CONNECTOR	045-5004-02		NOT SHN
01 DOUBLE LED, WEDGE BASE, CLEAR	112-5033-01	-3	13
00 LAMP SOCKET - POP BUMPER	077-5206-00	_	12
00 BUMPER HOLDER - FASTENED	535-9648-00		===
-00 SCREW, 6-32 X 1/2" PPH MS SEMS	232-5202-00	2	6
03 6-32 X 1/2" HWH MS	237-5976-03	2	9
-00 SWITCH PLATE	535-5045-00		8
00 SINGLE FLIPPER SWITCH/ w NYLON LIFTER	180-5218-00	_	7
-00 FICHE PAPER	545-7310-00		6
-00 SCREW, 6-32 X 3/8 PFH 82-DEG U/C ZINC	237-5871-00	2	5
-00 PIVOT SHAFT	530-7805-00	-	4
-00 NYLINER, 3/16" SHAFT	545-5352-00	2	3
-00 MOUNTING TUBE ASSEMBLY	511-7225-00		2
-00 SUPPORT BRACKET	515-9620-00	-	
DESCRIPTION	PART#	ΩŢ	ITEM#

-	•	
C)	
Ċ	_	
Z	_	
_	Ŧ	
	4	
C)	
٦	כ	
Ţ	_	
Į	?	
~	<	
ב	7	
_	_	
, ,	1	
	_!	
ב	י כ	
Г	コフィ	
Г	ナフィン	
Г	コフィンフ	


1. MOUNT TO PLAYFIELD IOF.
2. SECURE TO PLAYFIELD BOTTOM WITH SPRING RETAINER 535-0616-00,
SPRING 266-5077-00, 2X WASHER 242-5005-00 & 4X STOP NUT 240-5102-00.


WOLVERINE ASSEMBLY


500-7258-01


H

# DESCRIPTION	1 515-9621-00 MOUNTING TUBE	232-5200-00 SCREW, 6-32 X 1/4" PPH SEMS	254-5008-00 HEX SPACER - 1/4 "
EM # QTY PART #	515-9621-	232-5200-	254-5008-
QTY	1	_	—
# M=	-	2	3

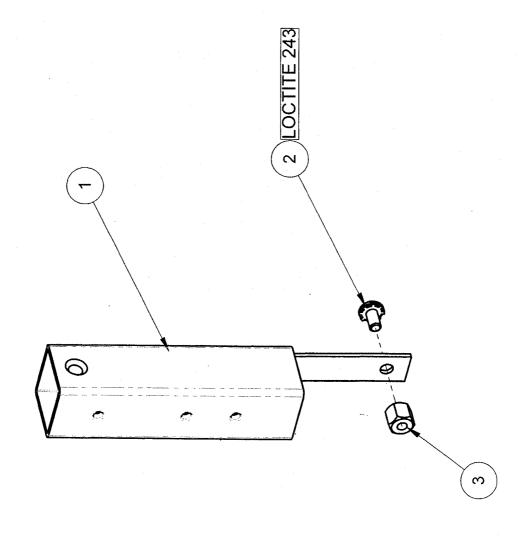

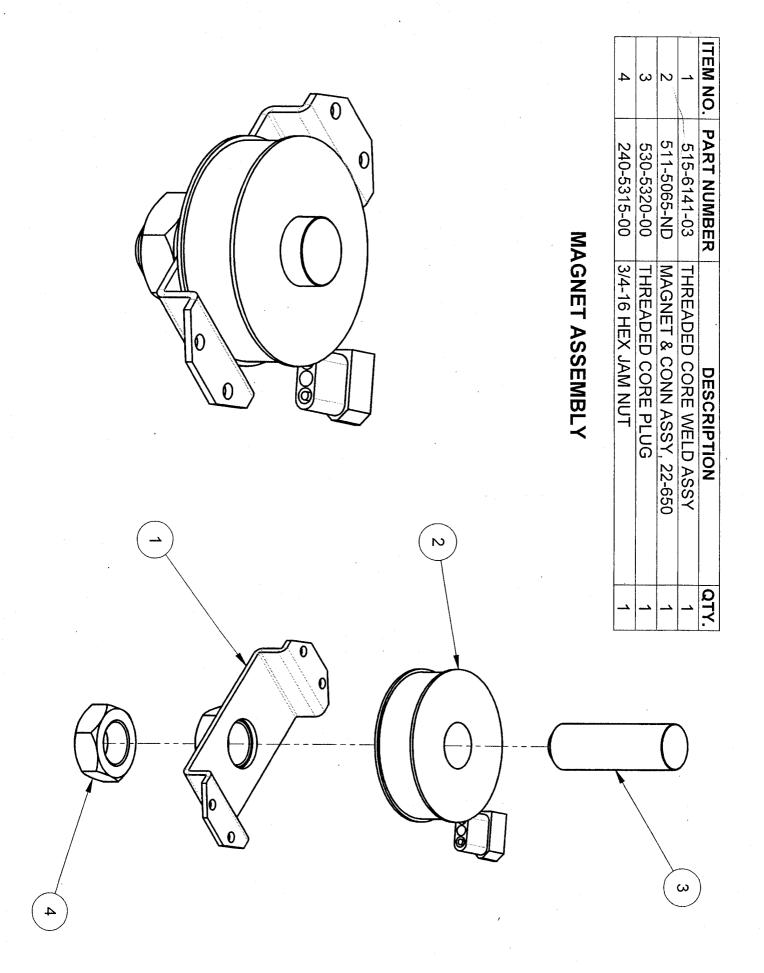


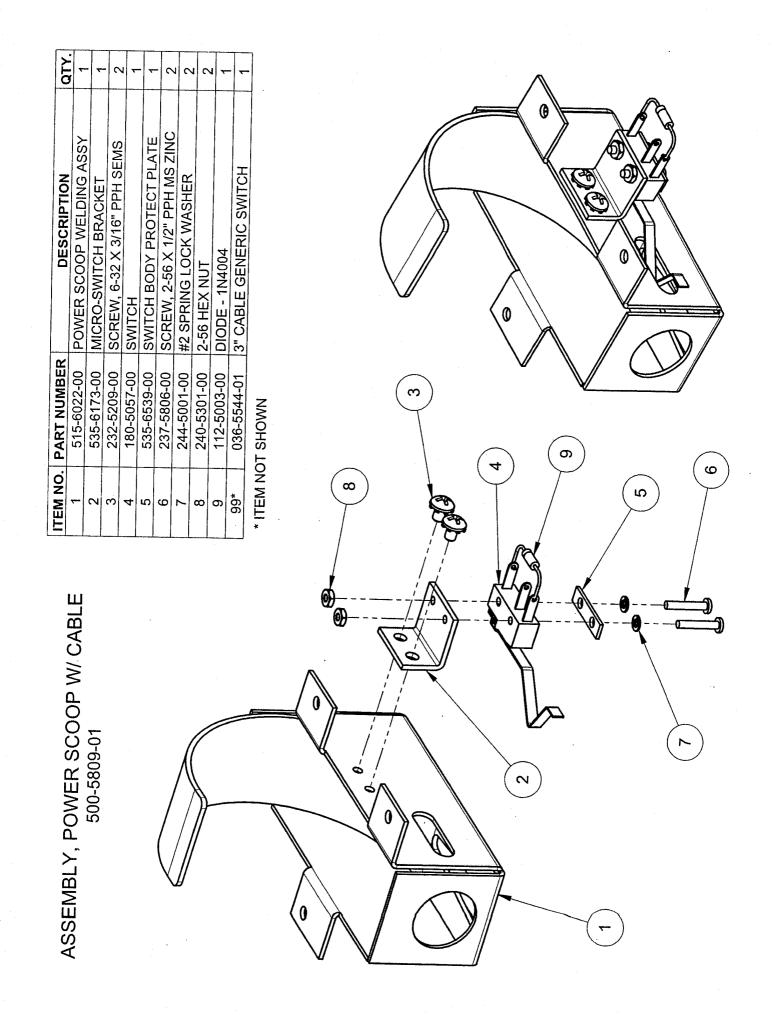

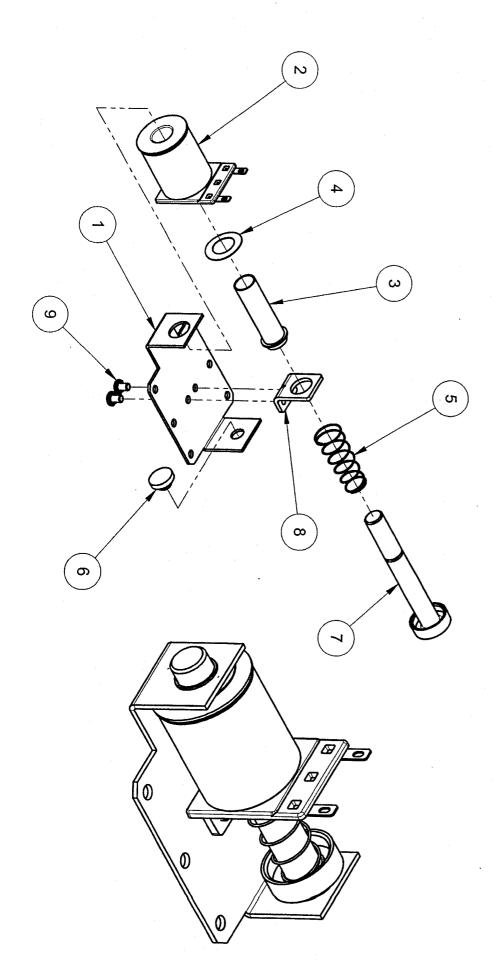



	T	Τ	T	T	Т	Τ	T	T	-
9	8	7	6	5	4	ယ	2		HM NC.
232-5300-00	535-5203-03	515-7318-00	545-5105-00	266-5020-00	269-5002-00	545-5076-01	090-5001-ND	535-8575-00	TAX NOMBER
SCREW, 8-32 X 1/4" PPH SEMS	COIL RETAINING BRACKET	PLUNGER ASSEMBLY	RUBBER BUMPER	COMPRESSION SPRING-CONICAL	SPRING WASHER	COIL SLEEVE	COIL - 23-800, NO DIODE	KICK BIG MTG. BRKT.	DESCRIPTION
2		_	_	_	_	_	_	_	QTY.

ASSEMBLY, BIG KICKER 500-6398-01

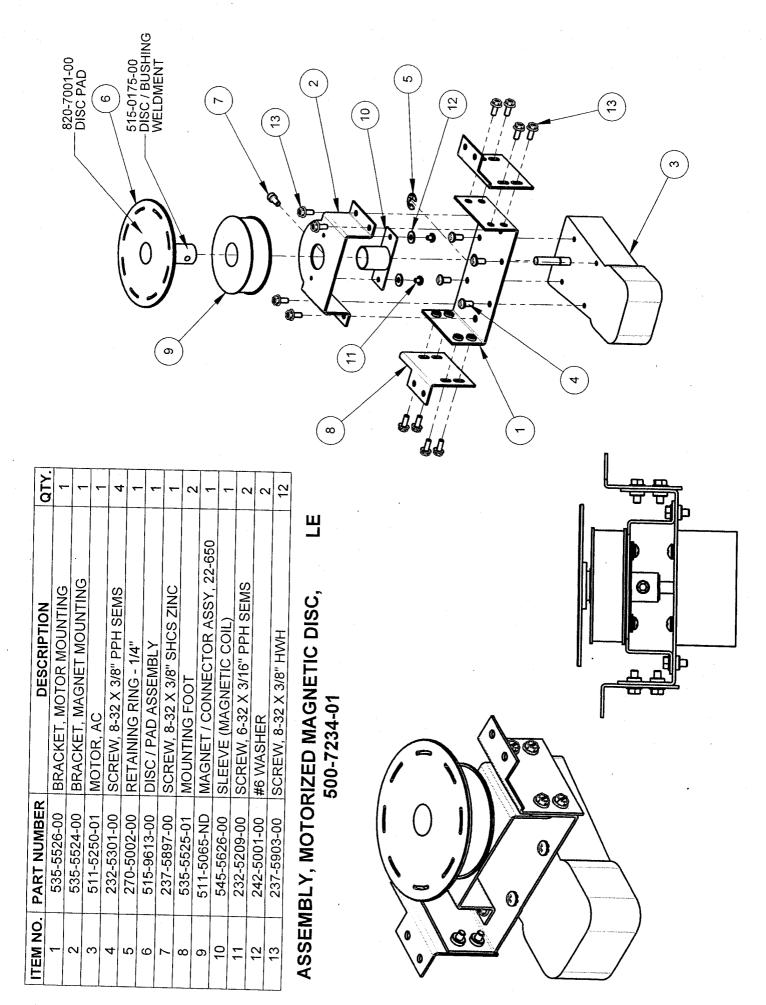

ITEM NO.	ITEM NO. PART NUMBER	DESCRIPTION	QTY.	
>	515-7734-00	WELDMENT, BALL LOCK BRACKET		
2	545-6816-01	BEARING BLOCK - BALL LOCK		
သ	511-6769-00	ASSY, BALL LOCK PLUNGER & BARS	_	•
4	090-5044-ND	COIL 26-1200 - NO DIODE		Þ
5	545-5076-01	COIL SLEEVE		
6	535-5203-03	COIL RETAINING BRACKET	2	
7	266-5020-00	COMPRESSION SPRING-CONICAL		
8	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	4	
9	530-5511-00	PLUNGER HEAD		
10	237-5702-00	SCREW, 10-32 X 1/2 PPH MS	>	
=======================================	515-7595-00-ND	515-7595-00-ND MINI-COIL ASSEMBLY, NO DIODE		
12	237-5975-00	SCREW, 8-32 X 3/8 HWH SWAGE ZN		
99*	036-5539-10-B1	036-5539-10-B1 CABLE, BALL LOCK MECH		
1	+ 1112 2101			

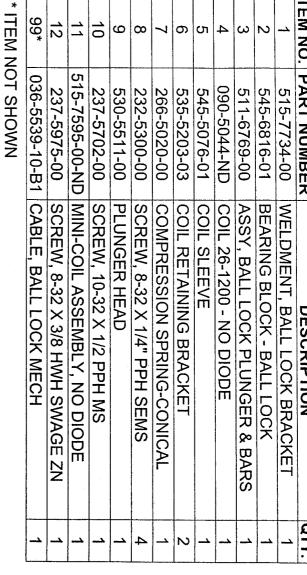


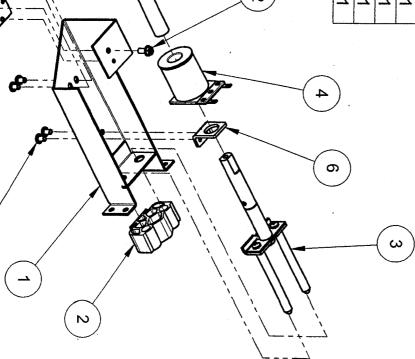


ASSEMBLY, LATCHING BALL LOCK

511-6770-00

ω

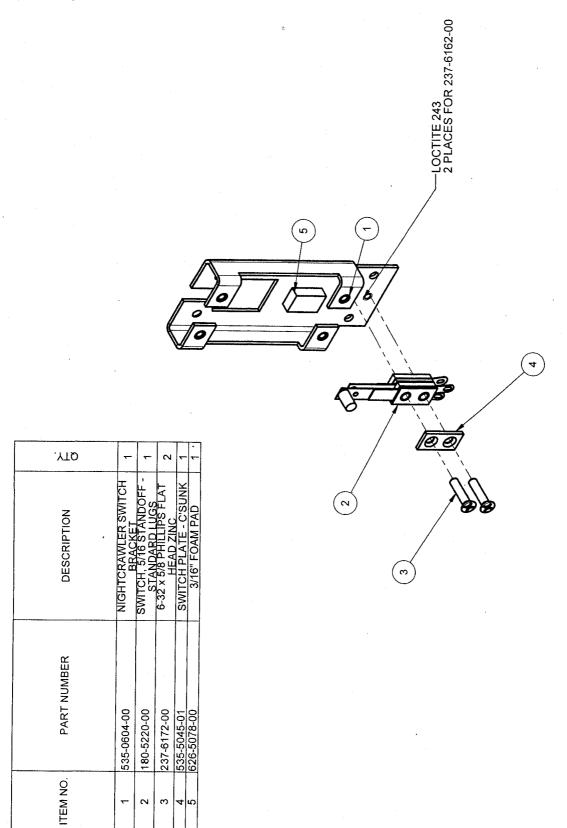

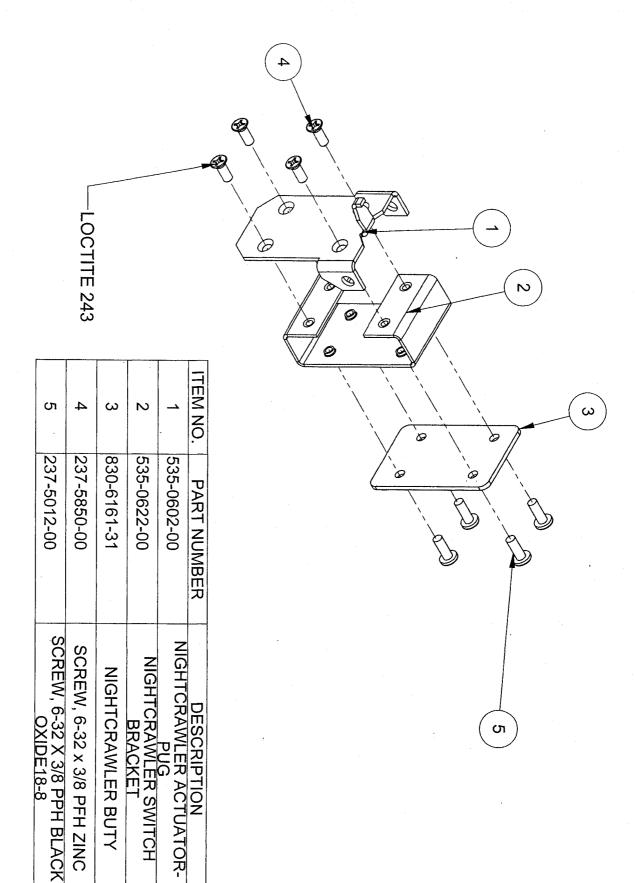


NIGHTCRAWLER ACTUATOR ASSEMBLY


4


NIGHTCRAWLER FIGURE MOUNT-VUK

511-7224-00

Vertical Up-Kicker (VUK) Asm. (Right Style), 500-7078-01 (Items 1-9)

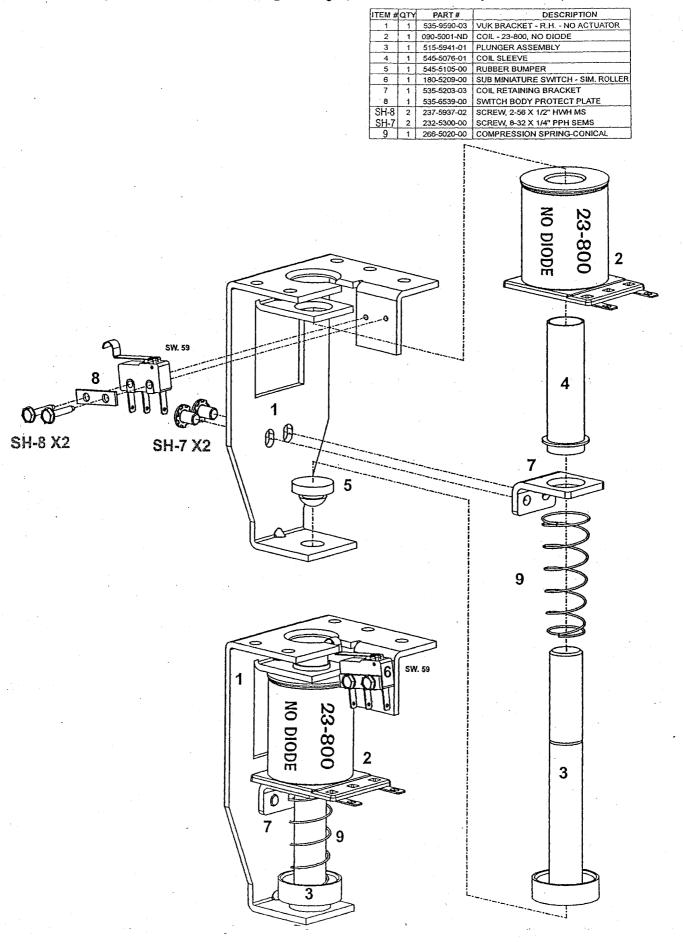


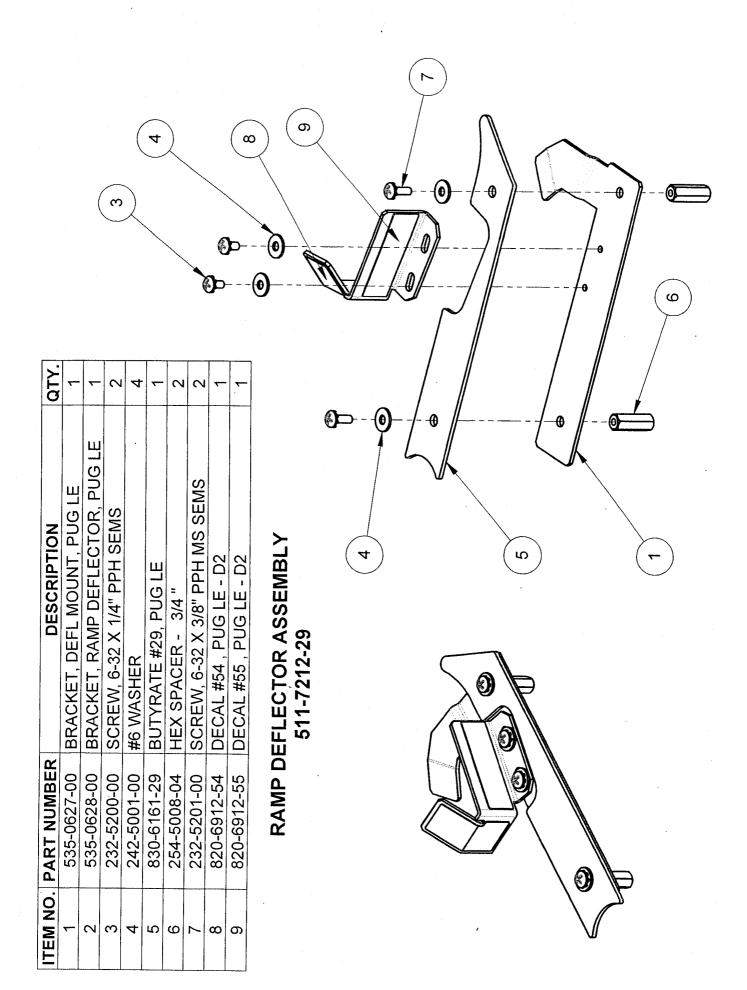

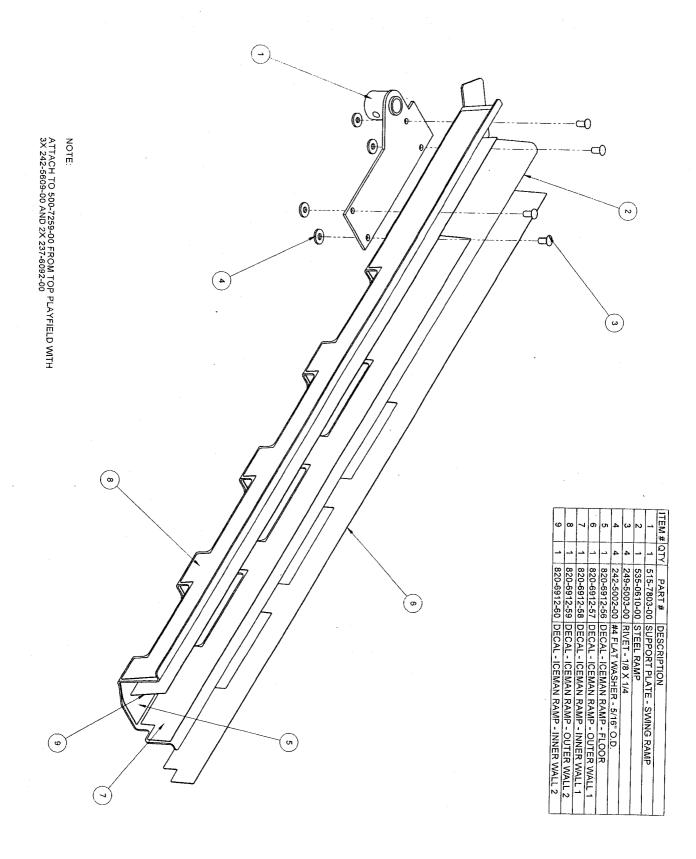


MOTOR ASSEMBLY - SWING RAMP

ITEM # QTY	ΩŢ	PART#	DESCRIPTION
+	1	515-7801-00	515-7801-00 MOTOR BRACKET ASSEMBLY
2		511-7233-00	511-7233-00 MOTOR AND CABLE ASSEMBLY
3	4	232-5304-00	232-5304-00 SCREW, #8-32 X 3/4" PPH MS SEMS
4	3	535-0612-00	535-0612-00 DRIVE PLATE
2	,-	515-9623-00	515-9623-00 DRIVE WHEEL
9	2	269-5007-00	269-5007-00 BELLEVILLE DISC SPRING
7	3	242-5608-00	242-5608-00 .010 SHIM WASHER
80	,	237-5903-00	237-5903-00 SCREW, 8-32 X 3/8" HWH
6	-	242-5038-00	242-5038-00 WASHER 13/64 ID X 5/8 OD X 1/16
10	-	242-5091-00	242-5091-00 WASHER, 1/2 X 17/64 X .03 - DT
1,	-	545-7311-00	545-7311-00 GLIDE BLOCK
12	-	515-9622-00	515-9622-00 LOWER ACTUATOR
13	-	515-7802-00	515-7802-00 SHAFT BRACKET ASSEMBLY
4		242-5609-00	242-5609-00 .314 ID X .438 OD X .030 THRUST WASHER
15	-	530-7806-00	530-7806-00 SHAFT - SWING RAMP
16	2	237-6092-00	237-6092-00 SET SCREW, 10-32 X 5/16, SOCKET CUP PT
17		530-7807-00	530-7807-00 TUBULAR SPACER
18	2	237-6030-02	237-6030-02 SCREW, 8-32 x 1/4 PFH 82° U/C MS
19	-	511-7219-00	511-7219-00 SWITCH BRACKET ASSEMBLY - RIGHT
50	-	511-7220-00	511-7220-00 SWITCH BRACKET ASSEMBLY - LEFT
21	4	232-5200-00	232-5200-00 SCREW, 6-32 X 1/4" PPH SFMS

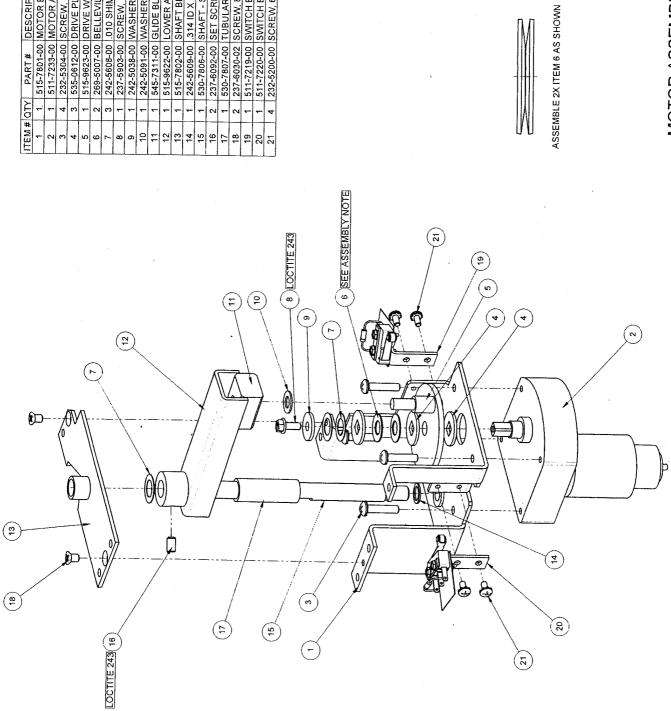


တ	5	4	ω	2	_	ITEM#
>	2		1	1	_	QTY
112-5003-00	237-5937-02	535-6539-00	180-5119-02	545-6268-00	535-0615-00	PART#
112-5003-00 DIODE - 1N4004	237-5937-02 SCREW, 2-56 X 1/2" HWH MS	535-6539-00 SWITCH BODY PROTECT PLATE	180-5119-02 MICRO-SWITCH - LIGHT ACTUATION	545-6268-00 FISCHE PAPER	535-0615-00 SWITCH BRACKET - LEFT - SWING RAMP	ITEM # QTY PART # DESCRIPTION

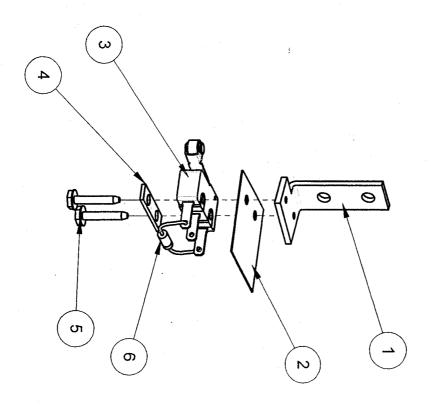


SWITCH BRACKET ASSEMBLY - LEFT

511-7219-00

ESCRIPTION	535-0614-00 SWITCH BRACKET - RIGHT - SWING RAN	SCHE PAPER	180-5119-02 MICRO-SWITCH - LIGHT ACTUATION	IODE - 1N4004	535-6539-00 SWITCH BODY PROTECT PLATE	2 237-5937-02 SCREW 2-56 X 1/2" HWH MS	
PART # DESCRIPTION	535-0614-00 8	545-6268-00 FISCHE PAPER	180-5119-02 N	1 112-5003-00 DIODE - 1N4004	535-6539-00 S	237-5937-02 S	
EM# QTY	1	-	_	~	_	2	
# W=	_	2	3	4	5	9	

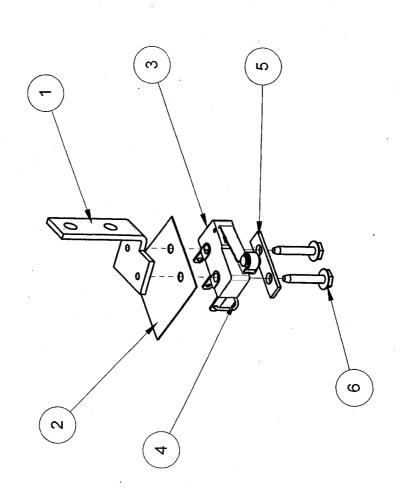

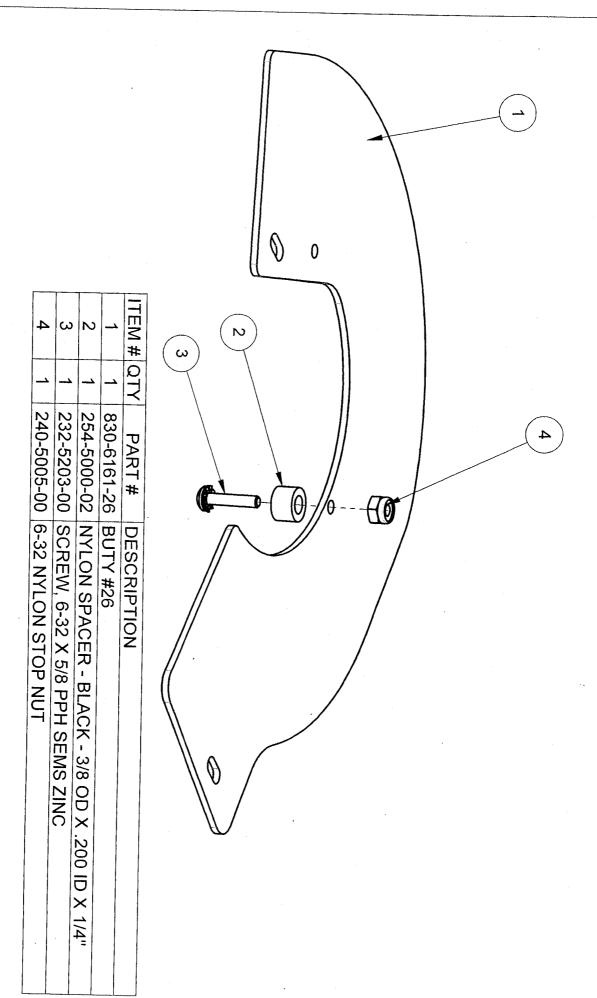


BUTY ASSEMBLY #26 -


Ь26

511-7212-26

511-6998-01


Щ

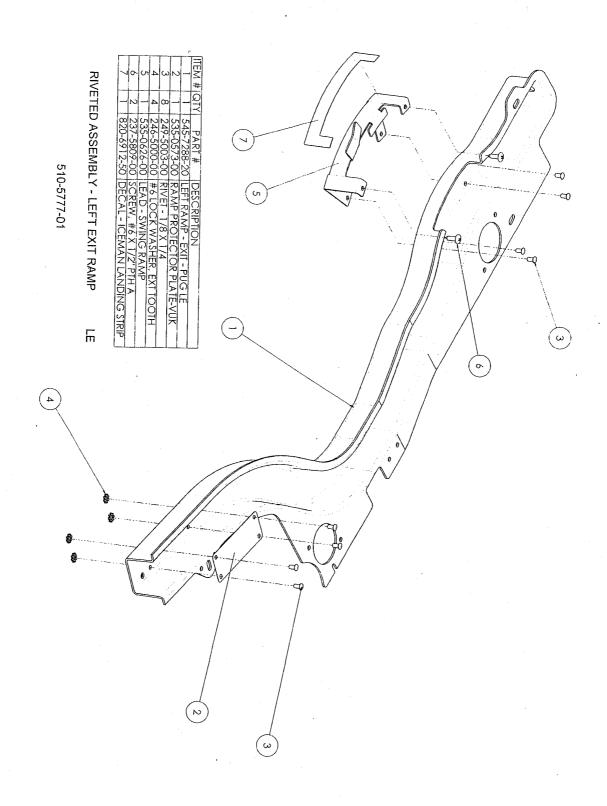

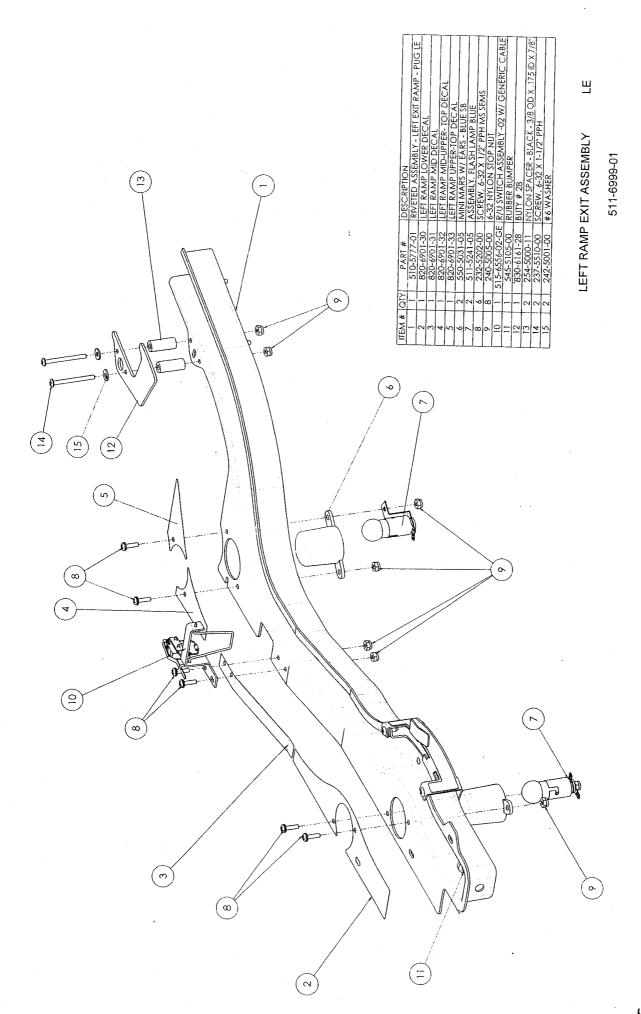


500-7224-01

LEFT PLASTIC RAMP ASSEMBLY LE

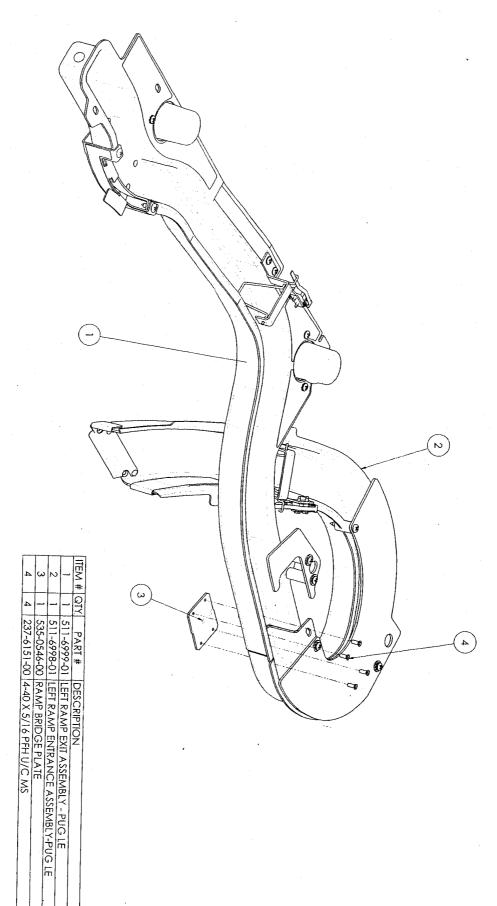

511-7000-01

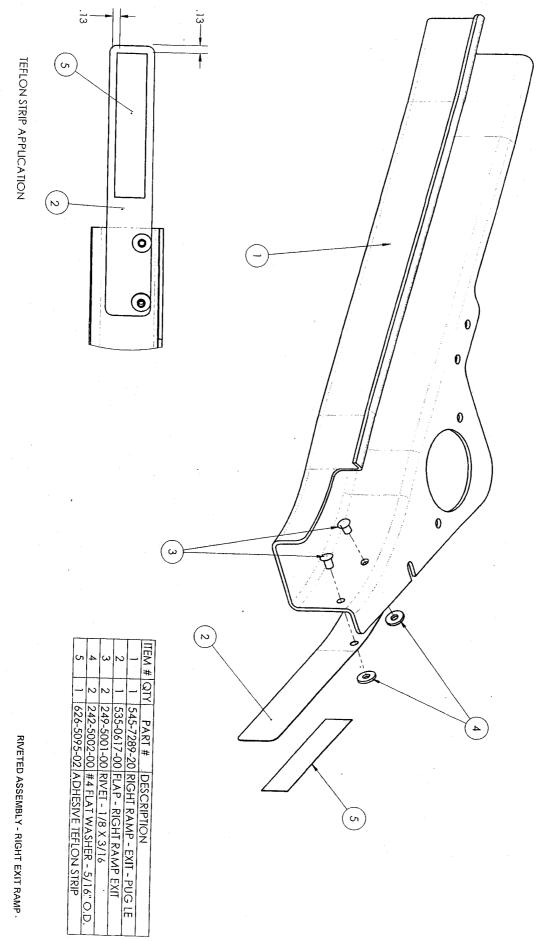

510-5778-01


F


511-7001-01


		·)		
		(9)		(9)
			1	
(9)				
(2)				
	(-)			4
	·			

			ITEM # QTY
5			
		6	4

RIGHT PLASTIC RAMP ASSEMBLY

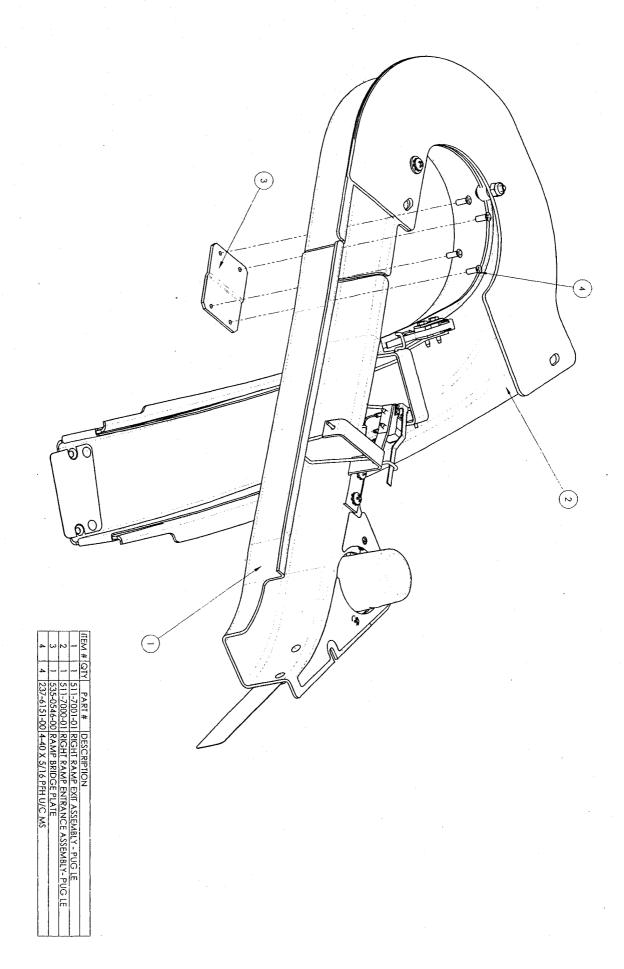

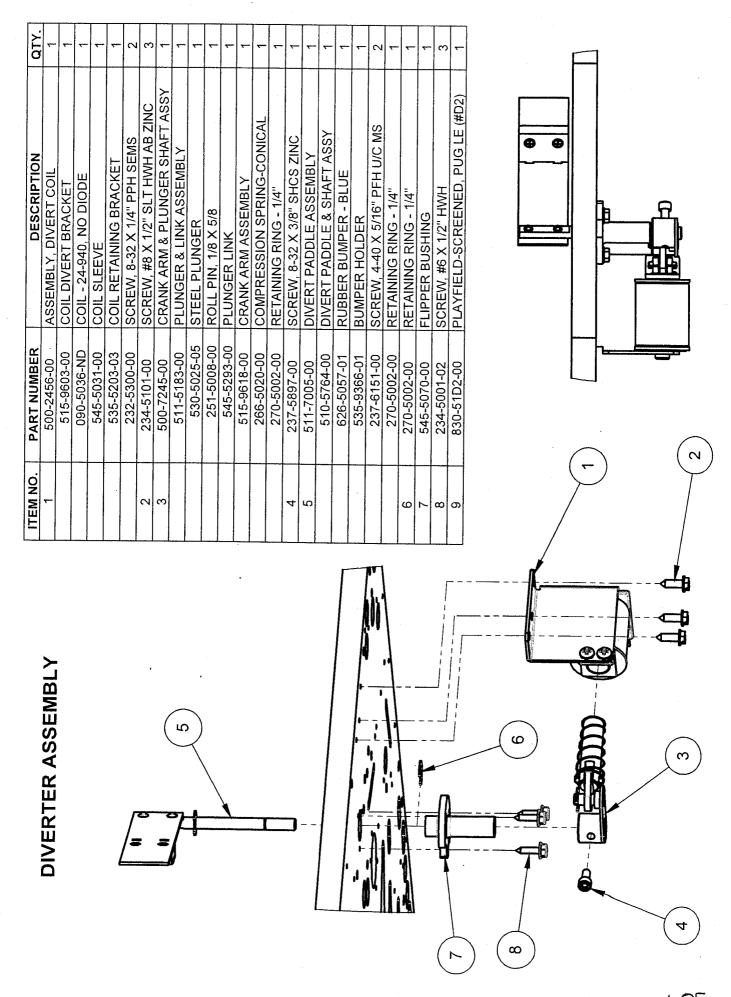

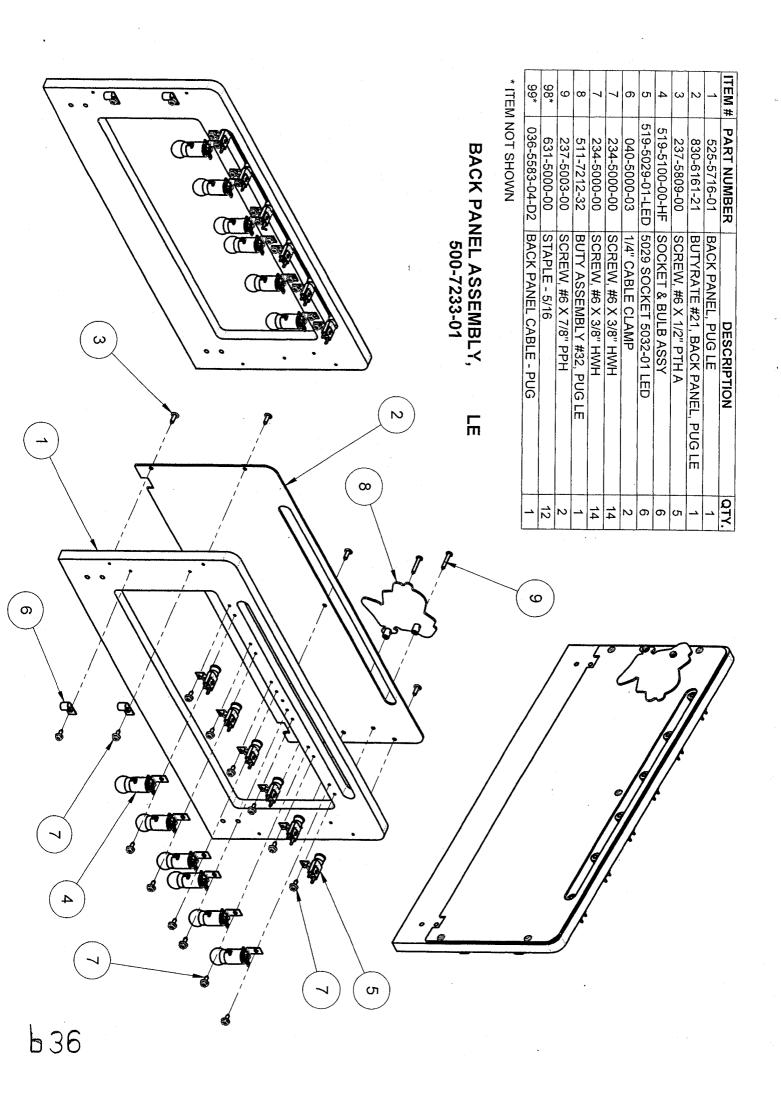

arts Identification

Optional Kits available through your Distributor:

Pinball Location Maintenance <u>Standard</u> Kit (for X-Men LE Pinball)502-	600 <u>2</u> -D2
Standard Kit includes : 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. N Quanties, sizes and contents subject to change without notice.	above l ote:
Pinball Location Maintenance <u>Deluxe</u> Kit (for X-Men LE Pinball)502-	600 <u>3</u> -D2
Deluxe Kit includes: Pinball Location Maintenance Standard Kit as described above plus a quantit Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game. ▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲ Plastics*Kit (for X-Men LE Pinball)803-	
Plastics Kit includes: Plastic Sets (830-6161-XX)	
Decals*Kit (for X-Men LE Pinball)80 <u>2</u> -	5000-D2
Decals Kit includes: Decal Set (820-6901-XX), (820-6912-XX), (820-6913-XX), (820-6914-XX)	

^{*}Attention: No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.


X-MEN LE WOVERINE Parts available through your Distributor:

Leg Assy Blue Streak	500-5921-06
Flip Button Assy Yellow	500-5026-36
Front Molding New No Hole Blue Streak	500-6882-02-06
Blue Streak LeftSide Armor	535-9596-06L
Blue Streak Right Side Armor	535-9596-06R
Pivot Hinge Left Blue Streak	535-7999-66L
Pivot Hinge Right Blue Streak	535-7999-66F
Mirrored Back Glass X-Men LE	830-52D2-02
Bottom Arch Steel W/Windows - Blue	535-0415-05

Parts Identification


X-MEN LE Magento Parts available through your Distributor:

Leg Assy Glossy Red	500-5921-23
Flip Button Assy Blue (Solid)	500-5026-35
Front Molding New Style No Hole Glossy-Red	500-6882-02-226
Glossy Red Left Side Armor	535-9596-220
Glossy Red Right Side Armor	535-9596-236
Pivot Hinge LT Glossy Red	535-7999-226
Pivot Hinge RT. Glossy Red	535-7999-230
Mirrored Back Glass X-Men LE Magento	830-52D2-00M
Bottom Arch Steel W/Windows - Red	535-0415-22

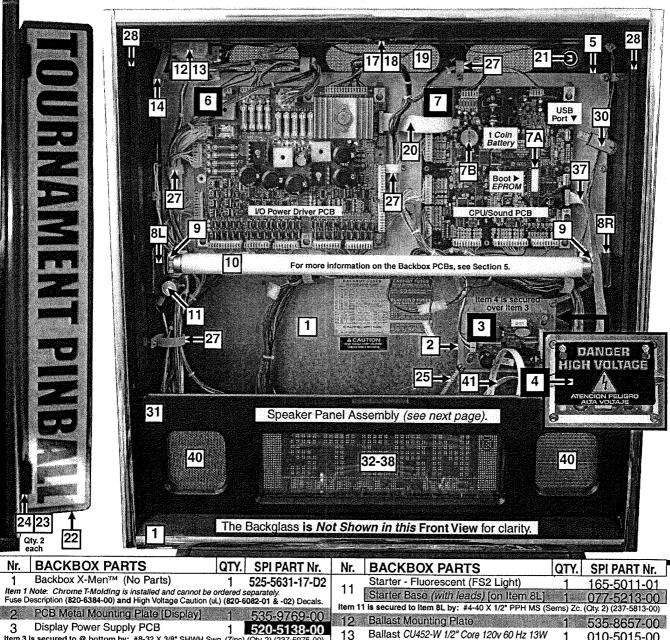


Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.	Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.
1	Backbox X-Men™ (No Parts)	1	525-5631-17-D2	44	Starter - Fluorescent (FS2 Light)	1	165-5011-01
Item 1 i	Note: Chrome T-Molding is installed and cannot be o escription (820-6384-00) and High Voltage Caution (ul	rdered :	separately.	11	Starter Base (with leads) [on Item 8L]	1	077-5213-00
2	PCB Metal Mounting Plate [Display]	-, (02.5-(535-9769-00		is secured to Item 8L by: #4-40 X 1/2" PPH MS (Se	ems) Zc.	(Qty. 2) (237-5813-00)
3	Display Power Supply PCB	1	520-5138-00	12	Ballast Mounting Plate	1	535-8657-00
Item 3 i	s secured to @ bottom by: #8-32 X 3/8" SHWH Sw	g. (Zinc)		13	Ballast CU452-W 1/2" Core 120v 60 Hz 13W 2 & 13 are secured to item 1 by: #8 X 1/2" SHWH A	1 (7:00)	010-5015-00
4	Plastic Cover [DANGER HIGH VOLTAGE]	1	830-6053-00	>>> CA	UTION - VERY HOT" Decal (820-6266-00)	AB (ZINC)	(City. 2) (234-5101-00)
Items 3 (254-50	& 4 are secured to @ top by: 1-1/4" X 3/8" Plastic \$ 00-05) and #8-32 X 1-3/4" SHWH Ser. (Zinc) (Qty.2)	Spacer (237-59	Gray (Qty. 2) 75-28)	NAMES OF TAXABLE PARTY.	Conly: Ballast, 5/8" Core 50/60 Hz (010-5015-01)		
5	PCB Metal Mounting Plate [I/O+CPU]	1	535-9664-00	14	Ground Strap (5")]	600-5006-05
Items 2	& 5 are secured to Item 1 by: #8 X 1/2" SHWH AB	(Zinc) (0	Otv. 1/hole)	15* 16	Roto Lock Male (on Cabinet) Roto Lock Female (R2-0002-02)	1	355-5006-01
(234-51) Note: \	01-00) and #10 Washer 7/32 [*] I.D. X .5" O.D. X 1/16" T Where a Wire Clamp (Item 27) is mounted, a #10 Wasi	hick (Qt h <i>er is no</i>	y. 1/hole) (242-5003-00) ot required		is secured by: #10-24 X 1-3/4" CBSN (231-5022-00) #10-2	355-5006-02
6	I/O Power Driver LED	1	520-5317-00	(240-52	07-00), #10-24 X 2* CBSN (231-5045-00) and sher 7/32* I.D. X .5* O.D. X 1/16* (City, 5) (242-5003-00		
7	CPU/Sound PCB LE GAMES NEW	4		17	Lock Mounting Plate	n, see c 4	Control of the Contro
,	USB 7A: 8MB EPROM #M27C801-100F1 (9	CO FOR	520-5307-00	18	Lock 5/8" Barrel, 3/4"ø, 1.5" Flat Cam	4	535-0072-00 355-5055-00
	Ordering Note: Programmed EPROM (965-BOOT-	SAM)	11110	CONTRACTOR AND ADDRESS OF	7 & 18 are secured by: #8 X 1/2" TP Torx T20 Black	(Qty. 2) (
	7B: Coin Cell Battery (CR2430 3V) (00 For USB Memory Stick Information, see Item 30 on	0-0644- the next	01)	19	Back Vent Grill 2-1/2" X 18"	3	545-5072-02
Items 6	& 7 are secured to Item 5 by: #8-32 X 3/8" SHWH 5	Swage (Zinc) (Otv. 10)	20	Ribbon Cable, 20-Pin (3.5")		036-5000-350
0.000	75-00) and 1/4" Sif. Rtn. Spacer White (Qty. 5 [VO] / C)ty. 4 [C	The state of the s		connects the I/O Pwr. Drvr. PCB to the CPU/Sound I	PCB; Fol	14-Pin see next page.
8L	Fluorescent Light Bracket (Left Style)		535-7739-00	21	Button Hole Plug (Blk) (Happ #52-6214-00)	. 1	500-6566-00
	Fluorescent Light Brckt. (Right Style) & 8R are secured to Item 1 by: #10-24 X 1-1/4* Ci]	535-7739-01	22 22	plugs the Access Hole required if using optional BET	Abrite S	CANADA CA
(Qty. 2/p	er) (231-5012-00), #10-24 Keps Nut (Qtv. 2/per) (240-	5207-00)) and	****************	Bracket Tournament Sign (Right)	1	545-6133-00
440044400440000000000000000000000000000	*Reinforced Strapping Tape (Qty. 1, sold in 12* length	only) (6		23	Bracket, Tournament Sign (Black)	- 2	535-0081-02
9 Item 9 is	Fluorescent Lamp Holder (Socket) secured to Items 8L and 8R by: #6-32 X 5/8" PPH	2	077-5214-01	item 22	is mountied to item 23 with #8-32 x 3/8 PPA screw	(Oty 2/r	ner) /232-5303-01) 8
(232-520	03-00) Lock-in Fluor. Bulb with Yellow Socket Clip	1713 (Oty. 1/p	per) (545-6271-00)	#8-32 N	ylock Nut (Oty 2/per) (240-5102-00). Item 23 is secu	ired to I	tem 1 by: #8 X 5/8*
10	Fluorescent Tube 24" (F18T8CW)	1	165-5061-00	rrn (C	lty. 2/per) (232-5101-01) PARTS TABLE & VIEWS CONTINU	IED ON	THE NEVT PACE
					TAITO TABLE & VIEWS CONTING	JED ON	THE NEXT PAGE.

Backbox [S.A.M. System] - Parts [

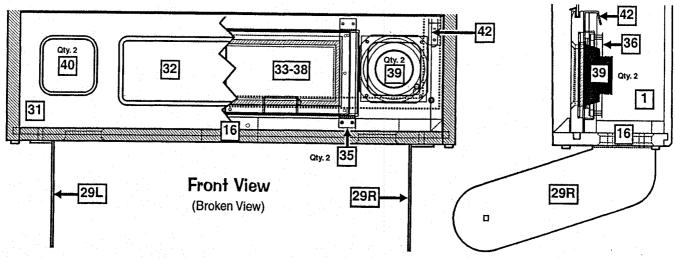

Speaker Panel [S.A.M. System] - Parts [

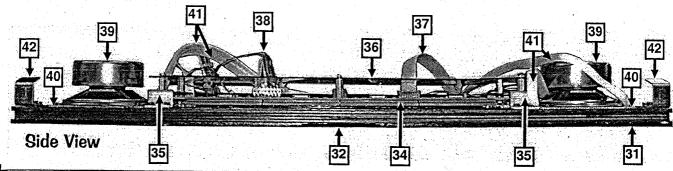

(231-5003-00) and 1/4"-20 Flange Nut (City. 4) (240-5300-00) Items 29L-29R are secured to Zeo Ended to Item 34 by: 1/2" X 1/4" Hex Spacer #6-32 Tap (City. 4) (240-5308-00), 1/4-20 X 1/2" TD (Black) (City. 1/per) (254-5042-00), Nylon Spacer (Black) (City. 1/per) (242-5084-00), 1/4-20 X 1/2" Carriage Bolt Square Neck (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/16" (Black) (City. 1/per) (City. 1/per) (<u>"</u>	34	[35]	<u> </u>
25 Braided Wire (1-1/2 Feet) 1 600-5001-00 16 Mem 25 is secured by: Staple 5/16* (City 23) (631-500-00) 26 Zip Cable Tie (Screw Down Style) 4 0/40-5005-00 17 Item 26 is secured @inside bot.by: #8 X 1/2* SHWH AB (Zinc) (City 1/per) (234-5101-00) 27 Clamps [Multiple Sizes] 27 0/40-5000-XX 18 Item 27 secured @inside bot.by: #8 X 1/2* SHWH AB (Zinc) (City 1/per) (234-5101-00) 28 Foam 3/16* Thick X 1/4* Wide X 12* 6 626-5026-00 29 Above Item 28 is self-adhesive: Located between Items 32-34. Sold in 12* Lengths only. 29 Pivot Hinge Red & Blue (Left Style) 1 535-7999-XX 18 Items 291-298 are secured to Backbox by: 1/4*-20 X 1-1/4* C.B. Sq. Neck (City.4) (231-500-00) and 1/4*-20 Flange Nut (City.4) (240-5008-00), Nylon Spacer (Black) (City. 1/per) (234-5000-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (City. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (City. 1/per) (242-5087-00) 31 Speaker Panel (Black Wood) 1 525-5515-00 32 Plastic Shield (Display Front Cover) 1 545-5884-00 33 * Foam 3/16* Thick X 1/4* Wide X 12* 6 626-5026-00 33 * Foam 3/16* Thick X 1/4* Wide X 12* 6 626-5026-00 33 * Foam 3/16* Thick X 1/4* Wide X 12* 6 626-5026-00 34 * June 20 J		TY. SPI PART Nr.	Nr.	SPEAKER PANE	L PARTS	OTY. SPI PART Nr.
25 Brailed Wire (1-1/2 Feet) 1 600-5001-00 Rem 25 is secured by: Staple 5/16' (Oty. 23) (631-5000-00) 26 Zip Cable Tile (Screw Down Style) 4 0.40-5005-00 Rem 26 is secured 6 inside bot by: #8 X 1/2" SHWH AB (Zinc) (Oty. 1/per) (234-5101-00) 27 Clamps [Multiple Sizes] 27 0.40-5000-XX Rem 27 secured by: #8 X 1/2" SHWH AB (Zinc) (Oty. 1/per) (234-5101-00) For the following sizes, replace -XX with: 11/4" Double = -30 (Oty. 1) 28 Foam 3/16" Thick X 1/4" Wide X 12" 6 626-5026-00 29 L Pivot Hinge Red & Blue (Right Style) 1 535-7999-XX Rems 291-29R are secured to Backbox by: 1/4"-20 X 1-1/4" C.B. Sq. Neck (City. 4) (231-5003-00) and 1/4"-20 Flange Nut (City. 4) (240-5300-00) Rems 291-29R are secured to Cablinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (City. 1/per) (234-5000-00) Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" LD. X 1/16" (Bla		OUS PAGE.	31			
Them 25 is secured by: Staple 5/16* (Oty. 23) (631-5000-00) 26* Zip Cable Tie (Screw Down Style)		1 600-5001-00	INTO COLUMN TO C			
20° 210 Calone 11et (SCTeW DOWT Style) 2 040-5005-00 litem 26 is secured & inside bot by: #8 X 1/2" SHWH AB (Zinc) (Cty. 1/per) (234-5101-00) 27 Clamps [Multiple Sizes] 27 040-5000-XX litem 27 secured by: #8 X 1/2" SHWH AB (Zinc) (City. 1/per) (234-5101-00). For the following sizes, replace -XX with: .1/4" Double = -23 (City. 5); 12" Single = -06 (City. 3); 3/4" Single = -08 (City. 4); 1" Single = -09 (City. 1); 1-1/4" Double = -30 (City. 1) [21-50552-15] [28 X 32 Led Dot Matrix Display PCB 1 520-5052-15] [28 X 32 Led Dot Matrix Display PCB 1 520-5052-15] [28 X 32 Led Dot Matrix Display PCB 1 520-5052-15] [28 X 32 Led Dot Matrix Display PCB 1 520-5052-15] [29 Led Dot Matrix Display PCB 1 520-5052-15] [29 Led Dot Matrix Display PCB 1 520-5052-15] [20 Led Dot Matrix Display PCB 1 520-5052-15] [2		***************************************				1 343-3004-00 8 (Zinci (Oly 8) (234-5000-00)
27 Clamps [Multiple Sizes] 27 O40-5000-XX ltem 27 secured by: #8 X 1/2" SHWH AB (Zinc) (City, 1/per) (234-5101-00). For the following sizes, replace XX with: .1/4" Double = -23 (City, 5); 1/2" Single = -06 (City, 3); 3/4" Single = -08 (City, 4); 1" Single = -09 (City, 1); 1-1/4" Double = -30 (City, 1); 1-1/4"		4 040-5005-00				
27 Clamps [Multiple Sizes] 27 040-5000-XX them 27 secured by: #8 X 1/2" SHWH AB (Zinc) (Oty, 1/per) (234-5101-00). For the following sizes, replace -XX with: .1/4" Double = -23 (Cty, 5); 1/2" Single = -06 (Cty, 3); 3/4" Single = -08 (Cty, 4); 1" Single = -09 (Cty, 1); 1-1/4" Double = -30 (Cty, 1) 28 Foam 3/16" Thick X 1/4" Wide X 12" 6 626-5026-00 Above Item 28 is self-adhesive. 17.5" strip on each side. Sold in 12" Lengths only. 29 L Pivot Hinge Red & Blue (Left Style) 1 535-7999-XX 1535-7999-XX 153		nc) (Qty. 1/per) (234-5101-00)				
### 250-5052-15 ### 250-5052-1		27 040-5000-XX		SCHOOLS AND A CONTRACT OF THE PROPERTY OF THE	Color (Attribution to reference Colores de Colores Col	
3/4" Single = -08 (Gty. 4); 1" Single = -09 (Cty. 1); 1-1/4" Double = -30 (Cty. 1) 28 Foarti 3/16" Thick X 1/4" Wide X 12" 6 626-5026-00 Above Item 28 is self-adhesive. 17.5" strip on each side. Sold in 12" Lengths only. 29 L Pivot Hinge Red & Blue (Left Style) 1 535-7999-XX 29 R Pivot Hinge Red & Blue (Right Style) 1 535-7999-XX Items 291-298 are secured to Backbox by: 1/4"-20 X 1-1/4" C.B. Sq. Neck (Cty. 4) (231-5003-00) and 1/4"-20 Piange Nut (Cty. 4) (240-5300-00) Items 291-298 are secured to Cabinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1/2" Lengths only. Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (Cty. 1/per) (242-5087-00) Memory Stick USB 1.1* [Generic] 64MB 970-0064-00	Item 27 secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/per) (2 following sizes replace XY with: 1/4" Double = 23 (On 5)	34-5101-00) For the	34			4
28 Foarti 3/16" Thick X 1/4" Wide X 12" 6 626-5026-00 Above Item 28 is self-adhesive. 17.5' strip on each side. Sold in 12" Lengths only. 29 L Pivot Hinge Red & Blue. (Left Style) 1 535-7999-XX Items 29L-29R are secured to Backbox by: 1/4"-20 X 1-1/4" C.B. Sq. Neck (Cty. 4) (231-5003-00) and 1/4"-20 Flange Nut (Cty. 4) (240-5300-00) Items 29L-29R are secured to Backbox by: 1/4"-20 X 1-1/4" C.B. Sq. Neck (Cty. 4) Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (Cty. 1/per) (234-5003-00), Nylon Spacer (Black) (Cty. 1/per) (234-5003-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1/2" LD. X 1/16" (Black) (Cty. 1/per) (234-5007-00) Washer 1" O.D. X 1/2" LD. X 1/16" (Black) (Cty. 1/per) (234-5008-00), 1/4-20 X 1/2" LD. X 1/16" (Black) (Cty	3/4" Single = -08 (Qty. 4); 1" Single = -09 (Qty. 1); 1-1/4" Double	1/2 Single = -06 (City. 3); 0 = -30 (City. 1)	, , , , , , , , , , , , , , , , , , ,	the state of the s		
Above Item 28 is self-adhesive. 17.5' strip on each side. Sold in 12' Lengths only. 29 L Pivot Hinge Red & Blue. (Left Style) 1 535-7999-XX 29 R Pivot Hinge Red & Blue. (Right Style) 1 535-7999-XX Items 291-29R are secured to Backbox by: 1/4'-20 X 1-1/4' C.B. Sq. Neck (Cty. 4) Items 291-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1-1/4' C.B. Sq. Neck (Cty. 4) Items 291-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1-1/4'-20 X 1-1/4'-10 X 1-1/2" TD (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1-1/4'-10 X 1-1/2" TD (Black) (Cty. 1/per) (234-5020-00) and Washer 1" O.D. X 1/2" Large Bolt Square Neck (Black) (Cty. 1/per) (234-5084-00), Washer 1" O.D. X 1/2" L.D. X 1/16" (Black) (Cty. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1* [Generic] 64MB 970-0064-00	28 Foam 3/16" Thick X 1/4" Wide X 12"	6 626-5026-00	Item 34			040-0281-00
29L Pivot Hinge Red & Blue (Left Style) 1 535-7999-XX 29R Pivot Hinge Red & Blue (Right Style) 1 535-7999-XX Items 29L-29R are secured to Backbox by: 1/4*-20 X1-1/4* C.B. Sq. Neck (Cty. 4) Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2* O.D 1/4-20 X 1/2* TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1-1/4* C.B. Sq. Neck (Cty. 4) Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2* O.D 1/4-20 X 1/2* TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1/2* Carriage Both Square Neck (Black) (Cty. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (Cty. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1* [Generic] 64MB 970-0064-00			(254-50	00-18) and #6-32 X 1/2* SHWH	Swage (Serr) Zinc (Ot	4) (237-5976-03)
29R Pivot Hinge Red & Blue (Right Style) 1 535-7999-XX Items 29L-29R are secured to Backbox by: 1/4'-20 X 1-1/4' C.B. Sq. Neck (Cty. 4) (231-5003-00) and 1/4'-20 Flange Nut (Cty. 4) (240-5300-00) Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D 1/4-20 X 1/2" TD (Black) (Cty. 1/per) (254-5042-00), Nylon Spacer (Black) (Cty. 1/per) (242-5084-00), 1/4-20 X 1-1/4" Hex Spacer 46: 32 Tap (Cty. 4) (254-5060-04), 1/4-20 X 1/2" Carriage Both Square Neck (Black) (Cty. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (Cty. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00						2 535-8368-01
tlems 29L-29R are secured to Backbox by: 1/4*-20 X 1-1/4* C.B. Sq. Neck (City. 4) (231-5003-00) and 1/4*-20 Flange Nut (City. 4) (240-5300-00) [tlems 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2* O.D 1/4-20 X 1/2* TD (Black) (City. 1/per) (254-5084-00), 1/4-20 X 1/2* Carriage Bolt Square Neck (Black) (City. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (City. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (City. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (City. 1/per) (231-5072-00) and Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00	29R Pivot Hinge Red & Blue (Right Style)		Item 35	is secured to Item 31 by: #8 X	(1/2" SHWH AB (Zinc)	(Qty. 4/per) (234-5101-00)
Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2* O.D 1/4-20 X 1/2* TD (Black) (Oty. 1/per) (254-5042-00), Nylon Spacer (Black) (Oty. 1/per) (242-5084-00), 1/4-20 X 1/2* Carriage Bolt Square Neck (Black) (Oty. 1/per) (231-5072-00) and Washer 1* O.D. X 1/2* I.D. X 1/16* (Black) (Oty. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00 970-0064	Items 29L-29R are secured to Backbox by: 1/4"-20 X 1-1/4" (C.B. Sq. Neck (Cty. 4)	ACCESS OF THE PROPERTY.			1 830-6040-00
(Black) (City. 1/per) (254-5042-00), Nylon Spacer (Black) (City. 1/per) (242-5084-00), 1/4-20 X 1/2" Carriage Bolt Square Neck (Black) (City. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (City. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00 MS (Serris) Zinc (City. 2) (232-5200-00) and #6-32 X 3/8" PPH (City. 6) (232-5201-00) Ribbon Cable, 14-Pin (33") 1 036-5260-33 [# EURO ONLY ROHS // LED Ribbon Cable Filter PCB 520-5259-00]	(231-5003-00) and 1/4"-20 Flange Nut (Qty. 4) (240-5300-00) Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/	/2" O.D. • 1/4-20 Y 1/2" TD	Item 36	is secured to item 34 by: 1/2	X 1/4" Hex Spacer #6	32 Tap (Oty.4)
Washer 1 O.D. X 17/6" (Black) (City. 1/per side, only if required) (242-5087-00) Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00 970-0064-00	(Black) (Qty. 1/per) (254-5042-00), Nylon Spacer (Black) (Qty. 1/	ner) (242-5084-00)	MS (Se	ris) Zinc (Ory. 2) (232-5200-00)	and #6-32 X 3/8" PPH	Ony 6) (232-5201-00)
Memory Stick USB 1.1+ [Generic] 64MB 970-0064-00 [// EURO ONLY RoHS // LED Ribbon Cable Filter PCB 520-5259-00	Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (Qty. 1/per) (23	31-5072-00) and frequired (242-5087-00)	07	Ribbon Cable, 14-Pin (33")	1 036-5260-33
THE PARTY OF THE P	Memory Stick LISB 1.1+ (Generic) 64MB	MINISTER CONTRACTOR CO	3/ [// EURO ONLY ROHS // LED	Ribbon Cable Filter	
Memory Stick USB 1.1+ [Generic] 128MB 970-0128-00 Rem 37 (14-Pin) connects the 128 X 32 Dot Matrix Display PCB to the CPU/Sound PCB.	30* Memory Stick USB 1.1+ [Generic] 128MB		Item 37	(14-Pin) connects the 128 X 3	2 Dot Matrix Display Po	CB to the CPU/Sound PCB.

Memory Stick USB 1.1+ [Generic] 128MB	970-0128-00
Rem 30 was not included with your game. Flead the inside cover or	aa on-line for more into
IC OFGER WITH The latest game code copied onto it, add -4.3 to the Part	Ne roza assa na sev
File(s) can be downloaded from our website (Files are 25MB or large	r, DSL or Fast Modern
recommended. Not all manufacturers of Memory Sticks are compar-	ible with our system
Test it out, if it doesn't work properly, return your purchase and order	the memory stick
through you local pinball distributor (Stern Pinball Memory Sticks qua	Iranteed compatible).

(ASM. REF. 505-6002-A3-A3, Items 1-42 Only, [29-30 not included in assembly])

Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.

		,		•			
Nr.		QTY.	SPI PART Nr.	Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.
j* ji*	Glass (Tempered) 25.906" X 19 187" X .125"	. 1.	660-5038-02	CONTRACTOR CONTRACTOR	Bottom Plastic Lift Channel - 26"	1	545-6313-01
* *	X-Men ™ Film Art (#D2) Top Plastic Channel - 26"				Plastic Edging (Left/Right) - 18-1/8"	2	545-5018-14
ult.	top (taste channel * 20		545-5018-15	Note:	 v are secured to Item I by: 3M Tape (Double-Sideo 2nly 6" required, sold in 12" lengths only.), 12" (Oh	/ 1) (626-5080-00)

39

40

(ASM. REF. 515-5450-00-A9 , Items i-v)

036-5454-01

036-5520-00

031-5004-02

535-8081-04

600-5006-25 535-7009-02

// EURO ONLY RoHS // LED Display Adapter Harness

Speaker (Shid.) 4 x 4" 8Ω OHM MG ELE 4060SH

Ground Strap (25") [2 per: Items 35 & 39] Speaker Panel Hook Bracket



Tournament Button (Yel. Sq.), w/Sw. + Lamp 4 OUT-anient Dutton (18). 34.), W/SW. + Latty

tem 38 & 41 includes the Switch & Lamp (No Wiring; desolder old wiring where required). Switch or Bulb replacement: O TWISTO LOCK (-TL) > not snap-in <
Assembly Parts Included: Microswitch (180-5174-00); #555 Wedge Base Clear Bulb (165-5002-00); If 4T is not desired, use optional Button Plug Black (500-6566-00). Requires 3-Lug Terminal Strip (055-5204-03) and Diodes, 1N4004 (Oty. 2) (112-5003-00) inside cabinet under button(s) for Lamp Operation (Diode for Switch, located on Switch.) 500-6587-06-TL

5 Flipper Button (Blue Yellow) Assy (No Sw.) 2 500-5026-XX ttem 5 is secured by: Pal Nut for Flipper Button (Metal) (City, 2/per) (240-5003-01)
Pal Nut inside cabinet secured by: #8 X 1/2* SHWH AB (Zinc) (City, 1/per) (234-5101-00)
and Washer (Zinc), 187* ID X 875* OD X .048* Thick (City, 1/per) (242-5059-00)

6S Flipper Switch Single Assembly 500-6889-01 Assembly Parts Included: Flipper Switch Stack Single (Paliney Contact) (180-5160-01) and Capacitor - Ceramic .05 Mfd 25 volt (130-5001-00) Item 6S/6D are secured to Cab. by: #6 X 1-1/4 SHWH AB (Zinc) (Oty. 2/per) (237-5959-00)

6D Flipper Switch Double Assembly 500-6890-01


Side Armor (Left) Red & Blue 535-7297-XX 9R Side Armor (Right) Red & Blue 535-7297-XX 511 Olds ATTHOR (Highly Free & Blade 5): Pem Stud 1/4 X 1* Flange Head Black (By 1-per) (27-6116-01), 1/4-20 Flange Nut (Chy. 1/per) (240-5300-00) and #8 X 1/2* [amper Proof Black (Chy. 5/per) (237-6173-05); @ rear (backbox) by; #10-22 X 1* Sq. Carrg Bolt Black (Chy. 1/per) (231-5021-00) and #10-24 Hex Nut (Chy. 1/per) (240-5202)


Front Molding (Red & Blue) < NO BUTTON 515-7495-XX


HOLE > Item 10 includes: Self-Adhesive Foam Rubber 3/8" X 3/16" X 20-3/8" (3') (626-5001-00) Items 10 works with Item 22 (next page) ONLY

11 Playfield Glass (Tempered) 21" X 43" X 3/16" 660-5001-00 Hex Key Allen Wrench 5/16" 777-0001-00 605-5008-03 Corrugated Tubing Black 1*s x 2.6' Lg. 13 Above Item 13 covers the Cable Wining Harnesses going into the Backbox from the Cab 14 Roto Lock Male (R2-0055-02)

355-5006-01 Item 14 is secured by: #10-24 X 1-3/4" Carriage Bolt Square Neck (Qty. 2) (231-5022-00), #10-24 Nylon Stop Nut (Qty. 2) (240-5206-00) and #10 Washer. 7/32" ID X 1/2" OD X 1/16" Thick (Qty. 2) (242-5003-00)

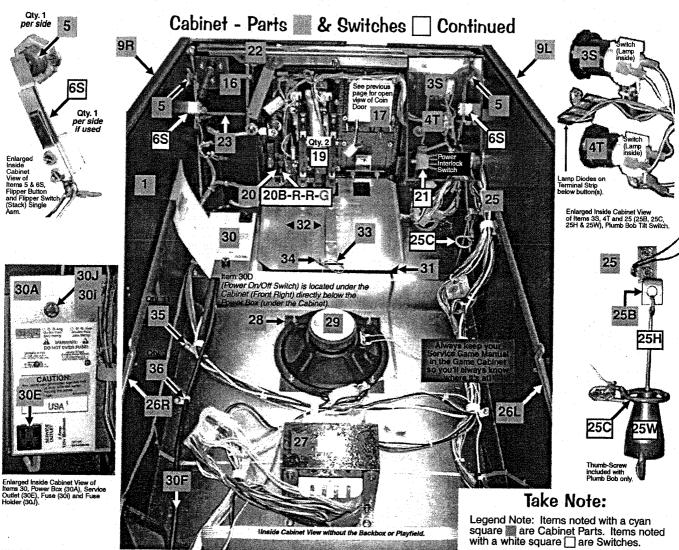

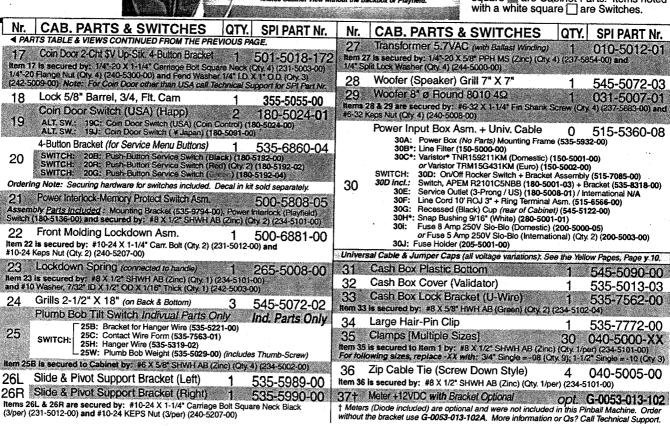


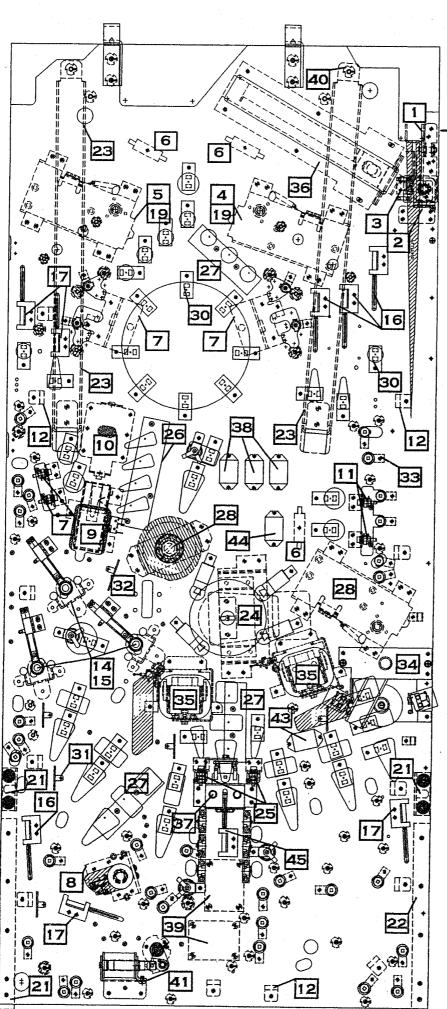


13()TT()M

MAIN PLAYFIELD PARTS (BOTTOM)

•	PART NAME	PART NUMBER
1.)	AUTOPLUNGER ARM WELD ASSY	500-6091-00
2.)	AUTOPLUNGER ARM WELD ASSY	500-6092-02-ND
3.)	SHOOTER LANE SWITCH ASSY	500-6096-00
4.)	FLIPPER ASSY (LEFT)	500-6543-12-ND
5.)	FLIPPER ASSY (RIGHT)	500-6543-02-ND
6.)	FUSE CLIP HOLDER SOCKET	205-5000-01
7 .)	SLINGSHOT ASSY	500-5849-01-ND
8.)	VERTICLE UP KICKER ASSY	500-7078-01
9.)	POWER SCOOP ASSY	500-5809-01
10.)	KICK BIG ASSY (POWER SCOOP)	500-6398-01
11.)	STAND UP TARGET 1 1/2	500-5321-08
12.)	TIE POST	545-5253-01
13.)	MAGNETIC DISC ASSY	500-7234-01
14.)	POP BUMPER BOTTOM ASSY	515-6459-04-ND
15.)	POP BUMPER SWITCH ASSY	515-6459-09
16.)	ROLLOVER SWITCH ASSY (LEFT)	500-6227-03
17.)	ROLLOVER SWITCH ASSY (RIGHT)	500-6227-04
18.)	STANDUP TARGET ASSY 1" SQUARE	500-6984-08
19.)	FLIPPER BASE INSULATOR	545-5721-00
20.)	6-32 T-NUT	240-5002-00
21.)	PIVOT SLIDE BRACKET ASSY	500-5329-03
22.)	EDGE SLIDE BRACKET	535-5988-01
23.)	PLAYFIELD SUPPORT SLIDE BRACKET	535-6862-05
	MAGNETIC SPINNING DISC ASSY	500-7234-01
25.)	STANDUP TARGET ASSY 1/2"	500-6985-04
26.)	LED LAMP PCB MOTHER BOARD (AT SCOOP)	520-6779-03
27.)	LED LAMP PCB	520-6779-01
28.)	FLIPPER ASSY (UPPER)	500-6543-22-ND
29.)	MAGNET ASSY	516-0018-00
30.)	LED MAP PCB (SINGLE)	520-5307-00
31.)	TERMINAL STRIP (2 POSITION)	055-5203-00
32.)	TERMINAL STRIP (3 POSITION)	055-5204-03
33.)	SOCKET WEDGE BASE GI	077-5030-00
34.)	ICEMAN DRIVE ASSY	500-7259-00
35.)	NIGHTCRAWLER LIFT ASSY	500-7256-00
36.)	4 BALL TROUGH ASLSY	500-6318-14-ND
37.)	DOUBLE UP POST ASSY	511-6770-00
38.)	RELAY ASSY	511-7226-00
39.)	OPTO SWITCH PCB	520-5239-01
40.)	8-32 T-NUT	240-5101-00
41.)	DIVERT COIL & BRACKET ASSY	500-2456-00
42.)	CRANK ARM & PLUNGER ASSY	500-7245-00
43.)	RELAY (DC MOTOR) (ICEMAN RAMP DRIVE)	511-7234-00
44.)	RELAY (AC MOTOR) (SPINNING DISC DRIVE)	511-5249-01
45.)	ROLLOVER SWITCH ASSY (RIGHT)	500-6227-04A

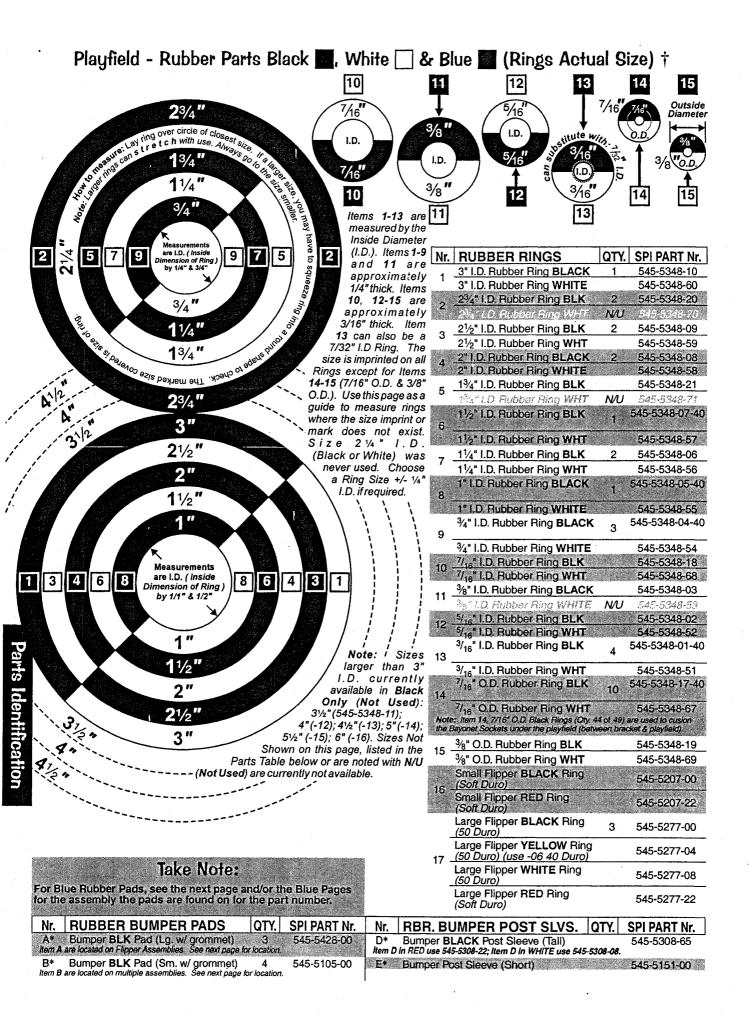

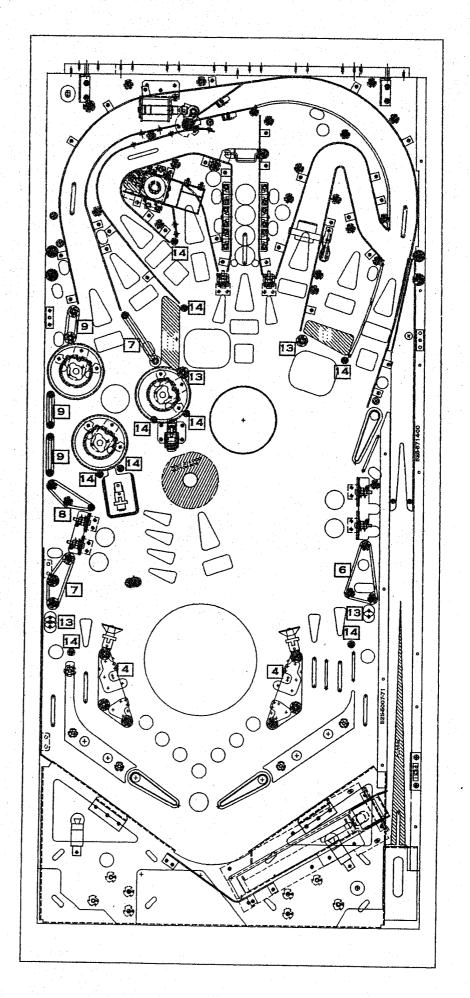

A8

8B

9

10


Mini-Post MS // #10-32 .875" Thread

Post #6-32 Tap // #6-32 Thread

Mini-Post Short MS // #10-32 .875" Thread

Post [Fasten] #6-32 Thread // Wood Screw

Post [Fasten] #6-32 Thread // #8-32 Thread

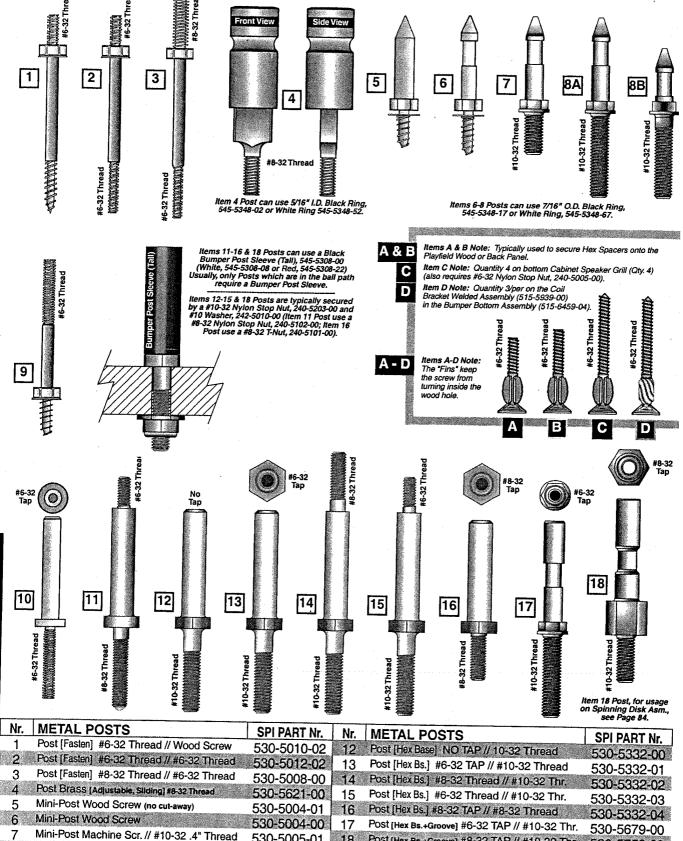

237-5957-00 NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

18

В

C

Post [Hex Bs.+Groove] #8-32 TAP // #10-32 Thr.

FIN SHANK SCREWS

#6-32 X 3/4" Fin Shank Screw

#6-32 X 7/8" Fin Shank Screw

#6-32 X 11/4" Fin Shank Screw

#6-32 X 13/16" Spiral Fin Shank Screw

530-5753-00

SPI PART Nr.

237-5921-02

237-5921-04

237-5883-00

530-5005-01

<u>530-5005-00</u>

530-5749-00

530-5263-01

530-5127-00

530-5007-00

Playfield - Nylon Stop, KEPS, Hex, T-, Flange, Pal* & Wing Nuts* (Actual Size) †

		~ · · · · · · · · · · · · · · · · · · ·	, moid	ai Oize)
Nr.	NYLON STOP NUTS*	SPI PART Nr.	^	
N1	#6-32 Nylon Stop Nut	240-5005-00		
N2	#6-32 N.S. Nut (with 1/4" Hex Body)	240-5010-00		
N3		240-5102-00		
N4	#10-32 Nylon Stop Nut	240-5203-00		A
N5	#10-24 Nylon Stop Nut	240-5206-00	للبلا	NT1
Item N	V5 used with ∦10-24 X 1-3/4* Carriage Bolt Square Neck Blac Cabinet for the Floto Lock (Male) (355-5006-01).	k (231-5022-00) located		
N6	#4-40 Nylon Stop Nut	040 5000 00		
N7	#4-40 (18/8 Stainless) Nylon Stop Nut	240-5303-00		
N8	5/16"-18 Nylon Stop Nut	240-5303-01		
		240-5316-00		
Nr.	KEPS NUTS*	SPI PART Nr.	_	~~~
K1	#6-32 Keps Nut (with Star Washer)	240-5008-00	5000	{\bigcirc}}
K2	#6-32 Keps Nut (with 1/4" Hex Body)	240-5011-00	100	
K3		240-5104-00		
K4	#10-32 Keps Nut	240-5208-00	(T)	A -
K5	#10-24 Keps Nut	240-5207-00	and the second	К 1
K6	#4-40 Keps Nut	240-5318-00		
Nr.	HEX NUTS*	SPI PART Nr.		
H1	#6-32 Hex Nut (No Star Washer)	240-5004-00	$\langle O \rangle$	$\{O\}$
SCIONOS MANAGONIO	#8-32 Hex Nut	240-5103-00		
Н3	#10-32 Hex Nut	240-5201-00		
H4	#10-24 Hex Nut	240-5202-00		
the Cab	l used with #10-24 X 1" Carriage Bolt Square Neck Black (23 inet for the Side Armor Rear (towards Backbox).	1-5021-00) located in		H 1
H5	#10-32 X 3/8" Hex Nut	240-5209-00		
H6	3/ ₄ -16 Hex Nut	240-5315-00		
H7_	#2-56 Hex Nut	240-5301-00		
H8	7/8"-14 Hex Nut	240-5317-00		
	T-NUTS*	SPI PART Nr.	(R)	
T1	#6-32 T-Nut	240-5002-00	FOB.	$(\bigcirc 2$
	#6-32 T-Nut (with Side Cut Off)	240-5002-01	(\delta \delta \)	400
	#8-32 T-Nut	240-5101-00	_	
	#10-32 (Black Oxide) T-Nut	240-5007-00		- 1 1 1 1 1
	#10-32 T-Nut (with Side Cut Off)	240-5205-00		• •
900000000000000000000000000000000000000	#10-32 X 5/16" 3-Prong T-Nut	240-5204-00	•	
T7	#10-24 T-Nut	240-5200-00	•	
Nr.	ELANCE MUT*		_	_
	FLANGE NUT* 1/4" X 20 Flange Nut	SPI PART Nr.		
Item F1 us	sed with 1/4-20 X 1-1/4 Sq. Neck Carriage Bott Black (231,50	240-5300-00	(V_{A})	
Cabinet fo	or the Side Armor (Front) and Pivot Hinges.	oo oo, loodioo iii ale		
At-	DAL NUTO:			
	PAL NUTS*	SPI PART Nr.		Fî
	Plastic Pal Nut (on Flipper Buttons)	240-5003-00		-
* Not S	Metal Pal Nut (on Flipper Buttons)	240-5003-01	•	
		<u></u>		
141. V	WING NUTS*	SPI PART Nr.		

240-5001-00

240-5100-00

240-5211-00


240-5302-00

W1 #6-32 Wing Nut


W2 #8-32 Wing Nut

W3 #10-24 Wing Nut

W4 1/4"-20 Wing Nut W5 1/4"-20 Toggle Wing * Not Shown

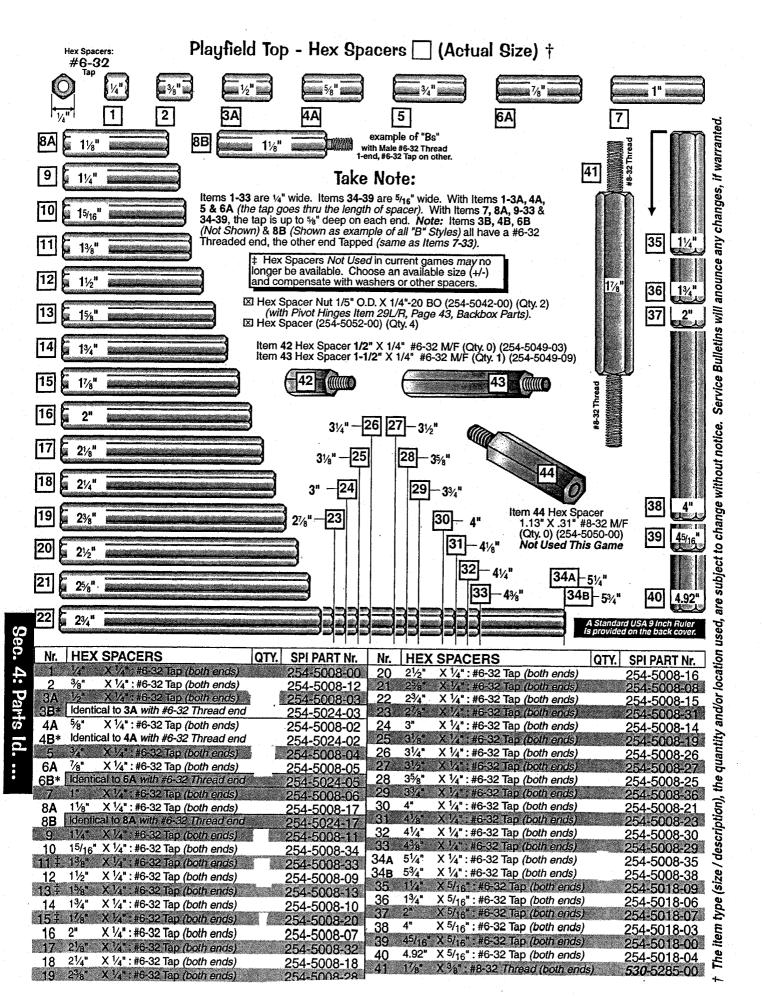



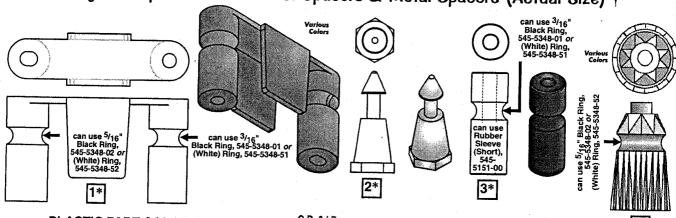


PLASTIC PART COLOR CHART

Nr.	Color	Nr.	Color	Nr.	Color
-00	Black	-06	Yellow	-12	Fluor Blue
-01	Clear	-07	Orange	-13	Teal Green
-02	Red	-08	(White)	-14	(Gray)
-03	Amber	-09	Purple	-15	Luminescent
-04	Green	-10	Fluor. Org.	-16	Gold
-05	Blue	-11	Fluor, Green	- A Alexander	

* Items 1 & 5 come in various colors. The "-XX" (the last 2-Digits in the Part Number), should be replaced with the desired 2-Digit number from the above Color Chart (may not be available in every color; other colors used in prior games may no longer be available.) Call for availability.

O.D. & I.D.	- 11:			•	AR_	4*
	Height Shown X X .153" I.D.	(9/ ₃₂ " O.D	40	扫民	1" # 5 - dimer	
	an Ap	和品		3/411	sion is	; →
组	近点	1/2"	5/8"		from to	
	3/8"					1/2"
5‡ 6	7‡	8‡	9‡	10‡	11‡	
Items 5 thro	ough 11 dime or the cut-awa	nsions a	re meas	ured from	m bottom	10
from top-to-	top of curve.	See pic	torials w	ision is i ith Items	neasured 3 11 & 33 .	12: ½ [12]

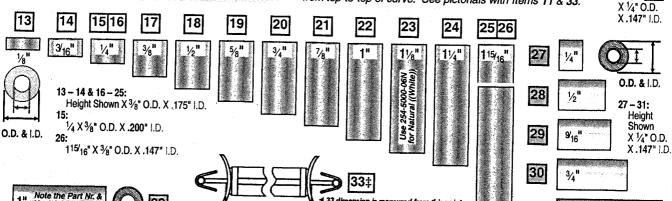

1" Note the Part Nr. & Material Difference



Top Lane Plastic Mini-Lite Hood (XX-Color)

Nr. | PLASTIC POSTS & SPACERS

Mini-Jewel Plastic Post (XX-Color)


Item 3 Only: Use Part Number (550-5059-00) for color Black

3/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)

1-Groove Jewel Plastic Post (XX-Color)

Items 3 & 4 typically sec'd by: Post Fastening Scr. #6-32 Top / #6-32 Bot. (530-5012-02). Use Color Chart above for last 2-digits. Not all colors are available.

3** 11/16" 1-Groove Plastic Post (XX-Color

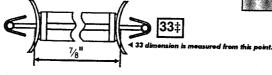

SPI PART Nr.

550-5061-XX

550-5034-XX

11/8" 11%" Nr. PLASTIC POSTS & SPACERS SPI PART Nr. 21 7/6" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-11 550-5052-XX 550-5059-XX X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-04 22 23 11/8" X 3/8" O.D. X 175" I.D. Pls. Spcr. (Gray) 254-5000-06 item 23 Only: Add the letter " N " for color Natural (if available) or " B " for color Blace 11/4" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray) 254-5000-05 25 11/2"X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray) 254-5000-08

Total Colors are available.	204-5000-08
Items 1-4 Note: Use Color Chart above for last 2-digits. Not all colors are available.	26 115/16" X 3/8" O.D. X .147" I.D. Plastic Spacer (Grav) 254-5000-15
5 ‡ 1/4" Self Retain. Plastic Spacer (White) 254-5007-02	Items 13-26 Only: Spacers may also be Black in color (random from vendor)
6 + 916" Self Retain. Plastic Spacer (White) 254-5007-05	NOT Shown and listed for reference only: 254-5000-10- 214" Y 34" O D Y 175" LD
/ + %" Self Retain. Plastic Spacer (White) 254-5007-01	DD 1.4 AGE
8 ‡ ½" Self Retain. Plastic Spacer (White) 254-5007-04	254-50 14-03
9 ‡ 5%* Self Retain. Plastic Spacer (White) 254-5007-00	28 . ½" X 5/16" O.D. X .144" I.D. Metal Spacer 254-5014-00
10 ‡ ¾" Self Retain. Plastic Spacer (White) 254-5007-02	ED IN IN TO SECTION TO SECTION OF THE PROPERTY
11 ‡ 1" Self Retain, Plastic Spacer (White) 254-5007-06	30 3/4" X 5/16" O.D. X .144" I.D. Metal Spacer 254-5014-01
12 ½" X ¼" O.D. X .147" I.D. Pls. Spacer (White) 254-5000-03	31 1/8"X 516" O.D. X .144" I.D. Metal Spacer 254-5014-02
13 1/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-19	32 1" X 5/16" O.D. X .144" I.D. Metal Spacer 254-5001-00
	1371 0 - maile opasci Cupport
4F 1/4 V3 (AB V	/////////////////////////////////
10 14 A 78 O.D. X .200" I.D. Pls. Spcr. (Gray) 254-5000-02	Plastic Spacer 5"


1/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-09 Plastic Mounting 254-5054-00 X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-12 Plastic Spacer, 1.13* ½" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) Plastic Mounting 254-5000-01 254-5054-01 5/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray) 254-5000-14

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE P/N REQUIRED.


254-5000-07






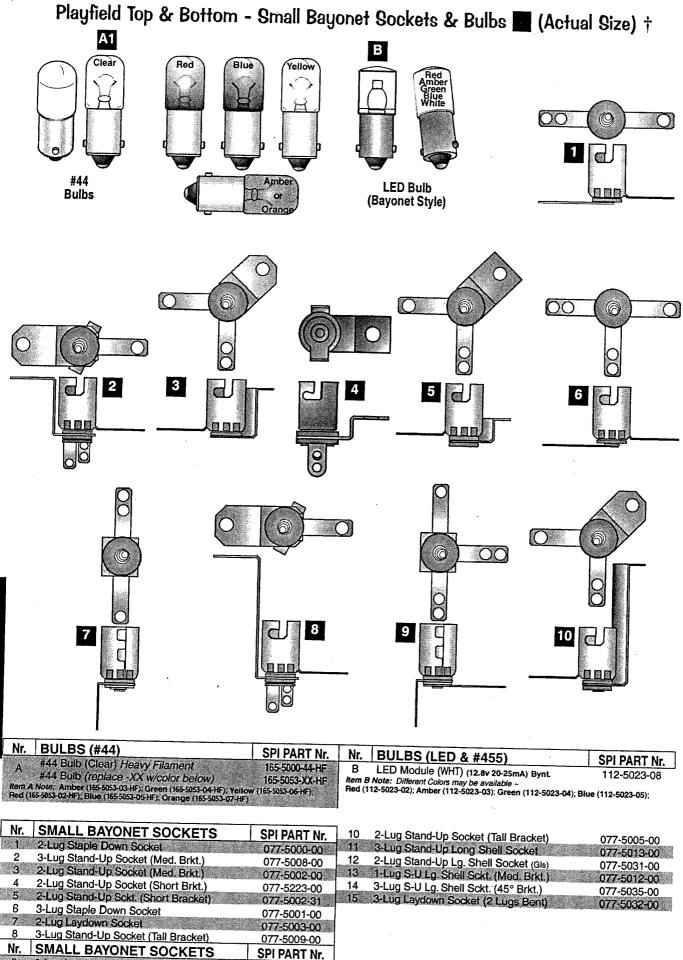


3-Lug Laydown Socket (3 Lugs Flat)

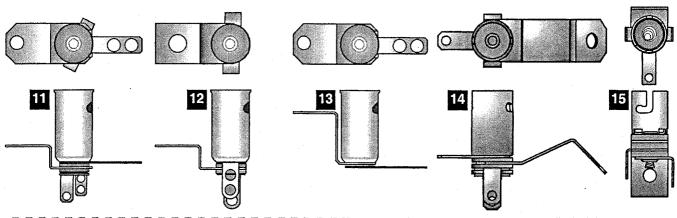

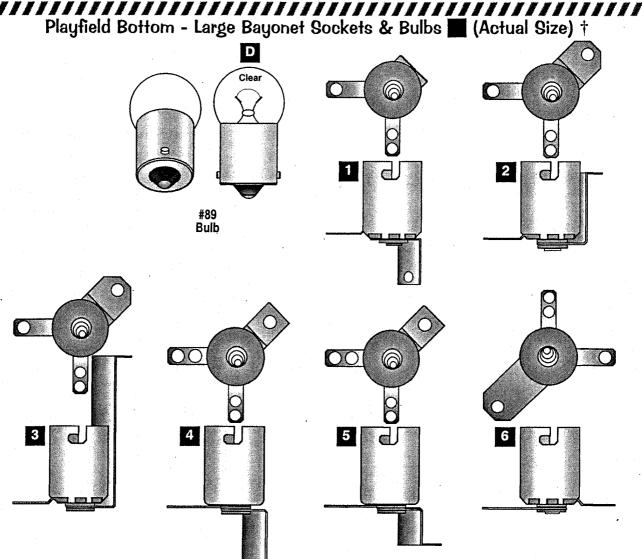


Nr.	BULBS (#89)	SPI PART Nr.	2-Lug Laydown Standard Socket	077-5100-00
D	#89 Bulb Heavy Filament	165-5000-89-HF	2 2-Lug Stand-Up Short Socket	077-5101-00
			3 2-Lug Stand-Up Long Socket	077-5102-00
			4 2-Lug Stand-Up Rev. Mount Socket	077-5103-00
		•	5 2-Lug Stand-Up Rv. Mnt. Short Socket	077-5106-00
			6 2-Lug Straight Leg Socket	077-5107-00

Nr. LARGE BAYONET SOCKETS SPI PART Nr.

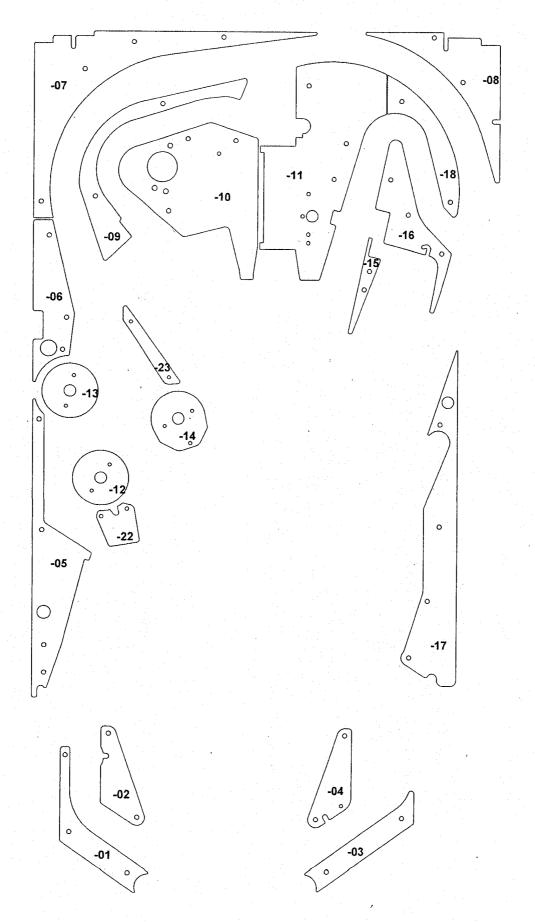

PLASTICS - LOWER LAYER

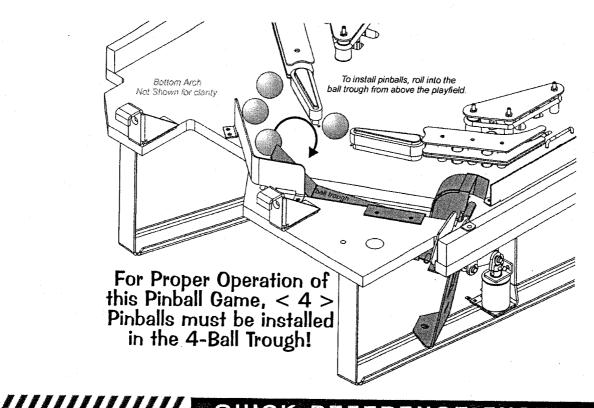

Backbox Fuses*, Cabinet Fuses, Playfield Fuses and Cabinet Switches

*Note: The CPU/Sound PCB does not have fuses.

BACKBOX FUSES

I/O POWER DRIVER BOARD with RED LED STATUS INDICATORS (if any RED LED is OFF, check the fuse) 5A S.B. | 5.7vac~G.I. Lamps (BROWN-WHITE=WHT-BRN) 5A S.B. 5.7vac-G.I. Lamps [YELLOW≒WHITE-YEL Circuit] 5A S.B. 5.7vac-G.I. Lamps [GREEN≒WHITE-GRN Circuit] 5A S.B. | 5.7vac~G.I. Lamps (VIOLET=WHITE-VIO Circuit)

F5 7A S.B. 50VDC Coils / Flippers 48VAC feed to BRDG 1 3A S.B. 24vac- Motor or Special Application 4A S.B. 50VDC Magnet(s) or Special Application F8 3A S.B. 50VDC Coils

8A S.B. 18VDC Control Lamps [13VAC feed to BRDG 4] F10 5A S.B. 20VDC Coils / Flashers [16VAC feed to BRDG 2] F11 4A S.B. 5VDC Logic Power 8VAC feed to BRDG 5 F12 5A S.B. 12VDC Audio 19VAC feed to BRDG 3 F13 5A S.B. 12VDC Audio 19VAC feed to BRDG 3

DISPLAY POWER SUPPLY BOARD

F1 | 3/4 A S.B. | 90VDC High Voltage Dot Display Board


CABINET FUSES POWER (SERVICE OUTLET) BOX


8A S.B. | 110-120V Main Line US / Caracte. 5A S.B. | 220-240V Main Line International

PLAYFIELD FUSES FLIPPER OR SPECIAL APPLICATION

3A S B. | 50VDC R. Flipper [BLU-YEL RED-YEL]
3A S B. | 50VDC L. Flipper [GRY-YEL RED-YEL]
3A S B. | 50VDC Additional Flipper Coil, if used
3A S B. | 50VDC Spcl. Application Coil, if used

820-6384-00 Rev

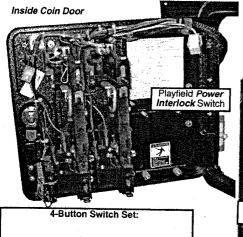

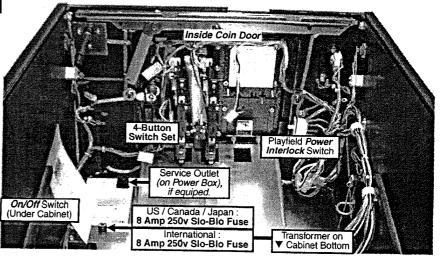


OPEN THE COIN DOOR TO ACCESS THE SERVICE SWITCH X4 SET.


Service Switch X4 Set Overview

The four buttons (inside Coin Door) have dual functions depending if you have entered the Service Menu or not.

Functions in Game or Attract Mode

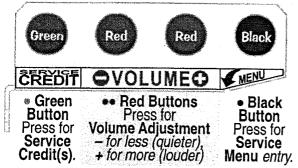




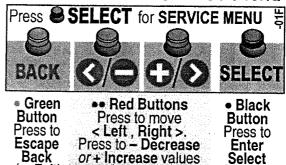

or to change settings.

(or 'OK').

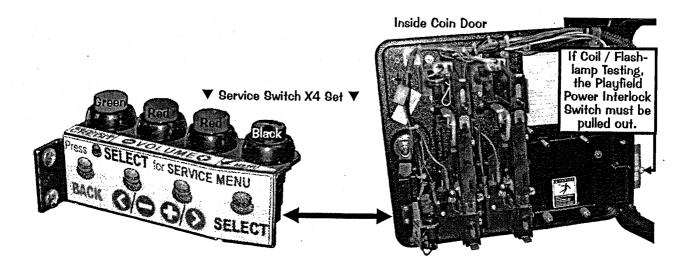

(or Exit).

EXAMPLE:

To enter the SERVICE MENU, then enter the SWITCHTEST MENU via the DIAGNOSTIC MENU, perform the below steps.

Step 1 Press [SELECT].

Step 2 With the "DIAG" Icon highlighted, press [SELECT].

Step 3 With the "SW" Icon highlighted, press [SELECT].

Step 4 With the "TEST" Icon highlighted, press [SELECT].

Press any switch. If wired correctly, the information in the display will match the information in the Switch Matrix (see DR. 4).

Press [<] or [>] to move left or right through the menus.

Press [BACK] to go back a menu, exit or escape at any time. Continue through the other menus.



The Service Menu is subject to change. Update this game with the latest code downloaded from out website with a USB Data Storage Device (64MB min., recommendation 128MB or higher). See the inside front cover for directions or in the Service Menu "Go To Utilities Menu" then "Go To USB Menu" and follow prompts.

DIAGNOSTIC AIDS

50V / 20V DISABLED CLOSE COIN DOOR OR PULL INTERLOCK SWITCH TO RESTORE POWER This audible / visual alert display is shown when the 50V / 20V Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL, SWITCH OR PLAY TESTING WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or pressing the

'escape' Green [BACK] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT! RUTO PLUNGER | DEVICE MALFUNCTION

This alert display is shown momentarily during Game Mode or Power-Up to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly).

OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can

also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in Switch Alerts and/or Technician Alerts.



Upon entering the **SERVICE MENU**, if an asterisk " * " is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the TECHNICIAN ALERTS MENU) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" Icon

and "TECH" Icon for the Technician Alerts information.

The & Page Dire Switch SOuth A FORMAT

The 8-Pos. Dip Switch [SW1] is on the CPU/Sound Board (between Conn. J3 & J13, lower left corner)

	s on the CPU/Sound Board (between C	Conn. J3 & J13, lower left corner)
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: POR 1 2 3 4 5 6 7 9
USA OFF V V V V V	Germany OFF V V V V	Russia ON A A TOTAL OFF
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	
Australia ON A A A V V V V	Greece OFF QUELTING: Pos. 1 2 3 4 5 6 7 8	So. Africa ON A A OFF V V V V V V V V V V V V V V V V V V
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8		CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8
Austria OFF V V V V V V V	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	Spain ON A A V V V V
	OFF V V V V	
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8
Belgium ON A V V V V V	Japan ON A A A V	Sweden ON A A A V V V V
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8		CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8
Canada 1 ON A A S S S S S S S S S S S S S S S S S	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8 Lithuania ON A A A A A	Switzerland ON A A V V V
	OFF V V	
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8
Canada 2 ON A A V V V	Middle East ON A A A Y Y Y	Taiwan OFF V V V V V
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8		CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8
Croatia ON AAAA OFF V V V V V	Netherlands ON A 5 6 7 8	UK ON AAA ON OFF V V V V
	OFF V V V	
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 8	CPU/SND PCB SETTING: Pos. 1 2 3 4 5 6 7 8
Denmark OFF V V V V	New Zealand ON OFF V V V V	UPDATE CODE ON OFF W W W W W
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 9		•
Finland OFF V V V V V	Norway ON A A S OFF Y Y Y Y Y	
CPU COUNTRY SETTING: Pos. 1 2 3 4 5 6 7 9		
France OFF V V V V V	Portugal ON A A B OFF	

Note: Slide Dip Switch 8 to Position **ON** (with Dip Switches 1-7 in the **OFF** Position) only to reboot the game with the latest version BOOT EPROM installed at **U9** on the CPU/Sound Board (S.A.M. System only). Currently, this is also the procedure to update your game with the latest software code update file. For the latest version, visit our website. If you have questions about updating your game code, call Technical Support for assistance.


GROUND (BLK) J13-P10	CPU/SND Board	10	= 6	CPU/SND Board				GRN-YEL	DRIVE Y		DRIVE ►	GRN-RED J1-P3	02 ORIVE ►	GRN-BRN J1-P1	DRIVE V			Sound
S.W. DELY THEY PENDULUM CABINET	(7) (2)	180-5204-00 COIN DOOR		[C	;	Wire Color	« FOR MOR	500-6227-04 BELOW P.F.	RIGHT ORBIT	BELOW P.F.				BELOW PF	TARGET (BOT)	S.W. #1	WHILBEN	IC-U22A
S.W.DEE SLAM TILT	(G-4)	DBA COIN DOOR	CENTER COIN SLOT			Wire Color Abbreviations used:	E ABOUT DIC	180-5220-00 BELOW P.F.	(L) NIGHTORAW HIT	BELOW P.F.	ICEMAN HOME	BELOW PF	TROUGH #4LEFT			S.W. #2	WHICH	C-U228
S.W. DED TICKET NOTCH IF USED	[6-6]	180-5204-00 COIN DOOR	RIGHT COIN SLOT		Dedica	ons used:	DE ON TERM	180-5220-00 BELOW P.F.	NIGHTCRAW							S.W. #3	WHI-OHO	C-uzzc
S.W. 0 52 0		180-5204-00 COIN DOOR	FORTH COIN SLOT	[Q.1] [8	1 7	BLK Black	MINAL STRIPS	180-5087-00 ABOVE P.F.	R. RAMP EXIT		WOLVERINE TARGET			-	EJECT	J6-P6 S.W. #4	S WHILL OHN	ic-uzzb
S.W. DEZI BACK (GREEN) 180-5192-04 COIN DOOR	100-01 100-01	IF USED	S.W. D.5	M()]	itches		« FOR MORE ABOUT DIODE ON TERMINAL STRIPS «D.O.T.S.», SEE SECTION 5, CHPAPTER 2, PAGES 104-105 »	500-6227-04 BELOW P.F.	CENTER LOCK 1 (BOTTOM)		S.W. 5-54					S.W. #	WHIT-BRN WHIT-REDWHIT-ORG WHIT-YEL WHIT-GRN WHIT-BLU WHIT-VIO WHIT-GRY TAN-BLK TAN-RED TAN-	VIC-U16
S.W. DEZZ MINUS (RED) 180-5192-02	100-831 100-831		S.W. D.6	IIC-UM	[#D-1	(NEJE)	EE SECTION	500-8227-04 BELOW P.F.	L INNER		CENTER LOCK 2					#5 S.V. #6	HEIGHN	IC-U16A CC-U16B
	IIG-411		S.W. D-7	IIC-US	- #D-3	AREAD	5, CHPAPTER	180-5209-00 BELOW P.F.	UP KICKER		S.W. E.K. CENTER LOCK 3				TARGET (TOP)	J6-P2 S.W. #7	HEIOHN	ic-uiec
S.W.D.52 SELECT (BLACK)	lie-ail		S.W. D-8	110-Up	#D-32] (Dedicated	GRAN GRAN	2, PAGES 10	180-5119-02 BELOW P.F.	NIGHTCRAW DOWN		S.W. E.40 CENTER LOCK 4 (TOP)		LEFT OUTLANE	-		8#: .W.S	HEI DHN	C U IS
S.W. DZ-I- DIP (1)2345678 S.W. POS.	CPU/S	500-8889-01 CABINET	S.W. D.S LEFT FLIPPER BUTTON	- IO-W		arwa nglin Nati	14-105 »	***************************************	5.X. *5/			500-6227-03 BELOW P.F.	S.W. EX-	4		J12-P9	A HE LUHNA	ic-used ic-used
S.W. D225 S.W. D223 S.W. D DIP (1)2345678 1(2)345678 12(3)45 S.W. POS. S.W. POS. S.W. P	CPU/SOUND BD. SW	180-5149-00 FLIP ASSY.	S.W. DEG LEFT FLIPPER E.O.S.	IIG-UM	Switch	addurano u deeno			▼.	515-7581-04 BELOW P.F.	S.W. #21 S.W. #25 LIGHTLOCK LIGHTLOCK TARGET (L) TARGET (R)	180-5054-00 BELOW P.F.	S.W.E.Z.			J12-P8	HE HOLL	i C-usea
S.W. D-27 12(3)45678 S.W. POS.		500-6890-01 CABINET	S.W. D.S.II RIGHT FLIPPER BUTTON	lic-iua	Location				S.W.E.S.		S.W. #43	180-5054-00 BELOW P.F.	RIGHT SLINGSHOT	180-508 ABOVE		J12-P7	RETURN	Cuse
27 S.W. D.23 DIP 878 123(4)5678 DS. S.W. POS.	P SWITC	180-5149-00 FLIP ASSY.	S.W. DEP RIGHT FUPPER E.O.S.	(IC-UA)	tions : next page}	130cm			S.W. #60		S.W. #22	500-8227-03 BELOW PF.	RIGHT RETURN LANE (L)	i	NIGHTORAW DOWN	P7 J12-P6 #11 S.W. #12	RETURN	c CUSGD
S.W. [0.525] DIP 1234(5)678	H (located		S.W.D38	16-01	xt pag	TANN .			S.W. #61		S.W. ##5	500-8227-03 BELOW PF.	S.W. 122 RIGHT OUTLANE	180-5087-00 ABOVE P.F.	ENTRANCE	J12-P4	VIRETURN	is C-U40
S.W. DEO DIP 12345(6)78	between (S.W.[<u>D314</u>]	ic-lu		Widen Widen			#59 S.W. #60 S.W. #61 S.W. #62 S.W. #63		S.W. #44 S.W. #45 S.W. #46	180-5015-04 BELOW PF.	S.W. #30 LEFT POP BUMPER	500-6227-04 BELOW P.F.	ORBIT	J12-P3	RETURN	10-0408
221 S.W.D22 S.W.D22 S.W.D30 S.W.D31 S.W.D32 DIP DIP DIP DIP DIP DIP DIP DIP DIP OP DIP DIP DIP DIP DIP DIP DIP DIP DIP DI	DIP SWITCH (located between Connectors J3/J13)	500-8890-01 CABINET	S.W. D.S.E. U.R. FLIPPER BUTTON	(MIT-DII					S.W. #63	180-5010-04 ABOVE P.F.	S.W. #47 RIGHT SPINNER	180-5015-04 BELOW PF.	S.W. #81 RIGHT POP BUMPER	180-5174-00 IN CABINET		_	RETURNA	13EC 1C-U3ED 1C-U40A 1C-U40B 1C-U40C 1C-U40D
S.W. D-S.P. DIP 1234567(8)	J3/J13)	-	9FQ'M'S	the Sil					S.W. #64	180-5087-00 ABOVE P.F.	S.W. #48 R. RAMP ENTRANCE	180-5015-04 BELOW P.F.	S.W	180-5174-00 IN CABINET	START	J12-P2 J12-P1	RETURN	16 140









SWITCH MENU: SWITCH, ACTIVE, SINGLE & SERVICE

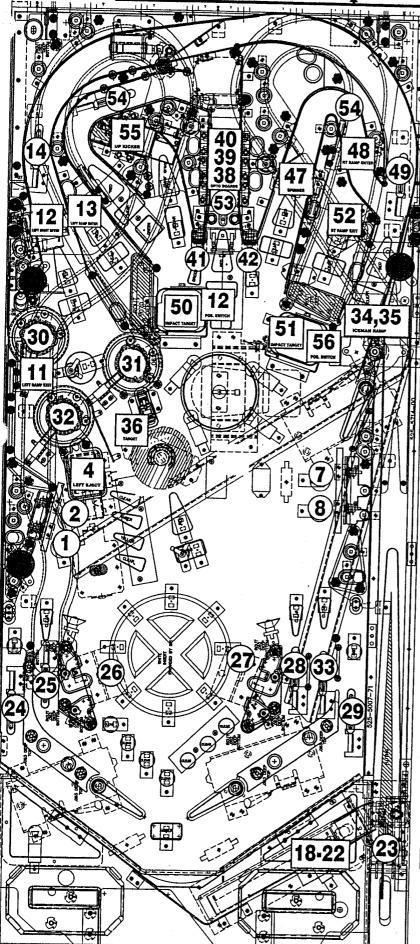

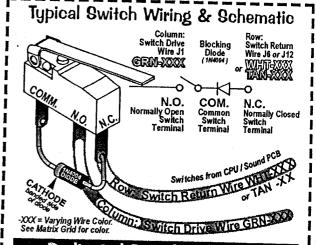

Typical Switch Wiring & Schematic ... with Switch Diode on a Terminal Strip (DOTS)

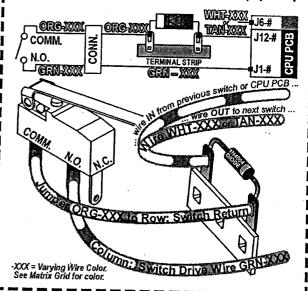

For more about Diode on Terminal Strips (DOTS), see the Yellow Pages (Schematics & Wiring).

- = Switches above Playfield.
 - = Switches below Playfield.
 - = OPTO Switch Pairs above.

Switch Part Notes: ¥ Yen Coin Switch is 180-5091-00.
Part Numbers which start with 515- or 500- include the bracket, target, and/or housing.

Sw. D-17 Part Note: The Switch is comprised of a Hanger Bracket (535-5319-00) and Contact Wire (535-7563-01) located in the Cabinet.


	1	,					
520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00
ORBIT (GREEN)		ORBIT (RED)	(RIGHT)		LOOP (RED)	(RED)	
ຣິ	2	RGHT	LIGHT LOCK	CYCLOPS	RIGHT INNER	RIGHTRAMP	DEMAN
		LED 80. LP. #78 LED 80.	LP. 1977	LED BD. LP.E. 16 LED BD.	LED BD. LP.E.Z.C. LED BD.	L. E. S. C.	
520-5307-00	520-5307-00	520-5307-00				520-6779-01	
TARGET (TOP)	TARGET (BOTTOM)		LANE (RIGHT)	LANE (LEFT)	(RED)		(GREEN)
Ŧ.	HT 2 BANK		RIGHT RETURN	RIGHT RETURN	MAGNETO	MAGNETO	MAGNETO
LED BD #77	Lp. #71	LED BD. LP. #70 LED BD	LED 80. LP. #69 LED 80.	LED 80. LP. #68 LED 80.	LP. #/67	LED 80. LP. 1453 LED 80.	LED BD. L.P. 1405
	520-5307-00			520-5307-00			
	HEAD				(TOP)	ノイング・「「」ノ	(KEU)
	7			LIGHT LOCK	LEFTEJECT		これでスピス
LP. #64		L.P. #62 LED BD.	L . 	LED BO. LP. C.C.	LED BD. LP. LSY	- - -	
520-5307-00	8	520-5307-00	520-5307-00			520-6779-01	
STORM	(RED)	(RED)	DEAS!	GAIMBII	LOOP (RED)	NOGOE	LOOP (GREEN)
	DALO	TOBRIT) 		ロンンニロ	LEFT INNER
LED BO D MAN	LED BD. LP. WAS LED BD	_	-	LED 80. LP. #52	ㅂ	LED 80. L.P. #50	LED BD. LP. 1/25 LED BO
	520-6778-023	520-6779-03	520-6779-03		112-5024-08	112-5024-08	112-5024-08
	ROOM	BALL	PHOENIX		BUMPER	BUMPER	BUMPER
	NOED!	XIRA I	DARK		<u></u>	RIGHT	ВОТТОМ
ED RD		_	LP. #45	L.P. #441 LED BD.			
	112,5024.08	520-5307-00	520-5307-00	520-5307-00		520-5307-00	5
TOOKING		(RED)		(TOP)	(BOTTOM)	LANE	SPECIAL
TOHONEY	TOATS	VERINE	VERINE	LEFT 2 BANK	LEFT 2 BANK	LEFT RETURN	LET!
00-700			LP. #37	TED BD. LP. #36 LED BD.	LED BD. LP. 1/85	LED BD. LP. FEG LED BD.	LED BO. LP. #33
	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00	520-5307-00
2000 2000 2000	POGGENIACI		KING			0.010.0	
	•	:: 	٦	2	フ フ フ フ フ オ	こくこ つりん	XINDICHA
ı	00-100-02e	ED RO LECTOR	LED BD. 1. P. 4529	- 1	ı	LED BO. LP. #26 LED BD.	LED BD. L.P. #25 LED BO
		W AUGE UGE	520-5307-00	520-5307-00	520-6779-01	520-6779-01	520-8779-01
XAVIFR STORM	XAVIFR	WOLVERINE	ROGUE ICEMAN	ROGUE	SENTINELS BROTHERHOOD	SENTINELS	RED
LED BD. LP. #24	LP. #28	LED BD. L.P. #22 LED BD	; [2]	LEO BD. LP. #20 LED BD.		LED BO. LF.E.ALD LED BO.	
		D #14	L) #13	LP. #12	LP. #11	LP. #10	LP. #9
Լբ. #8	Lp. #7	[년] #6	LP. #5	[<u>.</u> #3	LP. #3	[[-] #2


LAMP MATRIX GRID [#1 - #80] {Lamp Locations : next page}

Power Driver Board





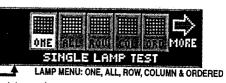

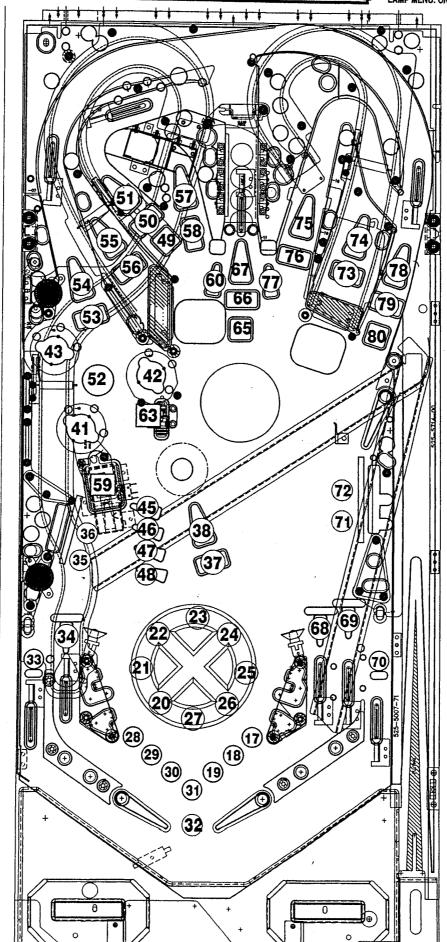

COILS DETAILED CHART TABLE


	High Current Coils Group 1	Driv	e Driver or Output PC	Power Una B Color	Power Line	Powar	Drive Transistor	D.T. Control	Coll GA-Turn
#1	TROUGH UP-KICKER	Q1	r Output re	YEL-VIO	J10-P9/10			J8-P1	19/2031970
#2	AUTO LAUNCH	Q2	┥.	YEL-VIO	J10-P9/10			J8-P3	090-5044-ND 24-940 090-5036-ND
#3	LOWER LEFT EJECT	Q3	A	YEL-VIO	J10-P9/10	-		J8-P4	23-800 090-5001-ND
#4	MAGNETO MAGNET	Q4	1/0	VIO-YEL	J10-P8	50VDC		J8-P5	22-800 090-5078-00
#5	LEFT UP KICKER	Q5	Power Driver	YEL-VIO	J10-P9/10	 			22 600
#6	CENTER LOCKUP UP	Q6		YEL-VIO	J10-P9/10	-		J8-P6	090-5001-ND
#7	CENTER LOCKUP LATCH	+	1					J8-P7	090-5044-ND
-		Q7	-	YEL-VIO	J10-P9/10	50VDC	BRN-VIO	J8-P8	515-7695-00
#8	SHAKER MOTOR (OPTIONAL)	Q8		RED-WHT	J17-P7	16VAC		J8-P9	502-5027-00
Tell (High Current Coils Group 2	Drive ransistor	Driver Output PCI	Power Line Color	Power Line Connection	Power Valtage	Drive Transistor Control Line Colo	D.T. Control r Line Connect	Coll GA-Turn or Buib Type
#9	LEFT POP BUMPER	Q9		YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	26-1200 090-5044-ND
#10	RIGHT POP BUMPER	Q10		YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	26-1200 090-5044-ND
#11	BOTTOM POP BUMPER	Q11	•	YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	28-1200 090-5044-Nb
#12	UPPER RIGHT FLIPPER	Q12	I/O Power	GRY-YEL 3A	J10-P6/7	50VDC	BLU-YEL	J8-P5	22-1080 090-5032-ND
#13	LEFT SLINGSHOT	Q13	Driver	YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	26-1200 090-5044-ND
#14	RIGHT SLINGSHOT	Q14	` ▼	YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	28-1200 090-5044-ND
#15	LEFT FLIPPER (50V RED/YEL)	Q15		GRY-YEL~3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	22-1080 090-5032-ND
#16	RIGHT FLIPPER (50V RED/YEL)	Q16		GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	22-1080 090-5032-ND
	Low Current Coils Group 1	Drive	Driver Output PCB	Power Hen	Power Line Connection	Power	Drive Transistor Control Line Color	D.T. Control	Coll GA-Tum
#17	FLASH: LEFT SIDE (X2)	Q17		ORG	J6-P10	20VDC	VIO-BRN	J7-P2	# 89 BULB - 165-5000-89
#18	FLASH: RIGHT SIDE	Q18		ORG	J6-P10	20VDC	VIO-RED	J7-P3	# 85 BULB 165-5000-89
#19	FLASH: DISC CLEAR (X2)	Q19	•	ORG	J6-P10	20VDC	VIO-ORG	J7-P4	# 89 BULB 165-5000-89
#20	FLASH: DISC BLUE (X2)	Q20	I/O Power	ORG	J6-P10	20VDC	VIO-YEL	J7-P6	# 89 BULB 165-5000-89
#21	FLASH: WOLVERINE	Q21	Driver	ORG	J6-P10	20VDC	VIO-GRN	J7-P7	# 89 BULB 165-5000-89
#22	FLASH: MAGNETO (LEFT/RIGHT) (X2)	Q22	▼	ORG	J6-P10	20VDC	VIO-BLU	J7-P8	# 89 BULB 165-5000-89
#23	DISC MOTOR POWER	Q23		BRN	J7-P1	20VDC	VIO-BLK	J7-P9	RELAY 190-5004-00
#24	OPTIONAL (e.g. COIN METER)	Q24	ŀ	RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER
		ا			L				
		Drive nalator (Driver Output PCB	Power Ling Color	Power Line Connection	Power Vaitage (Drive Transistor Control Line Color	D.T. Control Line Connect	Cell GA-Turn or Bulb Type
#25	FLASH: POP BUMPER	Q25		ORG	J6-P10	20VDC	BLK-BRN	J6-P1	# 89 BULB 165-5000-89
#26	ORBIT DIVERTER	Q26		BRN	J7-P1	20VDC	BLK-RED		24-940 090-5036-ND


	Low Current Coils Group 2		Driver Output PCB	Power Ling Color	Power Line Connection	Power Voltege	Drive Translator Control Line Color	D.T. Control	Coll GA-Turn
#25	FLASH: POP BUMPER	Q25		ORG	J6-P10	20VDC		J6-P1	# 89 BULB 165-5000-89
#26	ORBIT DIVERTER	Q26		BRN	J7-P1	20VDC	BLK-RED	J6-P2	24-940 090-5036-ND
#27	ICEMAN MOTOR	Q27	A	BRN	J7-P1	20VDC	BLK-ORG	J6-P3	MOTOR 041-5113-00
#28	FLASH: BACKPANEL (LEFT) (X3)	Q28	I/O Power	ORG	J6-P10	20VDC	BLK-YEL	J6-P4	# 89 BULB 165-5000-89
#29	FLASH: BACKPANEL (RIGHT) (X3)	Q29	Driver	ORG	J6-P10	20VDC	BLK-GRN	J6-P5	# 89 BULB 165-5000-89
#30	FLASH: MAGNETO SPOT LIGHT	Q30	▼	ORG	J6-P10	20VDC	BLK-BLU	J6-P6	# 161BULB 165-5032-00
#31	FLASH: BOTTOM ARCH (X2)	Q31	F	ORG	J6-P10	20VDC	BLK-VIO		# 89 BULB 165-5000-89
#32	FLASH: MAGNETO FIGURE	Q32		ORG	J10-P8	20VDC	BLK-GRY	J6-P8	# 161 BULB 165-5032-00







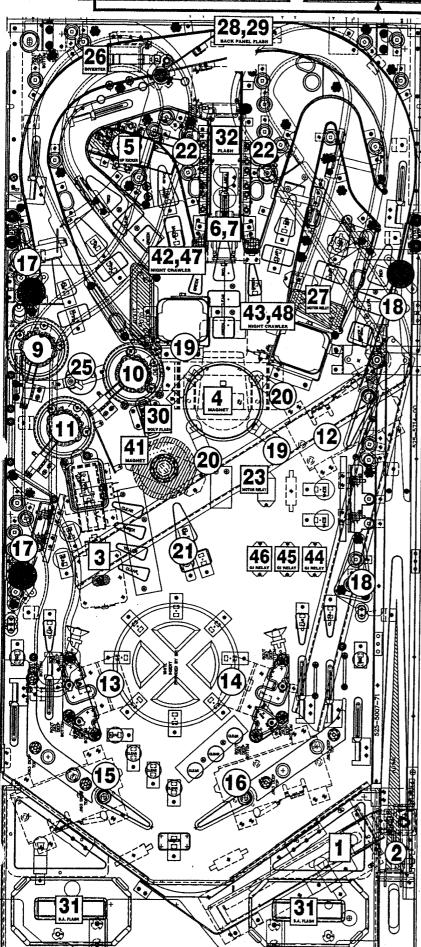

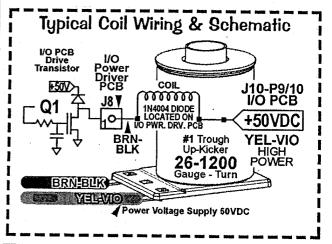

Color of Mini-Mars or Flash Lamp Bulb.

= Coils / Flash Lamps above Playfield. = Coils / Flash Lamps below Playfield.

= Coils / Flash Lamps on Back Panel.



Coll Q24 is Optional. If either a Coin Meter, Token Dispenser or Knocker (all optional equipment) is required, call Technical Support for more information, 1-800-542-5377 or 1-708-345-7700.

COILS DETAILED CHART TABLE

#41	HIGH CURRENT COILS GROUP 1 WOLVERINE MAGNET	Drive Transistor Q41	Power Line Color VIO-YEL	Power Line Connection J2-P8	Power Voltage 50VDC	Driver Transistor Control Line Color ORG-BRN	Coil GA-Turn or Bulb Type 22-650
#42	LEFT NIGHTCRAWLER UP	Q42	VIO	J2-P7	50VDC	ORG-RED	090-5076-00 23-1100 090-5030-ND
#43	RIGHT NIGHTCRAWLER UP	Q43	VIO	J2-P6	50VDC	ORG-BLK	23-1100 090-5030-ND
#44	RELAY (WHITE)	Q44	BRN	J2-P5	20VDC	ORG-YEL	RELAY 190-5004-00
#45	RELAY (RED)	Q45	BRN	J2-P4	20VDC	ORG-GRN	RELAY 190-5004-00
#46	RELAY (BLUE)	Q46	BRN	J2-P3	20VDC	ORG-BLU	RELAY 190-5004-00
#47	LEFT NIGHTCRAWLER LATCH	Q47	VIO	J2-P2	50VDC	ORG-VIO	ASSY. 515-7595-00-ND
#48	RIGHT NIGHTCRAWLER LATCH	Q48	VIO	J2-P1	50VDC	ORG-GRY	ASSY. 515-7595-00-ND







GO TO AUDITS MENU: EARNINGS AUDITS [#1 - #13] / STANDARD AUDITS [#1 - #59]

Perform the below steps to review the audits. Enter the SERVICE MENU, then enter the EARNINGS AUDITS or STANDARD AUDITS MENUS. For audit definitions or summary, review the Audits Section (GO TO AUDITS MENU). Try the "DUMP AUDITS TO USB" Feature to create a text file of your audits. Don't forget to set the DATE & TIME in the UTILITIES MENU. See the Utilities Section (GO TO UTILITIES MENU).

Step 1 Press [SELECT].
Press [BACK] to exit for escape at any time.

Step 2 Press [>]. Go to the "AUD" *lcon.*Press [SELECT].

Step 3 Press [>]. Go to the "EARN" or "S.P.I." Icon. Press [SELECT].

Step 4 Press [<] [>] to move between audits.

EARNINGS AUDITS [#1 − #13] ▼

Nr.	EARNINGS AUDIT	YOUR RESULT
1	TOTAL PAID CREDITS	
2	FREE GAME PERCENTAGE	,
3	AVERAGE BALL TIME	
4	AVERAGE GAME TIME	
5	COINS THROUGH LEFT SLOT	
6	COINS THROUGH RIGHT SLOT	
7	COINS THROUGH CENTER SLOT	

	-	
Nr.	EARNINGS AUDIT	YOUR RESULT
8	COINS THROUGH FOURTH SLOT	
9	COINS THROUGH FIFTH SLOT	
10	TOTAL COINS	
11	TOTAL EARNINGS	
12	METER CLICKS	
13	SOFTWARE METER	

STANDARD AUDITS [#1 - #59] ▼

	Nr.	STANDARD AUDIT	YOUR RESULT
	1	TOTAL BALLS PLAYED	
	2	TOTAL EXTRA BALLS	
ı	3	EXTRA BALL PERCENTAGE	
	4	REPLAY 1 AWARDS	
	5	REPLAY 2 AWARDS	
	6	REPLAY 3 AWARDS	
	7	REPLAY 4 AWARDS	
	8	TOTAL REPLAYS	
	9	REPLAY PERCENTAGE	•
	10	TOTAL SPECIALS	
	11	SPECIAL PERCENTAGE	
Į	12	TOTAL MATCHES	
	13	HIGH SCORE AWARDS	
-	14	HIGH SCORE PERCENT	
	15	TOTAL FREE PLAYS	
Į	16	TOTAL PLAYS	
Ĺ	17	0.0M 1.99M SCORES	
Ŀ	18	2.0M - 3.99M SCORES	
	19	4.0M 5.99M SCORES	-
2	20	6.0M - 7.99M SCORES	

	V+:	STANDARD AUDIT NAME	
2	21	8.0M - 9.99M SCORES	RESULT
2	22	10.0M - 12.49M SCORES	
2	23	12.5M - 14.99M SCORES	
2	24	15.0M 17.49M SCORES	
2	25	17.5M - 19.99M SCORES	
2	26	20.0M - 24.99M SCORES	
2	27	25.0M - 29.99M SCORES	
2	8	30.0M - 39.99M SCORES	
2	9	40.0M - 49.99M SCORES	
3	0	50.0M ~ 74.99M SCORES	
3	1	75.0M - 99.99M SCORES	
3	2	100.0M - 149.99M SCORES	-
3	3	150.0M+ SCORES	
3	4	AVERAGE SCORES	
3	5	SERVICE CREDITS	
3	ô	BALL SEARCH STARTED	
3	7	LOST BALL FEEDS	
38	3	LOST BALL GAME STARTS	
39	9	LEFT DRAINS	
40)	CENTER DRAINS	

Ne	STANDARD AUDIT NAME	Your
41	RIGHT DRAINS	RESULT
42	TILTS	
43	TOTAL BALLS SAVED	
44	LEFT FLIPPER USED	
45	RIGHT FLIPPER USED	
46	0-1 MINUTE GAMES	
47	1 – 1.5 MINUTE GAMES	
48	1.5 – 2 MINUTE GAMES	
49	2 – 2.5 MINUTE GAMES	
50	2.5 – 3 MINUTE GAMES	
51	3 – 3.5 MINUTE GAMES	
52	3.5 – 4 MINUTE GAMES	
53	4 – 5 MINUTE GAMES	
54	5 – 6 MINUTE GAMES	
55	6 – 8 MINUTE GAMES	
56	8 – 10 MINUTE GAMES	
57	10 – 15 MINUTE GAMES	
58	15+ MINUTE GAMES	
59	RECENT REPLAY PERCENT	-







GO TO ADJUSTMENTS MENU: STANDARD ADJUSTMENTS [#1 - #63]

Peform the below steps to review the adjustments. Enter the ADJUSTMENTS MENU, then enter the STANDARD ADJUSTMENTS MENU. For adjustment definitions or summary, review the Adjustments Section (GO TO ADJUSTMENTS MENU). See Utilities Section (GO TO INSTALLS MENU), to easily change all adjustments required depending on the Install Type (Easy, Hard, 5-Ball, Home Play, etc.) desired.

Step 1 Press [SELECT]. Press [BACK] to exit or escape at any time.

Step 2 Press [>]. Go to the "ADJ" *Icon*. Press [SELECT].

Step 3 ... "S.P.I." Icon. Press [SELECT].

Adjustment Number Adjustment Name Adjustment Setting Adjustment Comment STANDARD ADJUSTMENT #1 REPLAY TYPE AUTO (INSTALLED/FACTORY DEFAULT)

Step 4 STANDARD ADJUSTMENT #1 appears with the Adjustment Name [REPLAY TYPE] flashing. With the Adjustment Name flashing, press [<] [>] to move between adjustments.

Step 5 To change the Adjustment Setting, press [SELECT]. With the Adjustment Setting flashing, press [<] [>] repeatedly until the desired setting appears. Press the [SELECT] to "install" the change. The Adjustment Comment (bottom text line) will indicate [INSTALLED/FACTORY DEFAULT], if the Factory Default Setting is selected or [INSTALLED] if the change is not the Factory Default Setting.

STANDARD ADJUSTMENTS [#1 - #63] ▼

	OTANDARD ADJUSTNENTS [#1 - #05] V											
Nr	STANDARD ADJUSTMENT NAME	USA YOUR DEFAULT SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA YOUR DEFAULT SETTING							
1	REPLAYTYPE	AUTO	32		,000,000							
2	‡ REPLAY PERCENTAGE	10%	33	HIGH SCORE #2	.000,000							
3	‡ REPLAY AWARD	CREDIT	34	HIGH SCORE #3	,000,000							
4	‡ REPLAY LEVELS	1	35	HIGH SCORE #4	,000,000							
5	‡ AUTO REPLAY START	,000,000	36	HSTD INITIALS	3 INITIALS							
6	‡ DYNAMIC REPLAY START	60,000,000	37	HSTD RESET COUNT	2000							
7	‡ REPLAY LEVEL #1	15,000,000	38	FREE PLAY	NO							
8	‡ REPLAY LEVEL #2	30,000,000	39	LANGUAGE	ENGLISH							
9	‡ REPLAY LEVEL #3	45,000,000	40	PLAYER LANGUAGE SELECT	YES							
10	‡ REPLAY LEVEL #4	60,000,000	41	CUSTOM MESSAGE	ON							
11	‡ REPLAY BOOST	YES	42	FLASH LAMP POWER	NORMAL							
12	<u> </u>	1	43	COIL PULSE POWER	NORMAL							
13	‡ SPECIAL PERCENTAGE	10%	44	KNOCKER VOLUME	NORMAL							
14	SPECIAL AWARD	CREDIT	45	GAME RESTART	YES							
15	FREE GAME LIMIT	5	46	BILL VALIDATOR	NO							
16	EXTRA BALL LIMIT	5	47	MUSIC VOLUME	1							
17	‡ EXTRA BALL PERCENTAGE	25%	48	BALL SAVE TIME	0:05							
18	GAME PRICING	USA 10	49	TIMED PLUNGER	OFF							
19	MATCH PERCENTAGE	9%	50	FLIPPER BALL LAUNCH	OFF							
20	MATCH AWARD	CREDIT	51	COINDOOR BALL SAVER	NO							
21	BALLS PER GAME	3	52	COMPETITION MODE	NO							
22	TILT WARNINGS	2	53	CONSOLATION BALL	YES							
23	CREDIT LIMIT	30	54	FAST BOOT	YES							
24	ALLOW HIGH SCORES	YES	55	Q24 OPTION	COIN METER							
25	HIGH SCORE AWARD	CREDIT	56	TICKET DISPENSER	NO							
26	GRAND CHAMPION AWARDS	1	57	PLAYER COMPETITION	YES							
27	HIGH SCORE #1 AWARDS	1	58	TEAM SCORES	NO							
28	HIGH SCORE #2 AWARDS	0	59	LOCATION ID	0							
29	HIGH SCORE #3 AWARDS	0	60	GAME ID	0							
30	HIGH SCORE #4 AWARDS	0	61	TIME FORMAT	12-HOUR							
31	GRAND CHAMPION SCORE	,000,000	62	COIN INPUT DELAY	30							
			63	LOST BALL RECOVERY	YES							

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47).
‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. Note: If Game Dip Switch other than USA is installed, different Defaults will appear.







GO TO AUDITS MENU: FEATURE AUDITS [#1 - #+

Perform the below steps to review the audits. Enter the AUDITS MENU, then enter the FEATURE AUDITS MENU. Try the "DUMP AUDITS TO USB" Feature to create a text file of your audits. *Don't forget to set the DATE & TIME in the UTILITIES MENU. See Utilities Section (GO TO UTILITIES MENU), for more information.

Step 1 Press [SELECT]. Press [BACK] to exit or escape at any time.

Step 2 Press [>]. Go to the "AUD" *Icon.* Press [SELECT].

Audit Number Audit Name - Audit Result FEATURE AUDIT #1 NAME O O% OF GAMES

Step 3 Press [>]. Go to the "GAME" Icon. Press [SELECT]. Audit Result

Step 4 Press [<] [>] to move between audits.

% = AUDIT RESULT DIVIDED BY STANDARD AUDIT 16 (TOTAL PLAYS).

Feature Audits are subject to change (with or without notice). View Feature Audits on the Dot Display only. To export all audits to your memory stick (creating a text file), perform the following. Enter the AUDITS MENU, then enter the DUMP AUDITS TO USB. Note: The "DUMP" Icon can also be accessed in the USB MENU via the UTILITIES MENU (see the Utilities Section (GO TO USB MENU) for details).





AUDIT DATA DUMP
INSERT USB MEMORY STICK
OR
PRESS 'BACK' TO EXIT

AUDIT DATA DUMP

Step 1 Insert your USB Compatible Memory Stick into the USB port on the CPU/Sound Board (S.A.M. System). If the Memory Stick has space available and is free of errors, a dated file* is generated (* ensure your Date & Time is set prior to selecting or the dated file will have the default date of 20XX_01_01; see Section 3, Chapter 5, SET DATE / TIME via the UTILITIES MENU for details).

Step 2 Press [SELECT] to save the file to your Memory Stick. Press [SELECT] again to continue or [BACK] to exit or escape at any time.

GENERATED_DATED_FILE_NAME.TXT
PRESS 'SELECT' TO SAVE AUDITS
OR
PRESS 'BACK' TO EXIT

HUDIT DUMP
COMPLETE
PRESS 'SELECT' TO CONTINUE

Step 3 Remove the Memory Stick and insert into your PC or Mac to save the file (which can then be copied, printed or emailed). The audits are numbered sequentially without a number restart between the three types of audits (Earnings, Standard and Feature).







GO TO ADJUSTMENTS MENU: FEATURE ADJUSTMENTS [#1 - #+]

Peform the below steps to review the adjustments. Enter the SERVICE MENU, then enter the FEATURE ADJUSTMENTS MENU. For adjustment definitions or summary, review the Adjustments Section (GO TO ADJUSTMENTS MENU). See Utilities Section (GO TO INSTALLS MENU), to easily change all adjustments required depending on the Install Type (Easy, Hard, 5-Ball, Home Play, etc.) desired.

Step 1 Press [SELECT]. Press [BACK] to exit or escape at any time.

Step 2 Press [>]. Go to the "ADJ" *Icon.* Press [SELECT].

Step 3 Press [>]. Go to the "GAME" Icon. Press [SELECT].

Adjustment Number Adjustment Name Adjustment Setting Adjustment Comment



Step 4 FEATURE ADJUSTMENT #1 appears with the Adjustment Name [FEATURE ADJ. NAME] flashing. With the Adjustment Name flashing, press [<] [>] to move between adjustments.

Step 5 To change the Adjustment Setting, press [SELECT]. With the Adjustment Setting flashing, press [<] [>] repeatedly until the desired setting appears. Press the [SELECT] to "install" the change. The Adjustment Comment (bottom text line) will indicate [INSTALLED/FACTORY DEFAULT], if the Factory Default Setting is selected or [INSTALLED] if the change is not the Factory Default Setting.

Feature Adjustments are subject to change (with or without notice). View Feature Adjustments on the Dot Display only. Use the Installs Menu (via the UTILITIES MENU) to automatically change a select group of Feature Adjustments (see the Utilities Section) or adjust them one-by-one.




POWER REQUIREMENTS


This game must be connected to a properly grounded outlet to reduce shock hazard and insure proper game operation. See the Yellow Pages (Schematics & Wiring), for transformer connections required for Normal, High, and Low Line conditions.



Normal Line:	110v AC - 125v AC @ 60Hz	
Domestic	AVG OPERATION	MAX OPERATION
use an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.8AMP	CURRENT: 8AMP
	WATTAGE: 329w	WATTAGE: 940w
High Line:	218v AC - 240v AC @ 50Hz	
Export use 2x 5AMP 250v Slo-Blo Fuses. (*England & Hong Kong use an 8AMP 250v S/B Fuse.)	AVG OPERATION	MAX OPERATION
	CURRENT: 1.8AMP	CURRENT: 5AMP 8AMP* England & Hong Kong use
	WATTAGE: 412w	I VVAITAGE. I 143VV I 1032VV an aA Fuse.
Low Line:	95v AC - 108v AC @ 50Hz / 60Hz	
Export Japan Only	AVG OPERATION	MAX OPERATION
use an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.6AMP	CURRENT: 8AMP
	WATTAGE: 264w	WATTAGE: 812w

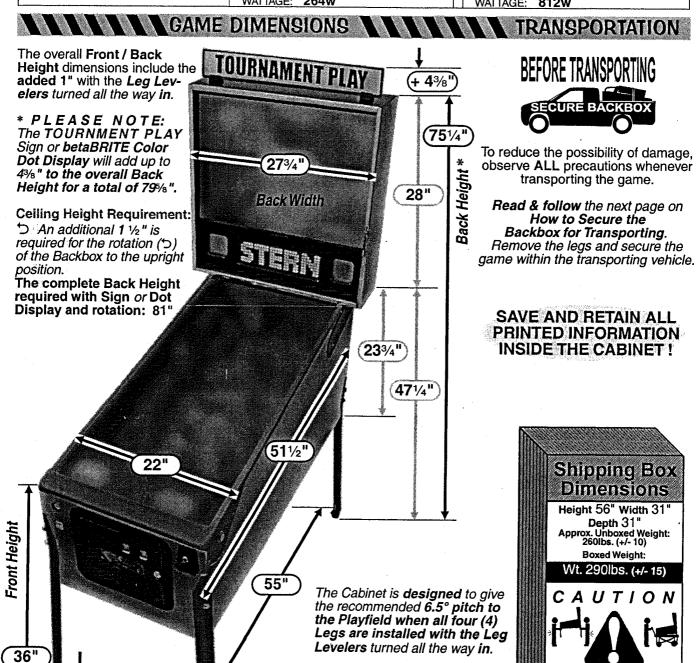

Front Height dimensions.

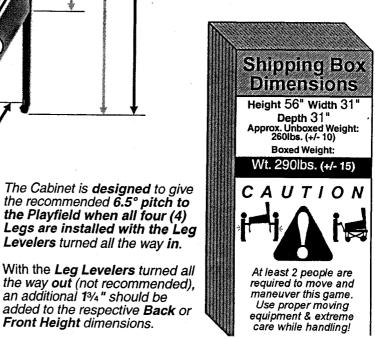


Leg Length =


305/8"

Service Switch X4 Set Access & Use

The 4-Button Service Switch Set provides access for three (3) functions available for your use: 1: SERVICE CREDIT, 2: VOLUME [-]/[+] and 3: SERVICE MENU.

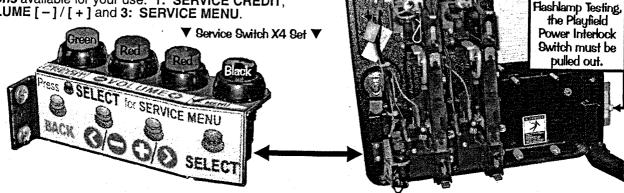

To access any of these three (3) functions you must first open the Coin Door (see pictorial above) with the Game in the Attract Mode (not already in any Function or Menu stated below) and then follow below.

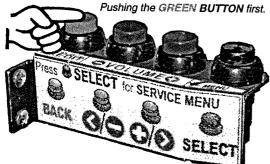

■ Function 1: SERVICE CREDITS MENU


Inside Coin Door

If Coil &

Pushing the Green [SERVICE CREDIT] Button first, adds a Service Credit per push (will not affect your audits as "paid" credits). This is useful for the technician to test games in regular play without affecting the game audits. Each depression adds 1 credit; up to 50 credits can be applied. Standard Adjustment 23. Credit Limit, determines this, however, it can be changed from 04-50; for details see the Adjustments Section.

Note: Once your credits are added, this menu will automatically exit a few


seconds after the last button depression or when the Green [BACK] or Black
[SELECT] Button is pushed. This function is disabled if Standard Adjustment
[Select of Button is pushed of Standard Adjustment of Credit Limit is 30, with 8 paid credits present, only 22 Credits can be applied.).

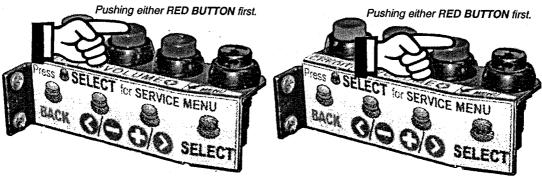

▲ Function 2: VOLUME MENU ▲

Pushing either of the Red [VOLUME] Buttons first, enters the VOLUME MENU. While in this Mode, to DECREASE the volume, hold down or depress the 1st Red [< / -] Button until desired the volume is achieved; to INCREASE the volume, hold down or depress the 2nd Red [+ / >] Button until the desired volume is achieved.

Note: The volume can be set between 0-63; Once your adjustments are made, this menu will automatically exit a few seconds after the last button depression or when the Green [BACK] or Black [SELECT] Button is pushed.

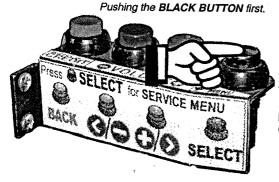


■ Function 3: SERVICE MENU

Pushing the Black [SELECT] Button first, enters the SERVICE MENU. Once in, navigate through all menus by depressing the Service Menu Buttons. Use the Red [< / -] or [+ / >] Buttons to move LEFT / RIGHT, NEXT/PREVIOUS (audits/adjustments) or to INCREASE / DESCREASE an adjustment (setting). Use the Black [SELECT] Button to select a highlighed Icon, move to the next line of text or to answer "OK" where applicable. Use the Green [BACK] Button to exit or escape back.



Exit Service Menu

In the MAIN MENU and in all SUB-MENUS (where the "QUIT" Icon is present), if the "QUIT" Icon is selected and activated, or the Green [BACK] Button is selected repeatedly (depending on which sub-menu you're in...), the SERVICE MENU Session will be exited and returned to the Attract Mode.

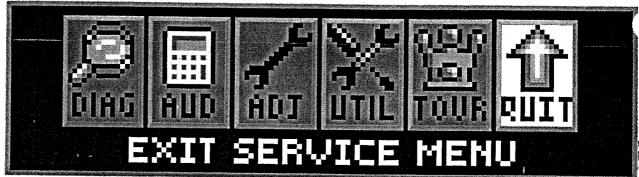



Turning the game on/off will start the *Power-Up Routine*. Upon **Power-Up**, the DISPLAY will indicate the COUNTRY, FILE VERSION and LANGUAGE(S) installed. LANGUAGE/COUNTRY: change via Dip Switch.



The below Problem / Solution Table was designed to answer some common problems frequently asked.


Problem / Solution Table

PROBLEM	SOLUTION
Will not enter the SERVICE MENU after depressing the Black [SELECT] Button.	 Check the Service Switches [GREEN, RED (x2) & BLACK Buttons] for loose connections or bad ground. Check the associated wiring harness to/from the CPU/Sound Board, Connector J13. Check CPU/Sound Board for possible failure.
All Service Buttons [* * * * • Buttons] appear nonfunctional.	Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Green Button in the Attract Mode will not enter the SERVICE CREDITS MENU to add Service Credits.	 Check to make sure the Game is not in "Free Play." If the game is set to Free Play, adding Service Credits is not required. Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Display "blanks out."	 Check the Dot Matrix Display for loose wiring harness for poor or no connection and/or broken wires. Check F1 (3/4A Fuse) on the Display Power Supply Board. Refer to the Yellow Pages (SCHEMATICS & TROUBLESHOOTING).
Icons "scroll" along continuously in the MAIN MENU.	Check for a stuck switch on either of the Red Buttons.
The Start and Flipper Buttons do not select or activate <i>lcons</i> in the SWITCH TEST MENU.	This is normal. These switches are deactivated, as they are a part of the Switch Test. Refer to the Diagnostics Section (GO TO DIAGNOSTICS MENU, Switch Test).
Can't move selection of <i>Icon</i> with the Left and/or Right Flipper Buttons.	 Check the Flipper Buttons for loose connections or bad Ground and refer to Section 5, Chapter 2, Playfield Wiring, #-Flipper Circuit Wiring Diagram. This is normal only in Diagnostic's Switch & Active Switch Tests (see previous Problem).
Some Icons appear non-functional in the MENU or missing.	• Some functionality of the Service Menu may not have been completed during development. If exists, it should only be a non-critical function, such as the "HELP" <i>Icon</i> , which will explain the usage of icons. When completed, a software update will correct the problem. Software updates are announced via Service Bulletins (if critical) and on our website http://www.sternpinball.com/GAME-code.shtml ; view the Game Code Library Message Board Marquee or click Previous Messages for past announcements.
In COIL TEST MENU, the coils and flashlamps do not fire after pressing the Black [SELECT } Button.	Ensure the POWER INTERLOCK SWITCH is pulled out (see the start of this Chapter).
In the SERVICE MENU, the volume cannot be adjusted with either of the Red Buttons.	The Volume adjustment can only be made when in the Attract Mode (see the start of this Chapter).
In the SERVICE MENU, the display seems to lock up, or the Help Display appears to be non-functional.	If you cannot clear the situation by exiting back one Menu, exit completely out of the SERVICE MENU, and re-enter. If the problem persists, call Technical Support for additional help.


IF YOU NOTE ANY OTHER PROBLEMS OF HAVE ANY SYMPTOMS NOT DESCRIBED ABOVE, PLEASE CALL TECHNICAL SUPPORT 800-542-5377 (708-345-7700 OPTION #1), SO WE MAY ASSIST YOU.


THIS PAGE IS BLANK

Pinball Service Menu Icon Tree

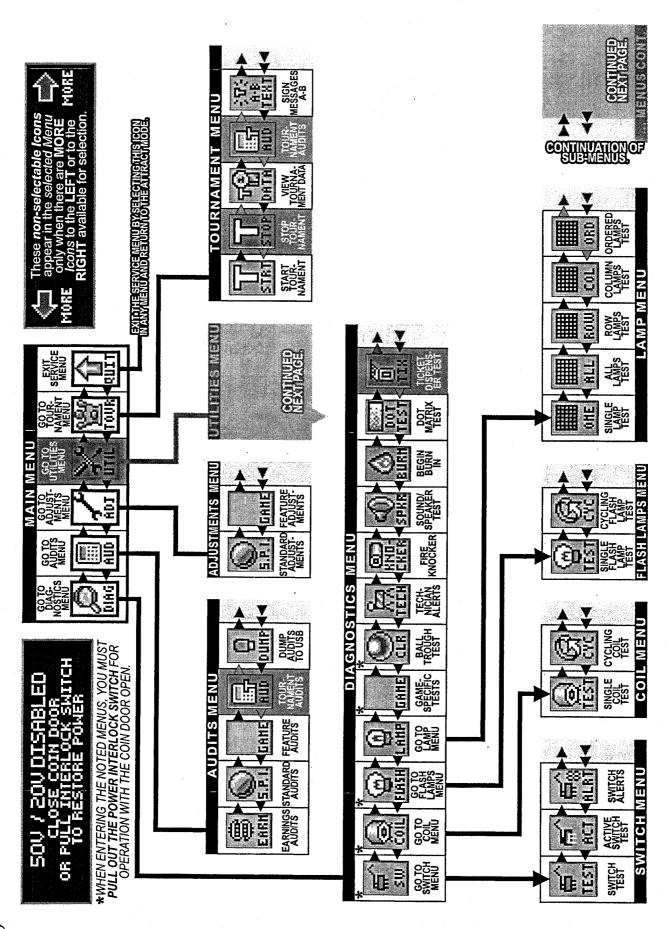

Pinball Service Menu Icon Tree Continued

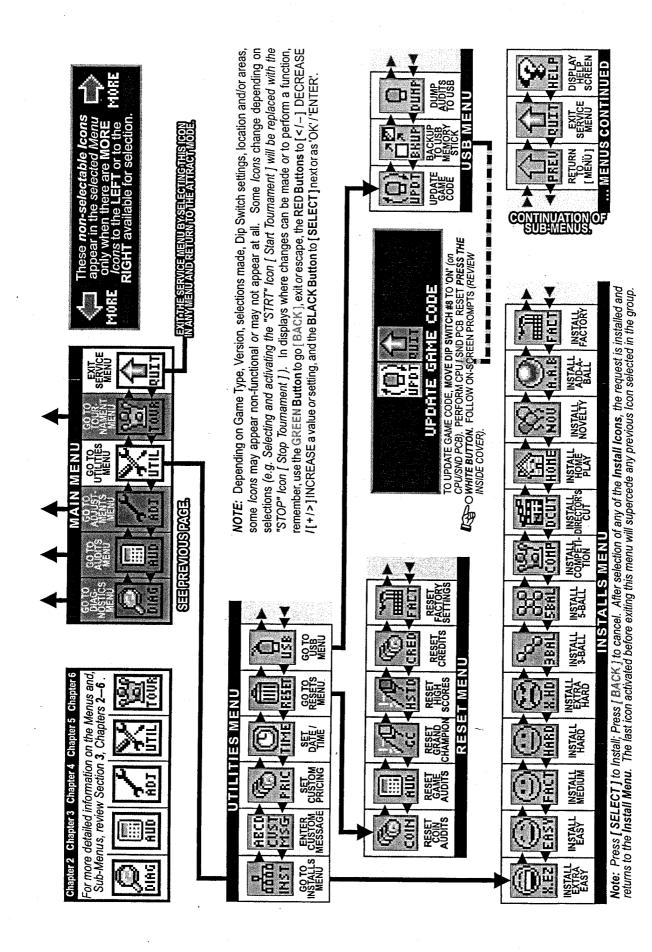

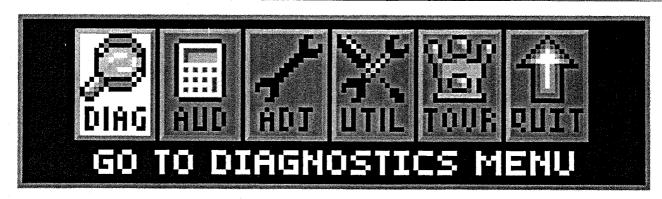

To initiate, from the MAIN MENU, select the "DIAG" *Icon*. The DIAGNOSTICS MENU provides tests for switches, coils, flash lamps, lamps, sounds and dots in the Dot Matrix Display. Each feature may be tested manually or automatically after entering the SERVICE MENU (see Service Menu Introduction Section). The [CYCLING COIL TEST] / [FLASH LAMP TEST] may be used for a quick verification of automatic test functions. The [SWITCH TEST] / [SINGLE COIL TEST] / [SINGLE LAMP TEST] / [ALL LAMPS TEST] / [ROW LAMPS TEST] / [COLUMN LAMPS TEST] / [FLASH LAMP TEST] may be used for troubleshooting.

All **DIAGNOSTICS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. *NOTE:* Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional *or* may not appear at all. Some *Icons* change depending on selections (e.g. Selecting and activating the "STRT" Icon [Start Tournament] will be replaced with the "STOP" Icon [Stop Tournament]). Icons and/or functions, order and operation are subject to change.

In displays where changes can be made or to perform a function, use the GREEN Button to go [BACK], exit or escape, the RED Buttons to [</ -] MOVE BACK / LEFT / DECREASE / [+ / >] MOVE FORWARD / RIGHT / INCREASE a value or setting, and the BLACK Button to [SELECT] next or as "OK / ENTER / ENERGIZE."

Important: Upon Power-Up (Game CPU Reset) or opening the Coin Door watch the Display for any Alerts,*

500 / 200 DISABLED CLOSE COIN DOOR OR PULL INTERLOCK SWITCH TO RESTORE POWER This audible / visual alert display is shown when the 50V / 20\ Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL OR SWITCH TESTING & BURN-IN WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or

pressing the 'escape' Green [BACK] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT! RUTO PLUNCER DEVICE MALFUNCTION

This alert display is shown momentarily during Game Mode or Power-Up to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly).

OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can

also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** (next page) and/or **Technician Alerts**.



Upon entering the SERVICE MENU, if an asterisk " * " is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the Red Buttons (short-cut to the TECHNICIAN ALERTS MENU) or continue into the SERVICE MENU (press the Black Button again), select the "DIAG" Icon

and "TECH" Icon for the Technician Alerts information.

CAUTION! Remove all pinballs from the Ball Trough prior to lifting the playfield to it's full upright position for servicing. PULL OUT the Power Interlock Switch for operation. To eject pinballs, select the "DIAG" lcon from the MAIN MENU to enter the DIAGNOSTICS MENU. Select the "CLR" lcon to enter the BALL TROUGH TEST MENU. Press the Black [SELECT] Button. To return to the DIAGNOSTICS MENU, press the Green [BACK] Button. This feature also useful to retrieve a pinball for game testing in Switch or Coil Tests.

To initiate, from the **DIAGNOSTICS MENU**, select the "SW" *Icon*. Switches are configured in an 4 X 16 Matrix of Rows [Switch Drives] and Columns [Sw. Returns] with up to **64** possible switches. Dedicated Switches are configured in a 2 X 16 Matrix of Rows [Dedicated Sw. Drives / Ground] and Column [Ded. Switch Returns] with up to **32** possible dedicated switches (*includes the 8 dip switch positions*). The **SWITCH TEST MENU** consists of three (3) parts: **Switch & Active Switch Tests** and **Switch Alerts** to test **all** switches.

Reminder: The Flipper & Start Buttons (part of Switch Tests) are temporarily disabled as Service Menu Navigation Buttons during these test(s) so they can be tested and shown on-screen. Pressinng the Green [BACK] Button (Dedicated Switch D-21), Light Green-Black / Upon entering Switch Test, you will notice that some switches are already indicated as 'closed

Switch Test

To initiate, from the SWITCH MENU, select the "TEST" lcon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open and the activation of coils is required. Upon entering Switch Test, you will notice that some switches are already indicated as closed. In the examples, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough), along with the Flipper E.O.S. Dedicated Switches D-10 & D-12 (End-of-Stroke Switches are 'normally closed'). If the game has more flippers with E.O.S. Dedicated Switches, CPU Dip Switch Setting other than 1-8 OFF or switches stuck closed, more dots will be indicated (enter Active Switch Test to reveal the names).

In Switch Test, close each switch and observe the display (switch closure is accompanied by a short audible tone). In the example, the Black [SELECT] Button Dedicated Switch D-24 is pressed. The Dot Matrix Display will light up (highlight) the corresponding dot in the on-screen matrix, display the switch name, switch number and the Switch Drive / Return wire colors. When not closing a switch, the display indicates NONE and the last switch number closure. For the Switch Matrix Grid and Dedicated Switch Grid, see Find-It-In-Front: Dr. Pinball, DR. 4 or escape out of this test and enter Active Switch Test (described below) to view the names of the switches closed. Note: Pressinng the Green [BACK] Button (Ded. Switch D-21), Lt. Green-Black / Black (GND), will exit the


CAUTION! COIL MECHANISMS WHEN ACTIVATED HAVE FAST MOVING PARTS! While performing Switch Test with the Coin Door closed or open (with the Power Interlock Switch is pulled out), DO NOT USE YOUR FINGER to test switches which are associated with a coil nechanism such as a Vertical Up-Kicker (hole with a switch), Slingshots, Bumpers, etc..


Active Switch Test

To initiate, from the SWITCH MENU, select the "ACT" lcon. In Active Switch Test, if any switches are stuck closed (or normally closed from the presence of pinball(s) as in the Ball Trough), the display will flash the corresponding dot(s) in the on-screen matrix, display the name and the Switch Drive / Return wire colors. If more than one switch is closed, the switch information will change with each switch. This cycle continues until all switches are cleared or until Active Switch Test is exited. In the example, the Black [SELECT] Button Dedicated Switch D-24 is pressed and held down. The display will cycle and flash each dot, naming each switch which is closed. To determine the switch number, compare the highlighted dot to the same position in the Switch Matrix Grid at the beginning of this manual.

SWITCH TEST NUNE SWITCH TEST NUNE SWITCH TEST SELECT LHST SM. D-24 LUN-GRY BLR After pressing the switch (to make it close), the display will indicate the last switch number. ▼ SWITCH TEST NUNE LHST SM. D-24 LHST SM. D-24

Typical Switch Wiring & Schematic

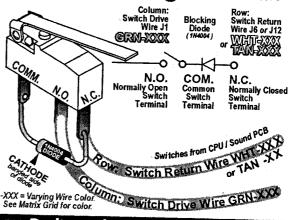

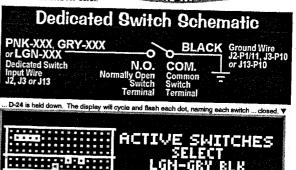

Switch Alerts

To initiate, from the SWITCH MENU, select the "ALRT" Icon. In Switch Alerts Menu, possible inoperable switches are marked with an "X" (OUT OF SERVICE). Mark switches IN or OUT OF SERVICE by pressing the Black Button while the intended switch is highlighted and change with either of the Red Buttons. Switches which are determined as "OUT OF SERVICE" by the game or manually, will be automatically marked as "IN SERVICE" as soon as the game determines a valid switch closure (after adjusting, fixing or replacing the switch, then testing/actuating the switch). Note: A Factory Reset will also put the switch back "IN SERVICE" in which the game will need to redetermine if the switch should be marked OUT OF SERVICE.

Go To Coil Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "COIL" Icon. Coils #01 - #16 are typically High Current Coils (although Low Current Coils may be used in these positions & will be noted). Coils #17 -#32 are typically Low Current Coils. Flash Lamps are typically used in positions #25 - #32 (although

Flash Lamps may be used in any position and will be noted). Auxiliary Coils may be used in positions #35 - #35.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] GO BACK [+ / >] GO FORWARD, and the **BLACK Button** to [**SELECT**] ENERGIZE the coil (solenoid) or flash lamp.




Single Coil Test

To initiate, from the COIL MENU, select the "TEST" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. Upon entering

Single Coil Test, you will notice the #1 coil is shown. The Dot Matrix Display will indicate the coil or flash lamp name, coil (solenoid) or flash lamp number and the Coil or Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board, the Coil Voltage Gauge-Turns (e.g. 23-800) or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing. see the Yellow Pages (Schematics & Wiring).



Typical Coil Wiring & Schematic

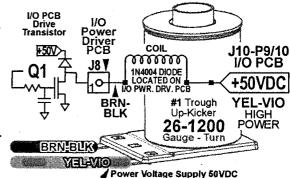

Cycling Coil Test

To initiate, from the COIL MENU, select the "CYC" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. The test pulses each

regular coil or flash lamp sequentially (cycling) on the Playfield and in the Backbox (if coils or flash lamps are used). The Dot

Matrix Display indicates the same information you will find in Single Coil Test.

🕽 Go To Flash Lamps Menu

To initiate, from the DIAGNOSTICS MENU, select the "FLASH" Icon. The two tests allows the technician to easily spot any burned-out flash lamps and replace them. Unlike Single Coil Test, which tests all coil (solenoids), including flash lamps, Single and Cycling Flash Lamp Tests, test only the flash lamps used in the game. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted).

Remember, use the GREEN Button to go [BACK], exit or escape, the RED Buttons to [< / -] GO BACK / [+/>] GO FORWARD, and the BLACK Button to [SELECT] ENERGIZE the flash lamp.




Single Flash Lamp Test

To initiate, from the FLASH LAMPS MENU, select the "TEST" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. Upon

entering Single Flash Lamp Test, you will notice the first Flash Lamp is shown. The Dot Matrix Display will indicate the flash lamp name, flash lamp number and the Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (Schematics & Wiring).



Bulb Types used for Flash Lamps

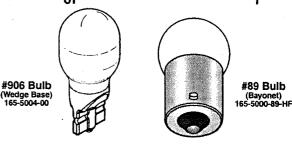



To initiate, from the FLASH LAMPS MENU, select the

"CYC" Icon . Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. The test pulses each flash lamp sequentially (cycling) on the Playfield and in the Backbox (if flash lamps are used). The Dot Matrix Display indicates the same information you will find in Single Flash Lamp Test.

Go To Lamp Menu

To initiate, from the DIAGNOSTICS MENU, select the "LAMP" Icon. Controlled lamps are configured in and 8 X 10 Matrix of Rows [Lamp Returns / Ground] and Columns [Lamp Drives / 18VDC] with up to 80 lamps possible. The LAMP TEST MENU consists of five (5) parts: Single Lamp Test, Test All Lamps, Row Lamps Test, Column Lamps Test and Ordered Lamps Test* to test all lamps.

Remember, use the **GREEN Button** to go [**BACK**], exit *or* escape, the **RED Buttons** to [< / -] GO BACK / LEFT / [+ / >] GO FORWARD / RIGHT, and the **BLACK Button** to [**SELECT**] next *or* as "OK / ENTER."

Upon entering Single Lamp Test, ... the #1 lamp is shown. Display will light up ... the dot ... >

Single Lamp Test

To initiate, from the LAMP MENU, select the "ONE" Icon. As each lamp is selected, the lamp will light at it's location on the playfield as well as the Dot Matrix

<u>SINGLE</u> LAMP TEST START BUTTON RED-BRN

Display. Upon entering Single Lamp Test, you will notice the #1 lamp is shown. The Dot Matrix Display will light up (highlight) the corresponding dot in the on-screen matrix, display the lamp name, lamp number and the Lamp Return / Drive wire colors. For the Lamp Matrix Grid, see the beginning section of this Service Game Manual.

Upon entering All Lamps Test, ... the Dot Matrix Display is flashing "ALL LAMPS ON" ... ▶



All Lamps Test

To initiate, from the LAMP MENU, select the "ALL" Icon. Upon entering All Lamps Test, you will notice the Dot Matrix Display is flashing ALL LAMPS ON and the

ALL LAMPS TEST ALL LAMPS ON

lamps on the playfield will be lit, alternating between the rows in the Lamp Matrix Grid. The Dot Matrix Display will light up (highlight) all of the dots in the on-screen matrix.

Upon entering Row Lamps Test, you will notice the #1 lamp row is sho



Row Lamps Test

To initiate, from the LAMP MENU, select the "ROW" Icon. As each lamp row is selected, the lamps in the row will light on the playfield as well as the Dot Matrix ROW LAMPS TEST LAMP ROW #1

Display. Upon entering Row Lamps Test, you will notice the #1 lamp row is shown. The Dot Matrix Display will ight up (highlight) the corresponding row of dots in the on-screen matrix, display the lamp row number, the Lamp Return wire colors, the I/O PCB Connector and transistor number.

Upon entering Column Lamps Test, you will notice the #1 lamp column is si




Column Lamps Test


To initiate, from the LAMP MENU, select the "COL" Icon. As each lamp column is selected, the lamps in the column will light on the playfield as well as the Dot COLUMN LAMPS TEST COLUMN

Matrix Display. Upon entering Column Lamps Test, you will notice the #1 lamp column is shown. The Dot Matrix Display will light up (highlight) the corresponding row of dots in the on-screen matrix, display the lamp column number, the Lamp Drive (18VDC) wire colors, the I/O PCB Connector and IC number.

Bulb Types used for Control Lamps

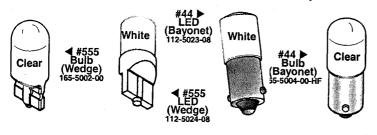

Tupical Lamp Wiring & Schematic

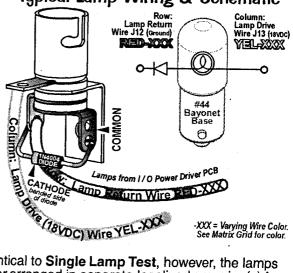

* If not required in this game, Icon will not be shown.



Ordered Lamps Test

To initiate, from the LAMP MENU, select the "ORD" Icon.

If required, this Icon will appear in the LAMP MENU. Identical to Single Lamp Test, however, the lamps lit are not in the Lamp Matrix numeric order, but ordered or arranged in separate localized grouping(s) for easier lamp checking.

Game-Specific Tests

To initiate, from the DIAGNOSTICS MENU, select the "GAME" Icon. Ensure the Power Interlock Switch is pulled out when testing with the Coin Door open. This Menu is provided to allow the technician a simple method of testing game specific coils and/or switches, if required. If used, select the Icon (and Sub-Menu Icons, if any) and follow on-screen prompts.

Ball Trough Test

To initiate, from the DIAGNOSTICS MENU, select the "CLR" Icon. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open. This Menu is provided to allow the technician a simple method of removing the balls from the trough and also, to test functionality of the trough, ensuring proper trough operation. Upon entering Ball Trough Test, you will notice that four switches are already indicated as closed. In the example, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough). To return to the DIAGNOSTICS MENU, press the Green [BACK] Button.



Press the **Black [SELECT] Button** to eject the ball in the first position Switch **#21** (VUK OPTO Trough #1 (R)). Simultaneously, the Dot Matrix Display and the playfield will eject the ball to the Trough Up-Kicker, eject from the Trough Up-Kicker into the Shooter Lane, momentarily closing Switch #23 (Shooter Lane),

retrieve the pinball or allow the ball(s) to re-enter the trough to continue **Ball Trough Test**. The Dot Matrix Display indicates Switch #18 (4-Ball Trough #4 (L)) as open as the remaining three (3) pinballs shift over one (1) position to the right. If the technician allows the ejected pinball to reenter the ball trough, the Dot Matrix Display will indicate Switch #18 as closed. **REMINDER:** Switch #22 is the stacking OPTO switch; If more than five (5) pinballs are used, the additional switches will be noted. Typically, four (4) pinballs are used and required for proper operation; if this amounts differs, it will be noted on the front page of this Service Game Manual.



CAUTION! Continuous use off the above test may overheat the Trough Up-Kicker Coil.

Technician Alerts

To initiate, from the DIAGNOSTICS MENU, select the "TECH" Icon. This Menu is provided to show any switch or solenoid problems and/or missing pinballs. If upon

entering the SERVICE MENU the display indicated an asterisk (*) and "USE -/+ TO VIEW TECH. ALERTS", alerts are present.

TECHNICIAN ALERT - (0/0) NO TECHNICIAN ALERTS PRESS 'BACK' TO EXIT



After pressing either Red [< / -] / [+ / >] Button or selecting this *lcon* in the **DIAGNOSTICS MENU**, the display will indicate the alert(s). If there are 2 alerts present, the display will indicate

(1/2) with the 1st alert on the display. Press the Red [+ / >]

Button to view the second alert (2/2). The second number in the parenthesis () after the slash (/) indicates how many alerts are present. Refer to the start of this chapter regarding "Upon entering the SERVICE MENU *" indication and to SWITCH ALERTS. To return to the DIAGNOSTICS MENU, press the Green [BACK] Button. Note: While in this menu, an entire may be present to imm (short out) to the capture rich Telling New (1/2). this menu, an option may be present to jump (short-cut) to the appropriate Testing Menu (e.g. Coil Test, Switch Test, Game Specific Test or Ticket Dispenser Test, if installed).

NOTE ON SWITCH DETECTION: During game play, activation of switches are continuously monitored. For a switch to be determined as inoperable or OUT OF SERVICE, up to twenty games or so must be played for a switch to be automatically marked as OUT OF SERVICE. In programming, if a switch is determined to be faulty, game play is compensated. Switches noted as OUT OF SERVICE are determined to be stuck closed or open depending on switch usage. Free up the switch actuator, adjust or replace, if necessary. Performing a valid switch closure will put the switch back "IN SERVICE."

Determination of switch usage can be checked in Audits (review the Audits Section). Find the associated Audit with the switch in question and check usage; compare the numbers to commonly used switches. After any switch is checked and repaired or replaced, it's suggested to test the switch in the Switch Test or Single Coil Test (reviewed earlier in this section) where the associated coil to the switch can be tested as well. After correcting the problem, the switch will marked "IN SERVICE" and the switch is again monitored as specified above. Only you can determine if a switch marked OUT OF SERVICE is actually inoperable, or if it is just not getting actuated during game play.

NOTE ON PINBALL DETECTION: While in TECHNICIAN ALERTS MENU, if the following is displayed, the game has detected

one (1) or more pinball(s) missing and has compensated for the lost pinball(s) to provide normal game play.

Technician Alerts continued on the next page.

Technician Alerts continued from previous page.

During game play, a pinball can get trapped or stuck. If after approximately 15 seconds of inactivity or "no scoring," Ball Search is started. Note: If the pinball is in the Plunger Lane or "held" on the flipper, no Ball Search will

TECHNICIAN ALERT - (1/2) 2 BALLS MISSING PRESS 'SELECT' FOR TROUGH TEST

be performed. The game will perform one Ball Search in an attempt to "find" or free-up the pinball.

If the game does not see a switch closure (indicating the pinball has not been found), the Dot Matrix Display may indicate [LOCATING PINBALLS PLEASE WAIT ...], during which Ball Search will continue until the timer runs out (this feature will not happen if the game is in Competition Mode; Ball Search will continue until the pinball is found, unstuck and/or replaced manually). The display will momentarily acknowledge the missing pinball(s). The game will provide another pinball into play and will compensate for the lost pinball. Game play will appear normal.

Note: This detection and compensation will happen with every pinball, if each suffers the same fate of a ball trap. If all balls get trapped, the game cannot be played or started until the situation is rectified.

Important: Determine where the pinball is! Do not add pinball(s) until it is determined the pinball(s) are indeed missing and not just stuck. The most common places for a pinball to be stuck is in device holes (ejects and VUKs) or ball troughs. Determine that all devices are functionally properly. Check around plastic pieces and ramps to see if the pinball got jammed or stuck.

When the found pinball or a replacement pinball is added to the Ball Trough, the Technican Alert will immediately clear and will then indicate any remaining alerts (if present) or NO TECHŇIĆIAN ALERTS.

Enter the BALLTROUGHTEST (review the previous page) to cycle the pinballs and to check proper switch and coil operation. If a pinball was added, and the originally stuck pinball has freed itself at a later time, the game will not operate correctly.

NOTE ON DEVICE MALFUNCTION: While in TECHNICIAN ALERTS MENU, if the following is displayed, the game has detected a "device malfunction." Check the device indicated (coil and/or switch).

TECHNICIAN ALERT - (2/2) DEWICE MALFUNCTION USE -/+ TO VIEW OTHER ALERTS

KHO-CKER

Knocker Test

To initiate, from the **DIAGNOSTICS MENU**, select the "KNO- CKER" *Icon*. The digitally mastered "Knocker" is sounded. The *knocker sound* is used to alert the player if he/she has received a special, replay or a credit from the Match Award feature. Press the Black [SELECT] Button to activate the knocker. To return to the DIAGNOSTICS MENU, press the Green [BACK] Button.

FACTOID: The knocker got it's name from the 'original knocker' (20th century pinball games), which used a coil and when energized (fired), the plunger would strike a wood panel inside the cabinet.

Sound / Speaker Test

To initiate, from the DIAGNOSTICS MENU, select the "SPKR" Icon. This system produces true digital stereo sound from Backbox & Cabinet Speakers or "Mono" on

the Cabinet Speaker (when used by itself). This Menu is provided to allow the technician a simple method of testing the speakers if rewired or replaced.

Upon entering Sound / Speaker Test, you will notice the Dot Matrix Display indicating the first option of available music and/or sound(s) in this test. Press the Red [+ / >] Button to cycle through the available music and/or sounds, and press the Black

MUSIC: MAIN PLA PLAYING SOUND #1

SOUND / SPEAKER TEST MUSIC: MAIN PLAY

PRESS 'SELECT' TO PLAY

SOUND / SPEAKER TEST

[SELECT] Button to play the option shown in the Dot Matrix Display. Press the Green [BACK] Button to exit.

Speaker Phase Testing


Connections to each of speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other one, bass frequencies will not be produced properly and the overall sound quality will be poor. To test for proper speaker phasing, use the Sound / Speaker Test to cycle through the available music and sound.

Speaker Phase Testing cont. next page.

G()) SPKR

Speaker Phase Testing continued from previous page.

If the sound is not balanced or doesn't sound correct, check the speaker wiring.

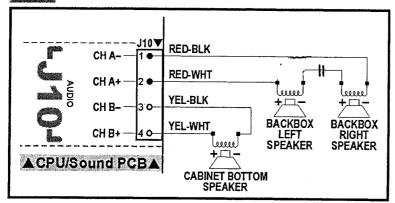

- 1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the Backbox Speaker's RED-BLK Wires and the Cabinet Speaker YEL-BLK Wire(s) are connected to the negative (–) terminal.
- 2. Disconnect the speaker output Connector J10 (AUDIO) from the CPU / Sound PCB (in the Backbox) and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers.
- 3. Make sure the positive (+) battery terminal is connected to the positive lead [J10, Pin-2, CH A+] (RED-WHT) or [J10, Pin-4, CH B+]


(YEL-WHT) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.

A Begin Burn-In

To initiate, from the DIAGNOSTICS MENU, select the "BURN" Icon. After selecting this Icon, press the Black [SELECT] Button to begin (initiate) the Burn-In Test. Ensure the Power Interlock Switch is pulled out if testing with the Coin Door open (required for coil function). Upon entering Burn-In Test, the game will exercise all CPU I/O Functions: Dot Matrix Display Test, Coil Cycling Testing, All Lamps Test and Sound / Speaker Test. Press the Green [BACK] Button, to pause and to view the cumulative Burn-In minutes. Press the Green [BACK] Button again to return to the DIAGNOSTICS MENU.

Note: To reset Burn-In minutes back to **0:00**, see Section **3**, Chapter **5**, **GO TO RESET MENU** (via the UTILITIES MENU), **Reset Factory Settings**. A CAUTION: Performing a FACTORY RESET will reset all other information as well (read the Utilities Section (**GO TO RESET MENU**), for more information).


To initiate, from the DIAGNOSTICS MENU, select the "DOT TEST" *Icon*. After selecting this *Icon* the Dot Matrix Test immediately begins. The Dot Matrix Display will immediately and continuously illuminate and cycle each of the 5 Tests for 1 pass each. To return to the DIAGNOSTICS MENU, press the Green [BACK] Button.

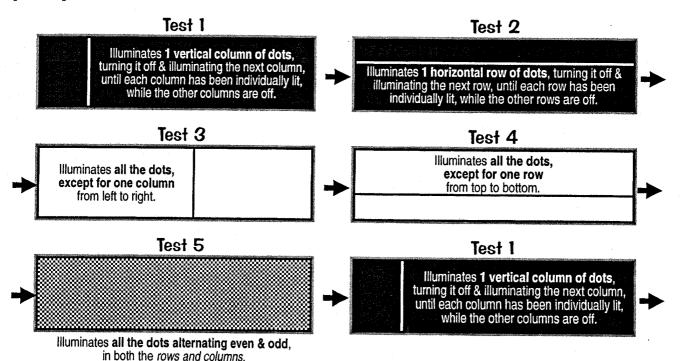

Ticket Dispenser Test

To initiate, from the DIAGNOSTICS MENU, select the "TIX" Icon. This Menu (Icon) will only appear if Standard Adjustment 56, Ticket Dispenser, is set to YES (Default = NO*). *Note: Some games shipped from the factory with a unique Dip Switch Setting will default to YES). To view and/or change your setting, see Adjustments Section (GO TO ADJUSTMENTS MENU). Please remember, if you install an optional Ticket Dispenser, and your default setting is "NO," you will have to reset it back to "YES" if a Factory Reset is performed.

After selecting this *Icon*, the *Ticket Dispenser Test* will start. With the Ticket Dispenser properly installed, manually feed your tickets into the dispenser. The dispenser will activate and pull in the first ticket. Press the **Black [SELECT] Button** (which energizes Coil #35, Aux 3: Switched Ground) to advance a ticket. Feeding your Tickets into the dispenser works because Coil #33, Aux 1: Ticket Advance (Enable) is always 'energized'. With a Ticket Meter installed, as one Ticket Passes through the Ticket Dispenser, one 'click' is fired to the Meter (Coil #34, Aux 2: Ticket Meter) for each ticket passing through. Dedicated Switch **D-19**, **Ticket Notch**, will also be indicated on-screen (*in combination with a audible sound*) as "closing" as the notch between the tickets passes through. In this test you can clear ticket jams and check and/or clear tickets in Escrow, if necessary. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.

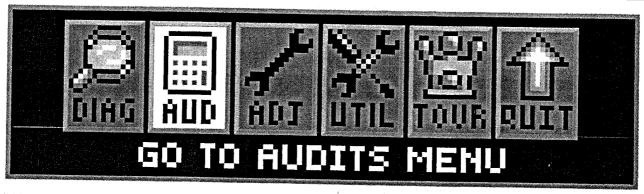

To initiate, from the MAIN MENU, select the "AUD" Icon. The AUDITS MENU provides 99* Audits for accounting purposes and for evaluation of Game Programming. The Audits are divided into 4 groups: • Earnings Audits purposes and for evaluation of Game Programming. The Audits are divided into 4 groups: • Earnings Audits [#1 - #13], • Standard Audits [#1 - #59], • Feature Audits (Programming Use Only) [#1 - #+] and • Tournament Audits [#1 - #14], "T AUD" Icon provided as an alternate access to Tournament Audits (*if data is available). For more information on the TOURNAMENT MENU, review the Tournament Section (GO TO TOURNAMENT MENU). Try the "DUMP AUDITS TO USB" feature to create a text file of your audits. Don't forget to set the DATE & TIME in the UTILITIES MENU. See the Utilities Section (GO TO UTILITIES MENU), for more information.

Audits which are named Proprietary are also for Future Expansion or Programming. Game code may get upgraded during production; compare all Audits in the Dot Matrix Display with the manual and make any corrections, as necessary. Audits are subject to change (with or without notice).

All AUDITS MENU Icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. NOTE: Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some Icons may appear non-functional or may not appear at all. Icons and/or functions, order and operation are subject to change.

In displays where changes can be made or to perform a function, use the GREEN Button to go [BACK], exit or escape, the RED Buttons to [</-] MOVE BACK/LEFT/[+/>] MOVE FORWARD/RIGHT to view the next audit in the group, and the BLACK Button to [SELECT] the sub-menus.

Earnings Audits [#1 - #13]

To initiate, from the AUDITS MENU, select the "EARN" Icon. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 TOTAL PAID CREDITS [0]: Total number of Paid Credits.
- FREE GAME PERCENTAGE [0%]: Percentage value is 'Total Free Plays' (Standard Audit 15) divided by 'Total Plays' (Standard Audit 16). #2
- AVERAGE BALL TIME [0:00]: In seconds, the average ball time is derived from the total play time divided by Standard Audit 1, Total Balls Played. #3
- AVERAGE GAME TIME [0:00]: The average game time is expressed in minutes and seconds. #4
- COINS THROUGH LEFT SLOT [0]: Total 'Left Coin Slot' Dedicated Switch (D-1) closures. #5
- COINS THROUGH RIGHT SLOT [0]: Total 'Right Coin Slot' Dedicated Switch (D-3) closures. #6
- COINS THROUGH CENTER SLOT [0]: Total 'Center Coin Slot' Dedicated Switch (D-2) closures. #7
- COINS THROUGH FOURTH SLOT [0]: Total '4th Coin Slot' Dedicated Switch (D-4) closures. #8
- COINS THROUGH FIFTH SLOT [0]: Total '5th Coin Slot' Dedicated Switch (D-5) closures. #9
- #10 TOTAL COINS [0]: Total amount of coins registered through all the Coin Slots.
- **TOTAL EARNINGS [USD 0.00] :** Total cash value accumulated since the last Factory Reset occurred *(reveiw the Utilities Section (GO TO RESET MENU), Reset Coin Audits).*
- #12 METER CLICKS [0]: Total number of money clicks accumulated. Based on the country's lowest coin denomination used for the game credit.
- #13 SOFTWARE METER [0]: Continuing total of Meter Clicks. This audit cannot be reset; the display shows the constant addition of Meter Clicks.

i mi (com)



Standard Audits [#1 - #59]

To initiate, from the **AUDITS MENU**, select the "S.P.I." *Icon*. The Dot Matrix Display will indicate the *audit number (in this group)*, *audit name* and the *audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 TOTAL BALLS PLAYED [0]: Total number of Regular and Extra Balls.
- #2 TOTAL EXTRA BALLS [0]: Total number of Extra Balls awarded.
- #3 **EXTRA BALLS PERCENTAGE [0%] :** Percentage value is 'Total Extra Balls' (Standard Audit **2**) divided by 'Total Plays' (Standard Audit **16**).
- #4 REPLAY 1 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 1.
- #5 REPLAY 2 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 2.
- #6 REPLAY 3 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 3.
- #7 REPLAY 4 AWARDS [0]: Total Awards (Credits, Extra Balls or Scores) for Level 4.
- #8 TOTAL REPLAYS [0]: Total Awards (Credits, Extra Balls or Scores) for exceeding Replay Score Levels.
- #9 **REPLAY PERCENTAGE** [**0%**]: Percentage value is 'Total Replays' (Standard Audit **8**) divided by 'Total Plays' (Standard Audit **16**). The percentage reflects replay total awards for exceeding replay score levels.
- #10 TOTAL SPECIALS [0]: Total Awards (Credits, Extra Balls, or Scores) for making Specials.
- #11 SPECIAL PERCENTAGE [0%]: Percentage value is 'Total Specials' (Standard Audit 10) divided by 'Total Plays' (Standard Audit 16).
- #12 TOTAL MATCHES [0]: Total Credits awarded for matching the last two digits of the score with the System-Generated Match Number at the end of the game. Percentage of Match Credits is adjustable from 0% to 10% or OFF by Standard Adjustment 19, Match Percentage, if enabled (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adjustments).
- #13 HIGH SCORE AWARDS [0]: Total Awards (Credits, Extra Balls, or Scores) for exceeding the High-Score-To-Date scores.
- #14 HIGH SCORE PERCENT [0%]: Percentage value is 'High Score Awards' (Standard Audit 13) divided by 'Total Plays' (Standard Audit 16).
- #15 TOTAL FREE PLAYS [0]: Total Free Credits for Replays, High-Score-To-Date, Specials and Match.
- #16 **TOTAL PLAYS [0]:** This total is derived by adding the sum of 'Total Paid Credits' (Earnings Audit 1) and 'Total Free Plays' (Standard Audit 15). Note: Free credits are not recorded in the Audit until actually used.
- #17 **0.0M-1.99M SCORES [00] :** Total number of games the Player's final score was between **0** and **1,999,990** points.
- #18 2.0M-3.99M SCORES [00]: Total number of games the Player's final score was between 2,000,000 and 3,999,990 points.
- #19 **4.0M-5.99M SCORES [00] :** Total number of games the Player's final score was between **4,000,000** and **5,999,990** points.
- #20 6.0M-7.99M SCORES [00]: Total number of games the Player's final score was between 6,000,000 and 7,999,990 points.
- **8.0M-9.99M SCORES [00] :** Total number of games the Player's final score was between **8,000,000** and **9,999,990** points.
- #22 10.0M-12.49M SCORES [00]: Total number of games the Player's final score was between 10,000,000 and 12,499,990 points.
- #23 12.5M-14.99M SCORES [00]: Total number of games the Player's final score was between 12,500,000 and 14,499,990 points.
- #24 **15.0M-17.49M SCORES [00] :** Total number of games the Player's final score was between **15,000,000** and **17,499,990** points.
- #25 **17.50M-19.99M SCORES [00] :** Total number of games the Player's final score was between **17,500,000** and **19,999,990** points.
- #26 **20.0M-24.99M SCORES [00] :** Total number of games the Player's final score was between **20,000,000** and **24,999,990** points.
- #27 **25.0M-29.99M SCORES [00] :** Total number of games the Player's final score was between **25,000,000** and **29,999,990** points.

Standard Audits 28-59 continued on the next page.

Standard Audits Continued



- #28 **30.0M-39.99M SCORES [00] :** Total number of games the Player's final score was between **30,000,000** and **39,999,990** points.
- #29 **40.0M-49.99M SCORES [00] :** Total number of games the Player's final score was between **40,000,000** and **49,999,990** points.
- #30 **50.0M-74.99M SCORES [00] :** Total number of games the Player's final score was between **50,000,000** and **74,999,990** points.
- #31 **75.0M–99.99M SCORES [00] :** Total number of games the Player's final score was between **75,000,000** and **99,999,990** points.
- #32 100.0M-149.99M SCORES [00]: Total number of games the Player's final score was between 100,000,000 and 149,999,990 points.
- #33 150.0+M SCORES: Total number of games the Player's final score was 150,000,000 points and over.
- #34 AVERAGE SCORES [00]: This total is derived by adding the Final Score of each game to a table and dividing this sum by 'Total Plays' (Standard Audit 16).
- #35 SERVICE CREDITS [0]: Total 'Green [SERVICE CREDIT] Button' Dedicated Switch (D-21) closures in Attract Mode (not while in the SERVICE MENU). See the Service Menu Section, Service Switch X4 Set Access & Use, for how to receive Service Credits. See the Utilities Section (GO TO RESET MENU), Reset Credits, for how to delete credits.
- #36 BALL SEARCH STARTED [0]: Total number of times the game performed a Ball Search.
- #37 LOST BALL FEEDS [0]: Total number of times the game added a pinball to play when it could not find a pinball after Ball Search (review the Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [Pinball Detection]).
- #38 LOST BALL GAME STARTS [0]: Total number of times the game started with a pinball missing from the ball trough at the start of a game (review the Diagnostics Section (GO TO DIAGNOSTICS MENU), Technicians Alert [Pinball Detection]).
- #39 LEFT DRAINS [0]: Total 'Left Outlane' Switch (24) closures.
- #40 **CENTER DRAINS [0] :** Total number of times the pinball had drained when the last switch closed was not the 'Left Outlane' (24) or the 'Right Outlane' Switch (29).
- #41 RIGHT DRAINS [0]: Total 'Right Outlane' Switch (29) closures.
- #42 TILTS [0]: Total 'Tilt Pendulum' Dedicated Switch (D-17) closures.
- TOTAL BALLS SAVED [0]: Total number of times this feature was used. This feature is adjustable from 0:01–0:15, AUTO or NO BALL SAVES (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adj. 48, Ball Save Time). This feature is enabled at the start of each pinball and is disabled as soon as a predetermined number of switches are "closed" or the allocated time has expired.
- #44 LEFT FLIPPER USED [0]: Total 'Left Flipper Button' Dedicated Switch (D-9) closures in Game Mode.
- #45 RIGHT FLIPPER USED [0]: Total 'Right Flipper Button' Dedicated Switch (D-11) closures in Game Mode.
- #46 0 1 MINUTE GAMES [0]: Total games in which the total game time was between 0:00 and 1:00 minute.
- #47 1 1.5 MINUTE GAMES [0]: Total games where play time was between 1:00 and 1:30 minutes.
- #48 1.5 2 MINUTE GAMES [0]: Total games where play time was between 1:30 and 2:00 minutes.
- #49 2 2.5 MINUTE GAMES [0]: Total games where play time was between 2:00 and 2:30 minutes.
- #50 2.5 3 MINUTE GAMES [0]: Total games where play time was between 2:30 and 3:00 minutes.
- #51 3 3.5 MINUTE GAMES [0]: Total games where play time was between 3:00 and 3:30 minutes.
- #52 3.5 4 MINUTE GAMES [0]: Total games where play time was between 3:30 and 4:00 minutes.
- #53 4-5 MINUTE GAMES [0]: Total games where play time was between 4:00 and 5:00 minutes.
- #54 5 6 MINUTE GAMES [0]: Total games where play time was between 5:00 and 6:00 minutes. #55 6 8 MINUTE GAMES [0]: Total games where play time was between 6:00 and 8:00 minutes.
- #56 8 10 MINUTE GAMES [0]: Total games where play time was between 8:00 and 10:00 minutes.
- #57 10 15 MINUTE GAMES [0]: Total games where play time was between 10:00 and 15:00 minutes.
- #58 15+ MINUTE GAMES [0]: Total games in which the total game time was 15:00 minutes and over.
- #59 RECENT REPLAY PERCENT [0%]: Percent figured with programming thresholds for a determined number of games. The % reflects replay total awards for exceeding replay score levels.

Standard Adjustments continued.



- REPLAY AWARD: Set to CREDIT, TICKET*, TOKEN* or EXTRA BALL. Factory Default = CREDIT. Set the #3 type of award to be given to the player when the appropriate Replay Score threshold or level is acheived. If awarding a *CREDIT*, *TICKET* or *TOKEN* is prohibited in your area, select **EXTRA BALL**. This adjustment is not shown if NONE is installed in Replay Type (Standard Adjustment 1).
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- REPLAY LEVELS: Set between 1 4 for the number of Replay Levels to be active. Factory Default = 1. This adjustment is not shown if NONE is installed in Replay Type (Standard Adjustment 1).
- AUTO REPLAY START: Set between 5,000,000 150,000,000 (increments of 1,000,000) for the Auto Replay Start threshold. Factory Default = __,000,000. This adjustment is shown only if AUTO is #5 installed in Replay Type (Standard Adjustment 1).
- DYNAMIC REPLAY START: Set between 5,000,000 150,000,000 (increments of 1,000,000) for the #6 Dynamic Replay Start threshold. Factory Default = ___,000,000. This adjustment is shown only if DYNAMIC is installed in Replay Type (Standard Adjustment 1).
- REPLAY LEVEL #1: Set between 5,000,000 150,000,000 (increments of 1,000,000). Factory Default = #7 ,000,000. Set the first or only Replay Level. This adjustment is shown only if FIXED is installed in Replay Type (Standard Adjustment 1).
- REPLAY LEVEL #2: Set between 5,000,000 150,000,000 (increments of 1,000,000). Factory Default = _____,000,000. Set the second Replay Level. This adjustment is shown only if FIXED is installed in Replay #8 Type (Standard Adjustment 1) and 2 is intalled in Replay Levels (Standard Adjustment 4).
- REPLAY LEVEL #3: Set between 5,000,000 150,000,000 (increments of 1,000,000). Factory Default = #9
- #10 **REPLAY LEVEL #4:** Set between **5,000,000 150,000,000** (increments of 1,000,000). Factory Default = ___,000,000. Set the fourth Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Levels** (Standard Adjustment 4).
- REPLAY BOOST: Set to YES or NO. Factory Default = YES. When set to YES, while FIXED or AUTO maintains the Replay Levels, Replay Boost works as follows: If the Replay Level is 7,000,000 (regardless of the Replay Percentage), and the Player scores 20M, and receives the Replay Award, the next game the Current Replay Level is added to this base. Thus the next game, the Replay Level is 14,000,000. The Player agains scores 20M. The next game the Player will need to achieve 21,000,000 to earn the Replay Award. If the Player does not achieve 21,000,000, the next game reverts back to the original 7,000,000 or the new adjusted level maintained by the Fixed or Autopercentaging Feature. This adjustment is shown only if AUTO or FIXED is installed in Replay Type (Standard Adjustment 1).
- #12 SPECIAL LIMIT: Set between 1 5, UNLIMITED or NO SPECIALS. Factory Default = 1. Set the maximum number of Specials that may be accumulated per game.
- #13 SPECIAL PERCENTAGE: Set between 1% 50%. Factory Default = 10%. This adjustment allows the operator to adjust how frequently the **Special Feature** is made available to the player. This adjustment is <u>not shown</u> if **NO SPECIALS** is installed in **Special Limit** (Standard Adjustment 12).
- SPECIAL AWARD: Set to CREDIT, TICKET*, TOKEN*, POINTS or EXTRA BALL. Factory Default = CREDIT. Select EX. BALL or POINTS if awarding a CREDIT or TICKET / TOKEN is prohibited in your area. This adjustment is not shown if NO SPECIALS is installed in Special Limit (Standard Adjustment 12). #14
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- #15 FREE GAME LIMIT: Set between 1 9, UNLIMITED or NO FREE GAMES. Factory Default = 5. Set the maximum number of Free Games that may be accumulated per game.
- #16 **EXTRA BALL LIMIT:** Set between 1 9, **UNLIMITED** or **NO EXTRA BALLS**. Factory Default = 5. Set the number of *Extra Balls* that may be accumulated per game.
- #17 EXTRA BALL PERCENTAGE: Set between 1% 50%. Factory Default = 25%. This adjustment allows the operator to adjust how frequently the Extra Ball Feature is made available to the player. This adjustment is not shown if NO EXTRA BALLS is installed in Extra Ball Limit (Standard Adjustment 16).
- #18 GAME PRICING: There are two (2) methods available for Coin Switch Programming. Standard & Custom. Set between AUSTRALIA 1 - UK 6 or CUSTOM. Factory Default = USA 10. Shortcut: Set Custom Pricing and instructions, review the Utilities Section, Set Custom Pricing. The appropriate Dip Switch Setting (Dip Sw. 1-8 location CPU/Sound PCB SW1) in relationship to the Pricing Scheme selected is important (view the tables on the following pages for more information).

Standard Adjustment 18, Game Pricing, continued on the next page.

Standard Adjustment 18, Game Pricing, continued.

USA & International (non-Euro) Standard Pricing Select Table

3:1:1 4				— u.	-,	nuaru Frici			
CPU/SOUND PCB	COUNTRY	COIN	MECHANIS	SMS (SWI	TCHES)	DRI	CING SCHE	JE .	Requires SPI
DIP SWITCH SW1	SETTING		STHR		SLOT:	Number of Plays (Coin Card(s)
SETTING	OPTION(S)	LEFT	CENTER	Access to the contract of the		See "Appendix J"		CARLON CONTROL	Part Number
		L Blat I	- CENTIEN	NICHT	41.1		***************************************	2000-00-00-00-00-00-00-00-00-00-00-00-00	Partituiliber
Pos. 1 2 3 4 5 6 7 8				····		USD // UNITED ST	ATES DOLLAF	<u> </u>	
ON	USA 1					1/0.25			755-5400-01-Y
OFF V V V V V		' i	1	i		1/0.50	2/0.75	3/1.00	755-5400-09-Y
[I DAIN IA DESK	USA 3			Ì		1/0.50	For USA 6 and USA	Tusa: 755-5400-02-Y	755-5400-02-Y
HIGHLIGHTED	USA 4					1/0.50	SA B NOIS: If player 2 plays Howeve	Tuse 755-5403-42-Y uses X4-25c quarters = \$1 bit = 3 playet	755-5400-02-Y
= Factory Default	USA 5		1			1/0.50 2/1.00	3/1.50	5/2.00	755-5400-08-Y
HIGHLIGHTED	USA 6	0.25	1.00	0.25			2 /'4 X 25¢'	3 /\$ 1.00 Bill	
	USA 7					275000 (27000000000000000000000000000000000			Used to promote the Bill Validator.
= Not Shown on Coin						1/0.50 2/1.00	4/1,50	6/2.00	
Card	USA 8		1	ļ		1/0.50	3/1.00		755-5400-00- Y
	USA 9			ĺ		1/1.00			755-5400-07-Y
	USA 10	· L				1/0.75	2/1.50	3/2.00	755-5400-11-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					AUD // AUSTRALIA	N DOLLARS /	/ SAUS]	
ON A A A	AUSTRALIA 1					1/1.00	3/2.00		755-5406-00-Y
OFF V V V	AUSTRALIA 2	0.20	1.00	2.00		1/1.00	O/ E. VV	1	(1 Side)
Pos. 1 2 3 4 5 6 7 8		L	· 	l			0011400 //	*****	(1 Orde)
ON A A			T		T	CAD // CANADIAN	DOLLARS // I	SCAN	755 5400 00 14
OFF VVVV	CANADA 1	0.25	0.25	1.00	2.00	1/0.50	2/0.75	3/1.00	755-5400-00-Y
						1,0100		0/1.00	-01-Y or-02-Y
ON A A A	CANADA 2	1.00	4	2.00		414.00			755-5400-10-Y
OFF V V V	[dollar door]	1.00		2.00		1/1.00	3/2.00		
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					HRK // CROATIAN	KUNA // Ekuna	1	
ON A A	0004714					1 1			755-5410-00-Y
OFF V V V	CROATIA	1	2	5		1/3	2/5		(2-Sided)
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					DKK // DANISH KR	ONED #1 K-1	J. Company	(n.o.aca)
ON A A	DENMARK 1		т т		1			1	755 5400 00 14
OFF V V V		1 1	5	10	20	1/3	2/5		755-5402-00-Y
		L					3/5 4/7	5/9 7/10	(2-Sided)
Pos. 1 2 3 4 5 6 7 8		·	7		***************************************	JPY // JAPANESE \	/EN // [¥]		
ON A A A	JAPAN 1	100		100		1/100			755-5408-01-Y
OFF V V V	JAPAN 2	100		100		1/100	3/200		(2-Sided)
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					LTL // LITHUANIA L	ITAI // [I +]		
ON A A A									755-5416-00-Y
OFF V V V	LITHUANIA	1 1	2	5		4 /4	100 miles		1.00.0410.00-1
				_		1/2			(1 Side)
	Default Highlighted								(1 Side)
Pos. 1 2 3 4 5 6 7 8	Default Highlighted]			TOKEN // Middle Ea	ast currency us	ed to buv token //	[TOKEN]
Pos. 1 2 3 4 5 6 7 8 ON A A A A	Default Highlighted MIDDLE EAST	token				TOKEN // Middle Ea	ast currency us	ed to buy token//	TOKEN 755-5416-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST	token		token			ast currency us	ed to buy token //	[TOKEN]
Pos. 1 2 3 4 5 6 7 8 ON A A A A A V V V Pos. 1 2 3 4 5 6 7 8	MIDDLE EAST	token				TOKEN // Middle Ea			TOKEN 755-5416-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1			token		TOKEN // Middle Ea			TOKEN 755-5416-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted	token				TOKEN // Middle Ea			755-5416-00-Y (use Side 1)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1			token		TOKEN // Middle Ea 1/1 NZD // NEW ZEAL A 1/1 1/1	ND DOLLAR /	/[\$NZD]	755-5416-00-Y (use Side 1)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted			token		TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA	ND DOLLAR /	/[\$NZD] {r]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1			token		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10	ND DOLLAR // 3/2 N KRONE // L	/[\$NZD] {r]	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2			token		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10	ND DOLLAR /	/[\$NZD] {r]	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3	1		token 2		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20	ND DOLLAR // 3/2 N KRONE // [I	/[\$NZD] {r]	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4	1 10	5	token 2 20		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20	3/2 N KRONE // [] 3/20 3/40	/[\$NZD] (r)	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3	1 10		token 2 20	CEPTOR ▼	TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20	3/2 N KRONE // [] 3/20 3/40	/[\$NZD] (r)	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted	10 ¥LEFTSW	5	token 2 20 RED TO BILL AC	CEPTOR ▼	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI	3/2 N KRONE // [] 3/20 3/40	/[\$NZD] (r)	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 3 Default Highlighted RUSSIA	1 10	5	token 2 20	CEPTOR ▼	TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20	3/2 N KRONE // [] 3/20 3/40	/[\$NZD] (r)	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted	10 ¥LEFTSW	5	token 2 20 RED TO BILL AC	CEPTOR ▼	TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5	3/2 N KRONE //[I 3/20 3/40 JBLE // [Rubk	/[\$NZD] <[]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO: AFRICA 1	10 VLEFTSW	5 ITCH CAN BE WE	token 2 20 RED TO BILL AC		TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI	3/2 N KRONE //[I 3/20 3/40 JBLE // [Rubk	/[\$NZD] <[]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted	10 ¥LEFTSW	5	token 2 20 RED TO BILL AC	CEPTOR ▼ 5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00	ND DOLLAR // 3/2 N KRONE // [3/20 3/40 JBLE // [Ruble	/[\$NZD] <[]	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/(2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO: AFRICA 1	10 VLEFTSW	5 ITCH CAN BE WE	token 2 20 RED TO BILL AC		TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00	3/2 N KRONE // [3/20 3/40 JBLE // [Ruble	([\$NZD] ([]]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO: AFRICA 1 SO: AFRICA 2 Default Highlighted	10 VLEFTSW 10 0.50	5 ITCH CAN BE WIF 5	token 2 20 RED TO BILL AC		TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KF	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr	/[\$NZD] {r] e]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/ (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5409-01-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A A ON A A A A A A A A A A A ON A A A A A A A A A A A A ON A A A A A A A A A A A A A ON A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A A ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SWEDEN 1	10 VLEFTSW	5 ITCH CAN BE WE	token 2 20 RED TO BILL AC		TOKEN // Middle Ea 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10	3/2 N KRONE // [3/20 3/40 JBLE // [Ruble	([\$NZD] ([]]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/(2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5409-01-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A A ON A A A A A A A A A ON B A A A A A A A ON B A A A A A A A A ON B A A A A A A A A ON B A A A A A A A A A ON B A A A A A A A A A A ON B A A A A A A A A A A A ON B A A A A A A A A A A A A A A ON B A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SUBJECT 1 SWEDEN 2	10 VLEFTSW 10 0.50	5 ITCH CAN BE WIF 5	20 RED TO BILL AC		TOKEN // Middle Ea 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5	3/2 N KRONE // [1 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr	/[\$NZD] {r] e]	755-5416-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y/ (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5409-01-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A A OFF A A A A A A A A A A A A A A A OFF A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO AFRICA 1 SO AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted	10 VLEFTSW 10 0.50	5 ITCH CAN BE WIF 5	20 RED TO BILL AC		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr	([\$NZD] ([]] (R] 3/20	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWETZERLAND 1	10 vLEFTSW 10 0.50	5 ITCH CAN BE WIF 5 1.00	20 RED TO BILL AC 1 2.00 10		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/20 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3	3/2 N KRONE // [1 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr] 2/15 1 3/20	([\$NZD] (r] (R) (R) (8)	755-5406-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5409-01-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A OFF A A A A A A A A A A A A ON A A A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A ON A A A A A A A A A ON B A A A A A A A A ON B A A A A A A A A A ON B A A A A A A A A A ON B A A A A A A A A A ON B A A A A A A A A A A ON B A A A A A A A A A A A ON B A A A A A A A A A A A ON B A A A A A A A A A A A ON B A A A A A A A A A A A A ON B A A A A A A A A A A A A ON B A A A A A A A A A A A A A A ON B A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2	10 VLEFTSW 10 0.50	5 ITCH CAN BE WIF 5	20 RED TO BILL AC		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/20 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr	([\$NZD] ([]] (R] 3/20	755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided) 755-5401-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWETZERLAND 1	10 vLEFTSW 10 0.50	5 ITCH CAN BE WIF 5 1.00	20 RED TO BILL AC 1 2.00 10		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/20 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3	3/2 N KRONE //[I 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // I kr 2/15 ICS // [S f] I/3	([\$NZD]) ([]) ([]) ([]) ([]) ([]) ([]) ([]) ([755-5406-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5409-01-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted	10 VLEFTSW 10 0.50	5 ITCH CAN BE WIF 5 1.00	20 RED TO BILL AC 1 2.00 10 5		TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAM 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANE SE	3/2 N KRONE //[I 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // I kr 2/15 ICS // [S f] I/3	([\$NZD]) ([]) ([]) ([]) ([]) ([]) ([]) ([]) ([755-5406-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5409-01-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2	10 vLEFTSW 10 0.50	5 ITCH CAN BE WIF 5 1.00	20 RED TO BILL AC 1 2.00 10		TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5	3/2 N KRONE //[I 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // I kr 2/15 ICS // [S f] I/3	([\$NZD]) ([]) ([]) ([]) ([]) ([]) ([]) ([]) ([755-5406-00-Y (use Side 1) 755-5406-00-Y (use Side 2) 755-5403-01-Y (or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5403-00-Y (2-Sided) 755-5403-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted	10 vLEFTSW 10 0.50 1	5 ITCH CAN BE WIF 5 1.00 5	20 RED TO BILL AC 1 2.00 10 5 10	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10	3/2 N KRONE //[] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3 4/4 I/3 7/4 DOLLAR // [T	([\$NZD] (r] 3] [R] 	755-5406-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y / (2-Sided) 755-5403-03-Y (2-Sided) 755-5409-01-Y (2-Sided) 755-5409-01-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 2 Default Highlighted	10 **LEFT SW 10 0.50 1 1 10 **STH CONSL	5 ITCH CAN BE WIF 5 1.00 5	20 20 10 5 10 EWITH CUSTO	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING	3/2 N KRONE //[] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3 4/4 I/3 7/4 DOLLAR // [T	([\$NZD] (r] 3] [R] 	755-5416-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided) 755-5405-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted TAIWAN Default Highlighted	10 **LEFT SW 10 0.50 1 1 10 **STH CONSL	5 ITCH CAN BE WIF 5 1.00 5	20 20 10 5 10 EWITH CUSTO	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/15 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00	3/2 N KRONE //[] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3 4/4 I/3 7/4 DOLLAR // [T	([\$NZD] (r] 3] [R] 	755-5416-00-Y (use Side 1) 755-5406-00-Y (side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided) 755-5405-00-Y (2-Sided)
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted TAIWAN Default Highlighted	10 **LEFT SW 10 0.50 1 1 10 **STH CONSL	5 ITCH CAN BE WIF 5 1.00 5	20 20 10 5 10 EWITH CUSTO	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KFI 1/10 1/5 CHF // SWISS FRAM 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00 4/1.00	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3	([\$NZD] (r] 3] [R] 	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5407-00-Y 755-5407-00-Y 755-5407-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A OFF A A A A A A A A A A A A A OFF A A A A A A A A A A A A A A A OFF A A A A A A A A A A A A A A A A A A	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted TAIWAN Default Highlighted UK 1 UK 2 UK 3	10 **VLEFT SW** 10 0.50 1 1 10 **STH COIN SLEFT** CE	5 ITCH CAN BE WIF 5 1.00 5 2 OT NOT AVAILABLE HIGH	20 20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO I 41H	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00 4/1.00 1/0.50 2/1.00	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3	([\$NZD] (r] 3] [R] 3/20 6/5 9/5 WD] 0S //[£]	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided) 755-5407-01-Y 755-5407-01
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A OFF V V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted TAIWAN Default Highlighted UK 1 UK 2 UK 3 UK 4	10 **VLEFT SW** 10 0.50 1 1 10 **STH COIN SLEFT** CE	5 ITCH CAN BE WIF 5 1.00 5	20 20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO II 41H	5.00	TOKEN // Middle Fa 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KFI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANE SE 1/10 GPB // UNITED KING 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3	([\$NZD] (r] 3] [R] 	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5407-00-Y 755-5407-00-Y 755-5407-00-Y
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V OFF V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V V OFF V V V V V V V V V OFF V V V V V V V V V V OFF V V V V V V V V V V V V V V V V V V	MIDDLE EAST Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO: AFRICA 1 SO: AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWIZERLAND 2 Default Highlighted TAIWAN Default Highlighted UK 1 UK 2 UK 3 UK 4 UK 5	10 **VLEFT SW** 10 0.50 1 1 10 **STH COIN SLEFT** CE	5 ITCH CAN BE WIF 5 1.00 5 2 OT NOT AVAILABLE HIGH	20 20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO I 41H	5.00 M PRICING V 51H 2£	TOKEN // Middle Fa 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/5 CHF // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00 4/1.00 1/0.50 2/1.00	3/2 N KRONE //	([\$NZD] (r] 3] [R] 3/20 6/5 9/5 WD] 0S //[£]	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided) 755-5407-01-Y 755-5407-01
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A OFF V V V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 4 Default Highlighted RUSSIA Default Highlighted SO. AFRICA 1 SO. AFRICA 2 Default Highlighted SWEDEN 1 SWEDEN 2 Default Highlighted SWITZERLAND 1 SWITZERLAND 2 Default Highlighted TAIWAN Default Highlighted UK 1 UK 2 UK 3 UK 4	10 **VLEFT SW** 10 0.50 1 1 10 **STH COIN SLEFT** CE	5 ITCH CAN BE WIF 5 1.00 5 2 OT NOT AVAILABLE HIGH	20 20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO I 41H	5.00	TOKEN // Middle Ea 1/1 NZD // NEW ZEALA 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2,00 1/3,00 SEK // SWEDISH KI 1/10 1/5 CHE // SWISS FRAN 1/1 2/2 3 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1,00 4/1,00 1/0,50 2/1,00 1/0,30 2/0,60 1/1,00	3/2 N KRONE // [] 3/20 3/40 JBLE // [Ruble ICAN RAND // 2/5.00 RONOR // [kr 2/15 ICS // [S f] I/3	([\$NZD] (r] 3] [R] 3/20 6/5 9/5 WD] 0S //[£]	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5407-01-Y* 755-5407-01-Y* 755-5407-01-Y* 755-5407-01-Y*
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V OFF V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V OFF V V V V V V V V V OFF V V V V V V V V V V V V V V V V V V	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 3 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SWEDEN 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 2 Default Highlighted UK 1 UK 2 UK 3 UK 4 UK 5 UK 6	10 VLEFTSW 10 0.50 1 1 10 V STH COIN SL LEFT CE 0.10 0	5 1.00 5 2 0 1.00 1.00 1.00 1.00 1.00 1.00 1.00	20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO T. 4TH	5.00 M PRICING V SIH 2£ Coln Only	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/15 CHF // SWISS FRAN 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60 1/1.00 3/2.00	3/2 N KRONE //	([\$NZD]) ([R]) ([R	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5410-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5405-00-Y (2-Sided) 755-5407-01-Y* 755-5407-01-Y*
Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A OFF V V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A OFF V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A OFF V V V V V V Pos. 1 2 3 4 5 6 7 8 ON A A A A A A A A A A A A A A A A A A A	Default Highlighted NEW ZEALAND 1 NEW ZEALAND 2 Default Highlighted NORWAY 1 NORWAY 2 NORWAY 3 NORWAY 3 Default Highlighted RUSSIA Default Highlighted SO, AFRICA 1 SO, AFRICA 1 SO, AFRICA 2 Default Highlighted SWEDEN 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 1 SWITZERLAND 2 Default Highlighted UK 1 UK 2 UK 3 UK 4 UK 5 UK 6	10 **VLEFT SW** 10 0.50 1 1 10 **STH COIN SLEFT** CE	5 1.00 5 2 0 1.00 1.00 1.00 1.00 1.00 1.00 1.00	20 RED TO BILL AC 1 2.00 10 5 10 E WITH CUSTO T. 4TH	5.00 M PRICING V 51H 2£	TOKEN // Middle Fa 1/1 NZD // NEW ZEAL A 1/1 1/1 1/1 NOK // NORWEGIA 1/10 1/10 1/20 1/20 RUB // RUSSIAN RI 1/5 ZAR // SOUTH AFR 1/2.00 1/3.00 SEK // SWEDISH KI 1/10 1/15 CHF // SWISS FRAN 1/1 3/2 5 TWD // TAIWANESE 1/10 GPB // UNITED KING 3/1.00 4/1.00 1/0.50 2/1.00 1/0.30 2/0.60 1/1.00 3/2.00	3/2 N KRONE //	([\$NZD]) ([R]) ([R	755-5416-00-Y (use Side 1) 755-5406-00-Y (use Side 1) 755-5406-00-Y (Side 2) 755-5403-01-Y or -02-Y (2-Sided) 755-5403-03-Y (2-Sided) 755-5411-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5404-00-Y (2-Sided) 755-5407-01-Y* 755-5407-01-Y* 755-5407-01-Y* 755-5407-01-Y*

Standard Adjustment 18, Game Pricing, continued.

Euro 1-12 Summary & International (Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP SWITCH SW1 SEITING Pos. 1 2 3 4 5 6 7 8	COUNTRY SETTING OPTION(S) Default Highlighted	COIN I	MECHANI S THF CENTER	<u>≀U</u>	/ITCHES) S L O T :	Number of Plays See "Appendix J	RICING SCHEM (Credits) for Price of for Coin Cards P	Amount Shown Examples & Infol	Requires SPI Coin Card(s) Part Number
ON S E E B E L C W OFF S E T T I N G S Euro 1-12 are alternate settings for countries using the Euro.	Euro 1 Euro 2 Euro 3					1/0.50 1/0.50 2/1.00 1/0.50		08 // [€] 5/2.00	755-5401-01-Y 755-5401-02-Y
HIGHLIGHTED = Factory Default	Euro 4 Euro 5 Euro 6 Euro 7	0.50	1.00	2.00	optional 0.20	1/0.50 2/1.00 1/0.50 3/1.00 2/0.50	3/1.50 4/1.50	6/2.00 7/2.00	755-5401-03-Y 755-5401-04-Y 755-5401-05-Y 755-5401-06-Y
HIGHLIGHTED = Not Shown on Coin Card	Euro 8 Euro 9 Euro 10				optional	1/1.00 2/2.00 1/1.00 1/1.00	3/3,00 3/2,00 2/1,50	5/4.00 3/2.00	755-5401-07-Y 755-5401-08-Y 755-5401-09-Y
For a different Euro 1-12 or CUSTOM* fo	Euro 11 Euro 12 Euro Pricing Scr r new setting (refe	ama (oth				1/1.00 1/1.00 2/1.00 4/2.00	3/2.00 4/2.00 6/3.00	7/3.00	755-5401-10-Y 755-5401-11-Y 755-5401-12-Y

Pos. 1 2 3 4 5 6 7 8	Default Highlighted	a.	JOVE LUIU	1-12 Sum	imary). Kee	p the Country	Dip Switch Set	ting the same	as listed below.
ON 🛦	AUSTRIA			T		EUR // EUROP	EAN UNION EUR	(1/\ 2O	•
OFF VVVV	Euro 9	0.50	1.00	2.00		1/1.00	2/1.50	2/2.00	755-5401-09-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted		<u> </u>	<u>.L</u>		1	2/1.50	3/2.00	100
ON A	BELGIUM			T			-		
OFF V V V V	Euro 1	0.50	1.00	2.00		1/0.50			755-5401-01-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted		 	<u> </u>		1,0.00			
ON A A	FINLAND			T				•	
OFF V V V V	Euro 8	0.50	1.00	2.00		1/1.00	3/2.00	4.00	755-5401-08-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted		L	L			3/2.00		
ON A A	FRANCE						T		
OFF V V V V	Euro 10	0.50	1.00	2.00		1/1.00	3/2.00	7/3.00	755-5401-10-Y
Pos. 1 -2 -3 -4 -5 -6 -7 -8	Default Highlighted		···				3/2.00	7/3.00	$(x,y) \in \mathbb{R}^{n} \times \mathbb{R}^{n}$
ON A A A	GERMANY 1					1/0.50	1		
OFF VVV	GERMANY 2	0.50	1.00	2.00		1/0.50			755-5401-01-Y
	GERMANY 3			2.00	1	1/0.50 2/1.00		5/2,00	755-5401-02-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					1/0.50 2/1.00	3/1.50	6/2.00	755-5401-04-Y
ON A A A A	GREECE							***************************************	
OFF V V V	Euro 8	0.50	1.00	2.00		1/1.00	3/2.00		755-5401-08-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted		<u> </u>				3/2.00		
ON A	ITALY 1		Γ					Microsophic	
OFF V V V V	ITALY 2	0.50		0.50		1/0.50			755-5401-01-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted					1/1.00	3/2.00		755-5401-08-Y
ON A NI	ETHERLANDS	2 - 2						(Mariento-melian-basica	
OFF V V V V	Euro 3	0.50	1.00	2.00		1/0.50	3/1.00		755-5401-03-Y
Pos. 1 2 3 4 5 6 7 8	Default Highlighted						0/1:00		
ON A	PORTUGAL						(MAXXIV. 4444)		
OFF VV	Euro 1	0.50		0.50		1/0.50			755-5401-01-Y
	Default Highlighted		- L			170.30			
ON A	SPAIN								
OFF V V V	Euro 8	0.50	1.00	2.00		1/1.00	3/2.00		755-5401-08-Y
Distriction -							5/2.00		
HIGHLIGHTED = Factor	y Default	HIGHLIGHT	ED = No	t Shown a	on Coin Car	rd ·			
ATNO STORES AND SERVICE AND					Join Gai	u			

For the associated Coinage Card required if the Factory Default Setting was changed, view on-line at: http://www.sternpinball.com/coinagecards.shtml

You can download and print the replacement card. Adobe® Reader 5.0 or higher required (links on site). Use Yellow Card Stock: ASTROBRIGHTS® SOLAR YELLOW #65 FROM WAUSAU PAPER PRODUCTS (Stock #22731)

- #19 MATCH PERCENTAGE: Set between 0% 10% or OFF. Factory Default = 9%. At 0% the Match Animation Feature occurs at the end of the game but never awards the Match Award (Standard Adjustment 20). Set to OFF, no Match Animation Feature is shown.
- #20 MATCH AWARD: Set to CREDIT, TICKET* or TOKEN*. Factory Default = CREDIT. This adjustment is not shown if OFF is installed in Match Percentage (Standard Adjustment 19).
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- #21 BALLS PER GAME: Set between 1 10. Factory Default = 3. Set the number of balls per game.

Standard Adjustments 22-36 continued on the next page. Standard Adjustments continued.



- #22 **TILT WARNINGS:** Set between **0 3**. Factory Default = **2**. Set the number of Plumb Bob Tilt Switch closures before the ball in play is tilted. *Each closure generates an audible alert and/or display alert.*
- #23 CREDIT LIMIT: Set between 4 50. Factory Default = 30. Set the maximum credits allowed.
- #24 **ALLOW HIGH SCORES:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, if a player exceeds the Default Grand Champion or 1-4 High Scores, the player may receive a **High Score Award** (Standard Adjustment 25) and enter their 3 Initials or 10-Letter Name (Standard Adjustment 36). Set to **NO** to disable this feature. The following Standard Adjustments 25-37 are not shown if **NO** is installed.
- #25 HIGH SCORE AWARD: Set to CREDIT, TICKET* or TOKEN*. Factory Default = CREDIT. Set the type of award to be given to the player when the appropriate Grand Champion Score or High Score #1 #4 threshold or level is acheived. If awarding a CREDIT, TICKET or TOKEN is prohibited in your area, install NO in Allow High Scores (Standard Adjustment 24). This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- *Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.
- #26 **GRAND CHAMPION AWARDS:** Set between 0-5. Factory Default = 1. Set the number of **High Score Award**(s) (Std. Adj. 25), awarded for exceeding the Grand Champion Score (Standard Adjustment 31).

 This adjustment is <u>not shown</u> if **NO** is installed in **Allow High Scores** (Standard Adjustment 24).
- #27 HIGH SCORE #1 AWARDS: Set between 0 3. Factory Default = 1. Set the number of High Score Award(s) (Std. Adj. 25), awarded for exceeding the High Score #1 (Standard Adjustment 32). This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #28 HIGH SCORE #2 AWARDS: Set between 0 2. Factory Default = 0. Set the number of High Score Award(s) (Std. Adj. 25), awarded for exceeding the High Score #2 (Standard Adjustment 33). This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #29 HIGH SCORE #3 AWARDS: Set between 0 1. Factory Default = 0. Set the number of High Score Award(s) (Std. Adj. 25), awarded for exceeding the High Score #3 (Standard Adjustment 34).

 This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #30 HIGH SCORE #4 AWARDS: Set between 0 1. Factory Default = 0. Set the number of High Score Award(s) (Std. Adj. 25), awarded for exceeding the High Score #4 (Standard Adjustment 35). This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #31 GRAND CHAMPION SCORE: Set between 1,000,000 1,000,000,000 (increments of 1,000,000).

 Factory Default = __,000,000. Set the desired Grand Champion Score level a player needs to exceed to earn the High Score Award (Standard Adjustment 25). A score higher than the default, cannot be reset by Standard Adjustment 37, HSTD Reset Count. The Grand Champion Score will revert to the Factory Default Score ONLY if a Reset Grand Champion is performed in the RESET MENU (via the UTILITIES MENU) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #32 HIGH SCORE #1: Set between 1,000,000 1,000,000,000. Factory Default = ___,000,000. Set the desired High Score #1 level a player needs to exceed to earn the High Score Award (Standard Adjustment 25). A score higher than the default, will be reset by Standard Adjustment 37, HSTD Reset Count. The High Score will revert to the Factory Default Score ONLY if a Reset High Scores is performed in the RESET MENU (via the UTILITIES MENU) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).
- #33 **HIGH SCORE #2:** Set between **1,000,000 1,000,000,000**. Factory Default = ___,000,000. Set the desired **High Score #2** level a player needs to exceed ... (continued in Standard Adjustment **32** definition above).
- #34 HIGH SCORE #3: Set between 1,000,000 1,000,000,000. Factory Default = __,000,000. Set the desired High Score #3 level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #35 HIGH SCORE #4: Set between 1,000,000 1,000,000,000. Factory Default = ___,000,000. Set the desired High Score #4 level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #36 HSTD (HIGH SCORE TO DATE) INITIALS: Set to 3 INITIALS or 10 LETTER NAME. Factory Default = 3 INITIALS. When set to 3 INITIALS, the player is allowed only 3 initials to input. When set to 10 LETTER NAME, the player is allowed to enter 10 initials to input. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).

Standard Adjustments continued.



- #37 HSTD (HIGH SCORE TO DATE) RESET COUNT: Set between 100 9900 or OFF (increments of 100).
 Factory Default = 2000. Set the number of games between "automatic resets" of High Scores back to the Factory Defaults for ONLY Standard Adj. 32 35, High Score #1 #4. The High Score will revert to the Factory Default Scores when the number of games stated is reached. Reset High Scores can be performed in the RESET MENU (via the UTILITIES MENU) anytime or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adj. 24).
- #38 FREE PLAY: Set to YES or NO. Factory Default = NO. When set to YES, no coins are required for Game Play.
- #39 **LANGUAGE:** Set to **ENGLISH**, **GERMAN**, **FRENCH**, **SPANISH** *or* **ITALIAN**. Factory Default = **ENGLISH**. Set the language for the game. Language of game is also shown in the Dot Display (along with the Game Title and code version) at the start-up routine which follows a game reset *or* power-up.
- PLAYER LANGUAGE SELECT: Set to YES or NO. Factory Default = YES. When set to YES, after the player presses the Start Button (to start a game with adequate credit), the player has the option to choose a language by pressing either Flipper Button before game start (options of languages installed are shown on the Dot Display). Note: If set to NO or if only one language is installed and the setting is set to YES, the game will start immediately after the Start Button press. Language(s) available are dependent on game destination from the factory. Other languages may be available on-line for download and installed on your game. With the proper dip switch installed, the language option(s) can be changed. For more information or help, call Technical Support at 800-542-5377 (708-345-7700).
- #41 CUSTOM MESSAGE: Set to ON, CHANGE or OFF. Factory Default = ON. Shortcut: Enter Custom Message and instructions, review the Utilities Section, Enter Custom Message.
- #42 FLASH LAMP POWER: Set to NORMAL, OFF or DIM. Factory Default = NORMAL. When set to DIM, the Flash Lamps impulse power is reduced by 25% and when set to OFF the Flash Lamps will not flash. For Flash Lamps used in this game, Go To Flash Lamps Menu via the DIAGNOSTICS MENU (see the Diagnostics Section).
- #43 COIL PULSE POWER: Set to NORMAL, HARD or SOFT. Factory Default = NORMAL. When set to HARD, the coil pulse power is *increased* by 12.5% of the normal pulse rate. When set to SOFT the coil pulse power is *decreased* by 12.5% of the normal pulse rate. This adjustment is provided to compensate for Low Line or High Line voltage conditions where the solenoids (coils) appear to kicking too weak or too hard. Adjust as required.
- #44 KNOCKER VOLUME: Set to NORMAL, OFF or LOW. Factory Default = NORMAL. When set to LOW, the volume is decreased 50%. When set to OFF, no sound is heard when the "knocker" is sounded. Test the knocker sound in the Fire Knocker Test via the DIAGNOSTICS MENU (see Section 3, Chapter 2, GO TO DIAGNOSTICS MENU, Page 19).
- #45 **GAME RESTART:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, a new game may be started during any ball after the first ball is completed (if credits allow). Pressing the Start Button during the first ball will add additional players (up to 4, if credits allow). When set to **NO**, the game disables the Start Button after the first ball until the final ball is in play.
- #46 **BILL VALIDATOR:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, in **Game Attract Mode** an "Insert Bill Animation" is shown in the display (or just the absense of the Coin Animation). When set to **NO**, an "Insert Coin Animation" is shown. (This adjustment will appear when implemented).
- #47 **MUSIC VOLUME:** Set between 1 15. Factory Default = 1. After volume is set via Service Buttons this adjustment can be utilized to adjust the background music (1 all the way on, 15 all the way off) while keeping the Special Sound Effects at the same level.
- #48 BALL SAVE TIME: Set between 0:01 0:15, AUTO or NO BALL SAVES. Factory Default = 0:05. When set to NO BALL SAVES this feature is unavailable. Set between 0:01 through 0:15 (single increments) for the ball to be sent back into play if the time set is not met (per ball). Set to AUTO to automatically adjust the Ball Save Timer based on the average ball time.
- #49 **TIMED PLUNGER:** Set to **OFF** or **0:01 1:00**. Factory Default = **OFF**. The plunger will "Autoplunge" the ball (at the time set) when the ball is at the beginning of play, waiting for the player.
- #50 FLIPPER BALL LAUNCH: Set to OFF, LEFT FLIPPER, RIGHT FLIPPER, EITHER FLIPPER or BOTH FLIPPERS. Default is OFF. This feature allows the player to operate the Auto Ball Launch with the Flipper Button(s) depending on which setting is chosen.

Standard Adjustments continued.



- #51 COINDOOR BALL SAVER: Set to YES or NO. Factory Default = NO. When set to NO, this feature is not available. When set to YES, this feature allows the Coin Door to be opened during game play; the ball will drain but the game will be placed "on hold". When the Coin Door is closed, the pinball will return to the Shooter Lane, and the game will resume. Useful at locations where technicians change the cash box regularly at exact times of the day where players can be on the game.
- #52 **COMPETITION MODE:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. Set to **YES**, this feature will equalize random game features and global score values during multi-player games by predetermined competition rules set by programming. If an **Install Competition** was made via the **INSTALLS MENU** (which automatically changes this setting to **YES**), and this setting was changed back to **NO**, the **Competition Mode** will be turned **OFF** (cancelled).
- #53 CONSOLATION BALL: Set to YES or NO. Factory Default = YES. When set to YES, the EXTRA BALL (lamp insert, location varies) will be lit on the last ball in play, if certain programming criteria is met.
- #54 **FAST BOOT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **NO** or if you hold both **Flipper Buttons** during Power-Up, this feature is not available and will display all normal Power-Up screens. When set to **YES**, the game will not display the normal informative Power-Up screens, specifically the CPU Version screen and the Location/Game ID screen. Regardless of the setting, normal Power-Up safety checks are still performed. (*This adjustment will appear when implemented*).
- #55 Q24 OPTION: Set to COIN METER, TOKEN DISPENSER or KNOCKER. Factory Default = COIN METER. This Coil (Solenoid) Location is left "open" at the Factory to allow for these optional Mechanisms to be added to the game. If selecting TOKEN DISPENSER, Standard Adjustments 3, 14, 20 & 25 should be changed to TOKEN. Call Tech. Support at 1-800-542-5377 if more information is required on this option.
- #56 **TICKET DISPENSER:** Set to **YES** or **NO**. Factory Default = **NO**. This adjustment is required only for games which have an optional Deltronics (DL-1275-2 PCB Style, SPI Part Nr. 515-7275-00) Ticket Dispenser installed. Unique CPU Sound Bd. Dip Switch Setting required, changes the Default to **YES**.
- #57 PLAYER COMPETITION: Set to YES or NO. Factory Default = YES. Competition Mode unrandomizes feature events, and standardizes game play and rule sets (varies from game to game) for fair competitions. With at least one credit posted, or with the game set for 'FREE PLAY', during the game-over Attract Mode, press the Left Flipper Button and hold it in for approximately one second. The following message will appear on the display for approximately 10 seconds: 'COMPETITION MODE READY ... PRESS START NOW'. If a game is started (either by pressing the 'START' button for a regular game, or by pressing the 'TOURNAMENT START' button for a tournament game) while this message appears on the display, then competition mode will be enabled for all players during the game. General rules are covered in the Instruction Card. Other Hints and/or Rules can be made known on this game either visually (the Dot Display or Flashing Light Inserts) or can be audible.
- #58 **TEAM SCORES:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, then Team Play will be made available. *Team Play only works in a 4-Player Game.* The totals for Players 1 / 3 (Team 1) & Players 2 / 4 (Team 2) are then displayed individually *as well as* the combined score for **BOTH TEAMS** to enable **Team Play (Doubles)**. (This adjustment will appear when implemented).
- #59 **LOCATION ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a location identification number to the audit print-out sheet. (Will not be affected by a Factory Reset.)
- #60 **GAME ID:** Set between **0** to **9999**. Factory Default = **0**. This adjustment allows the operator to assign a game identification number to the audit print-out sheet. (Will not be affected by a Factory Reset.)
- #61 **TIME FORMAT:** Set to **12-HOUR** or **24-HOUR**. Factory Default = **12-HOUR**. This adjustments determines how the time is displayed. *Time used for Tournament and Data Dumps where a time stamp is required.*
- #62 COIN INPUT DELAY: Set between 30 to 60 or OFF. Factory Default = 30. This adjustment creates a short time delay between the moment the coin is inserted into the Coin Slot to the moment the CPU/Sound PCB registers the coin (30 = approxiamately 1/2 second).
- #63 **LOST BALL RECOVERY:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, at the start of the 5th consecutive ball search (with no scoring between searches), the game will consider any balls in play to be permanently lost and will attempt to recover from this situation by serving a new ball into play from the ball trough. Set to **NO** (to suppress this adjustment behavior) for the game to perform the "ball search"

STANDARD ADJUSTMENTS [#1 - #63] ▼

	STANDADD	400			0 [#1 - #00] V	·
Nr.	ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA YOUR DEFAULT SETTING
1	1151 571 111 5	AUTO		32	HIGH SCORE #1	.000.000
2	TOTAL TITLE TO THE TOTAL	10%		33	HIGH SCORE #2	_,000,000
3	TIEL ENT ATTAILD	CREDIT		34	HIGH SCORE #3	_,000,000
4	· ILLI FAI FFAFFO	1		35	HIGH SCORE #4	.000,000
5	7.010 HEI EAI OIAIII	,000,000		36	HSTD INITIALS	3 INITIALS
6	DINAMO NEI EAI SIANI	,000,000		37	HSTD RESET COUNT	2000
7	* REPLAY LEVEL #1	,000,000		38	FREE PLAY	NO
8	That here! Lake Vinte #4	,000,000		39	LANGUAGE	ENGLISH
9	‡ REPLAY LEVEL #3	,000,000		40	PLAYER LANGUAGE SELECT	YES
10	‡ REPLAY LEVEL #4	,000,000		41	CUSTOM MESSAGE	ON
11	‡ REPLAY BOOST	YES		42	FLASH LAMP POWER	NORMAL
12	SPECIAL LIMIT	.1		43	COIL PULSE POWER	NORMAL
13	‡ SPECIAL PERCENTAGE	10%		44	KNOCKER VOLUME	NORMAL
14	SPECIAL AWARD	CREDIT		45	GAME RESTART	YES
15	FREE GAME LIMIT	5		46	BILL VALIDATOR	NO
16	EXTRA BALL LIMIT	5		47	MUSIC VOLUME	1
17	‡ EXTRA BALL PERCENTAGE	25%		48	BALL SAVE TIME	0:05
18	GAME PRICING	USA 10		49	TIMED PLUNGER	OFF
19	MATCH PERCENTAGE	9%		50	FLIPPER BALL LAUNCH	OFF
20	MATCH AWARD	CREDIT		51	COINDOOR BALL SAVER	NO
21	BALLS PER GAME	3		52	COMPETITION MODE	NO
22	TILT WARNINGS	2		53	CONSOLATION BALL	YES
23	CREDIT LIMIT	30		54	FAST BOOT	YES
24	ALLOW HIGH SCORES	YES		55	Q24 OPTION	COIN METER
25	HIGH SCORE AWARD	CREDIT		56	TICKET DISPENSER	NO
	GRAND CHAMPION AWARDS	1		57	PLAYER COMPETITION	YES
27	HIGH SCORE #1 AWARDS	1		58	TEAM SCORES	NO
28	HIGH SCORE #2 AWARDS	0		59	LOCATION ID	0
29	HIGH SCORE #3 AWARDS	0		60	GAME ID	0
30	HIGH SCORE #4 AWARDS	0		61	TIME FORMAT	12-HOUR
31	GRAND CHAMPION SCORE	,000,000		62	COIN INPUT DELAY	30
	one Defending O-Min			63	LOST BALL RECOVERY	YES

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47).

‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. Note: If Game Dip Switch other than USA is installed, different Defaults will appear.


Feature Adjustments [#1 - #+]

To initiate, from the ADJUSTMENTS MENU, select the "GAME" Icon. The Dot Matrix Display will indicate the adjustment number (in this group), adjust. name, adjust. setting and comment line. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

>>> FACTORY RESET or CODE UPDATE NOTE: Don't forget, any changes you make to your adjustments will revert back to the Factory Default settings if you perform a Factory Reset or update your Game Code. See Utilities Section (GO TO RESETS MENU and GO TO USB MENU).

View the Coils Detailed Chart Menu to see if this game is Shaker Motor Enabled. If it is, set the options in the Feature Adjustment as seen below. (typically the last one).

SHAKER MOTOR (OPTIONAL): Set to NONE, MINIMAL USE, MODERATE USE or MAXIMAL USE.
Factory Default = MODERATE USE. Set to any of the varying "... USES" if an Optional Shaker Motor Kit
(SPI Part Number 502-5027-00) was installed correctly in this pinball machine. See the assembly (kit)
on the last page of Blue Pages (Major Assemblies). Also see Shaker Motor Coil (Q8) in the Coils
Detailed Chart Table at the begining of this Service Game Manual or the beginning of the Yellow Pages.

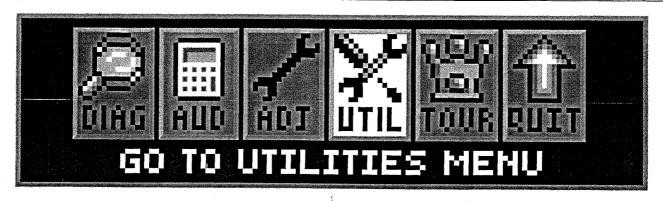


To initiate, from the MAIN MENU, select the "UTIL" Icon. The UTILITIES MENU provides ways to quickly and easily customize your game with Installs (pre-sets for game Standard & Feature Adjustments), set-up a Custom Message (short-cut to Standard Adjustment 41, Custom Message), set-up Custom Pricing (short-cut to Standard Adjustment 18, to the Custom Pricing Sub-Menu), set-up the Date and Time (required if the date and time is needed to be accurate for data dumps and for tournaments), reset certain particular game data or perform a complete Factory Reset and to download game data, update or backup game code in the USB MENU.

All UTILITIES, INSTALLS, RESETS MENU and USB MENU *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. *NOTE:* Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional *or* may not appear at all. *Installs* (*Adjustments*), *Icons* and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings (review Install Factory on the next page).

In displays where changes can be made *or* to perform a function, use the **GREEN Button** to go [**BACK**], exit *or* escape, the **RED Buttons** to [< / –] MOVE BACK / LEFT / [+ / >] MOVE FORWARD / RIGHT to view the next audit in the group, and the **BLACK Button** to [**SELECT**] the sub-menus.

Go To Installs Menu

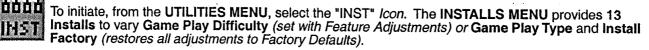

For detailed customization or to check current Adjustments Defaults (either changed by YOU in the Adjustments Menu or by this INSTALLS MENU or for Factory Default Settings), see Section 3, Chapter 4, GO TO ADJUSTMENTS MENU. After completing one or more of the Installs in this chapter, go back to the ADJUSTMENTS MENU to see which Standard and/or Feature Adjustments have changed (Feature Adjustments and/or settings are subject to change during production, and may differ than what is described in the tables at the end of this chapter). The Dot Display will indicate if a setting is a Factory Default or not. If the settings are not to your liking, perform one of the following:

- 1.: Manually change the Standard & Feature Adjustments Settings (perform this task in the ADJUSTMENTS MENU, see the Adjustments Section).
- 2.: Install Factory (see the last install) on how to reset all of the Standard & Feature Adjustments back to the Factory Default Settings.

Multiple **Installs can be set** to vary game play; however, for **Installs** that have *one or more* Adjustments in common, the *last* "Install" selected & *activated*, will **supersede** any previously changed Adjustment(s) from any prior **Installs**. Any adjustments which you changed and are not affected by the Install will remain as set.

For example, if you want a **5-BALL Game** set to **EXTRA EASY**: Select and activate the "5BAL" Icon first (which will typically change any **Feature** Difficulty Adjustments to **HARD**), then select & activate the "X.EZ" Icon to change back the Difficulty Adjustments to **EXTRA EASY**. However, if the "X.EZ" Icon was selected & activated first, then the "5BAL" Icon was selected & activated, the game will be set to a **5-BALL Game** set to **HARD**.

Remember, use the GREEN Button to go [BACK], exit or escape and the BLACK Button to [SELECT] to INSTALL your new setting(s).



Install Extra Easy

To initiate, from the INSTALLS MENU, select the "X.EZ" *Icon.* The Dot Matrix Display will indicate the INSTALL EXTRA EASY. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.

Installs Menu continued on the next page.

Installs Menu continued from previous page.



Install Easy

To initiate, from the INSTALLS MENU, select the "EASY" *Icon*. The Dot Matrix Display will indicate the INSTALL EASY. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



Install Medium (Normal or Factory Settings)

To initiate, from the INSTALLS MENU, select the "FACT" *Icon*. The Dot Matrix Display will indicate the INSTALL MEDIUM. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



Install Hard

To initiate, from the INSTALLS MENU, select the "HARD" *Icon*. The Dot Matrix Display will indicate the INSTALL HARD. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



Install Extra Hard

To initiate, from the INSTALLS MENU, select the "X.HD" *Icon*. The Dot Matrix Display will indicate the INSTALL EXTRA HARD. Follow the on-screen prompts to perform the Install. Set the Game Play Difficulty level.



👊 🗓 Install 3-Ball or 5-Ball

To initiate, from the INSTALLS MENU, select either the "3BAL" or "5BAL" *Icons*. The Dot Matrix Display will indicate the INSTALL 3-BALL or 5-BALL depending on choice. Follow the on-screen prompts to perform the Install. Set the Game Play Type to 3 Balls per game

Factory Default is 3 Balls per game, not including extra balls earned by the player, if any).



🖫 🖟 Install Competition

To initiate, from the INSTALLS MENU, select the "COMP" Icon. The Dot Matrix Display will indicate the INSTALL COMPETITION. Follow the on-screen prompts to perform the Install. Set the Game Play Type to "Tournament" Rules. Programming varies and is subject to change.



Install Director's Cut

To initiate, from the INSTALLS MENU, select the "DCUT" *Icon.* The Dot Matrix Display will indicate the INSTALL DIRECTOR'S CUT. Follow the on-screen prompts to perform the Install. Set the Game Play Type to programmer's choice. *Programming varies and is subject to change.*



Install Home Play

To initiate, from the **INSTALLS MENU**, select the "HOME" *Icon*. The Dot Matrix Display will indicate the **INSTALL HOME PLAY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Home" Rules. *Programming varies and is subject to change*.



Install Novelty

Set the Game Play Type to "Restricted" Rules. Programming varies and is subject to change.



Install Add-A-Ball

Set the Game Play Type to "Restricted" Rules. Programming varies and is subject to change.



Install Factory

To initiate, from the INSTALLS MENU, select the "FACT" Icon. The Dot Matrix Display will indicate the INSTALL FACTORY. Follow the on-screen prompts to perform the Install. A CAUTION! All Standard and Feature Adjustments which were changed in the INSTALLS MENU or ADJUSTMENTS MENU are returned to the Factory Defaults (as indicated in the Dot Display in the ADJUSTMENTS MENU). Note: To perform a complete Factory Reset, GO TO THE RESETS MENU. Escape back to the UTILITIES MENU, select the "RESET" Icon, then select the "FACT" Icon in the RESETS MENU (review the end of this section, Reset Factory Settings).

HECO Enter Custom Message

To initiate, from the UTILITIES MENU, select the "ABCD CUST MSG" *lcon*. The SET CUSTOM MESSAGE (a short-cut for Standard Adjustment 41, Custom Message) provides an opportunity to have a text message appear in the the Attract Mode. Follow the on-screen prompts to complete [END].

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [</-] MOVE LEFT / CHOOSE NEXT [+/>] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [**SELECT**] as 'OK'.

Set Cu To initiate, f short-cut fo

Set Custom Pricing

To initiate, from the UTILITIES MENU, select the "PRIC" *Icon*. The CUSTOM PRICING MENU (a short-cut for Standard Adjustment 18, Game Pricing, and setting selected is CUSTOM) provides an opportunity to set Custom Pricing.

Note! MONETARY AMOUNT MUST BE SELECTED FIRST! Press [BACK] to - DECREASE or [SELECT] to + INCREASE the [<\$>] monetary amount (e.g. look at the right side of the display from \$0.25 to \$0.50). Press [</-] to - DECREASE or [+/>] to + INCREASE the credit quantity (e.g. look at the left side of the display from 0 CREDITS AT: to 1 CREDIT AT:).

IF EXAMPLE CUSTOM PRICING SETTING DESIRED IS: 1 Play for \$0.50, 3 Plays for \$1.00 and 7 Plays for \$2.00 THEN YOU WILL NEED TO PERFORM THE FOLLOWING:

In these menus:

Press [BACK] to – DECREASE [< \$]

Press [SELECT] to + INCREASE [\$ >]

Step 1 The starting display appears as below if no prior Custom Pricing was installed.

CUSTOM PRICING

O CREDITS AT: \$0.25

USE -/+ TO CHANGE CREDITS

Step 2 Press [SELECT] to + INCREASE to \$0.50. Press [+ / >] to + INCREASE to 1 CREDIT AT:

CUSTOM PRICING
1 CREDIT AT: \$0.50
1/0.50
USE -/+ TO 'INSTALL'

Step 3 Press [SELECT] to + INCREASE to \$1.00. Step 4 Press [+ / >] to + INCREASE to 2 CREDITS AT:

CUSTOM PRICING
2 CREDITS AT: \$1.00
1/0.50 3/1.00
USE -/+ TO CHANGE CREDITS

Press [SELECT] to + INCREASE to \$2.00.
Press [+ / >] to + INCREASE to 4 CREDITS AT:

CUSTOM PRICING
4 CREDITS AT: \$2.00
1/0.50 9/1.00 7/2.00
USE -/+ TO CHANGE CREDITS

Step 5 Press [SELECT] to + INCREASE the amount once (example = \$2.25).

CUSTOM PRICING

O CREDITS AT: \$2.25

1/0.50 9/1.00 7/2.00

USE -/+ TO 'INSTALL'

Press [< / -] once or press [+ / >] eleven times until INSTALL appears.

Step 6 Press [SELECT] to INSTALL. Press [</-] /[+/>] or [BACK] to edit.

CUSTOM PRICING
INSTALL
1/0.50 3/1.00 7/2.00
PRESS 'SELECT' TO INSTALL

Step 7 Press [SELECT], press [BACK] twice to exit the SERVICE MENU with your Custom Pricing installed.

CUSTOM PRICING INSTALLED PRESS 'SELECT' TO CONTINUE

To correct or make new changes, reenter, which brings you to **Step 6**. Press [BACK] repeatedly until the monetary amount shown is the desired amount and then continue following the above steps with your new or corrected settings. If you are still having difficulty or if you have any questions, please call Technical Support 800-542-5377 or 708-345-7700, option 1.

Set Date / Time

To initiate, from the UTILITIES MENU, select the "TIME" Icon. The SET TIME MENU appears with the MONTH flashing. Setting the date and time is required for 'Data Dumps' and Tournament Start and End Dates. If the setting of Standard Adjustment 61, Time Format, is set to 12-HOUR (Factory Default) the time will be expressed in the AM / PM format. If Standard Adjustment 61, Time Format, is set to 24-HOUR the time will be expressed in the 24-hour format.

Go To Resets Menu

To initiate, from the UTILITIES MENU, select the "RESET" Icon. The RESETS MENU provides six (6) functions to reset only the Coin Audits, reset only the Game Audits, reset only the Grand Champion Score, reset only the High Score(s), reset only the paid Credits (includes Service Credits) or to reset ALL DATA back to the Factory Default Settings.



Reset Coin Audits

To initiate, from the RESET MENU, select the "COIN" Icon. A ONLY the Coin Audits [Earnings Audits 5-12], will be reset to zero (0), Factory Default Settings. Follow the on-screen prompts to perform the Reset.



Reset Game Audits

To initiate, from the RESET MENU, select the "AUD" Icon. A ONLY the Game Audits [Earnings Audits 1–4, Standard Audits 1–59 and Feature Audits 1–XX*], will be reset to zero (0), Factory Default Settings. Follow the on-screen prompts to perform the Reset. *varies per game title.



Reset Grand Champion (Score)

To initiate, from the RESET MENU, select the "GC" Icon A ONLY the Grand Champion Score [adjustable via Standard Adjustment 31], will be reset to Factory Default Setting. Follow the on-screen prompts to perform the Reset.

Reset High Scores

To initiate, from the RESET MENU, select the "HSTD" Icon. A ONLY the High Score(s) [adjustable via Standard Adjustments 32–35], will be reset to Factory Default Setting(s). Follow the on-screen prompts to perform the Reset. Note: High Scores (but not Grand Champion Score) are reset automatically every 2,000 games (Factory Default Setting) [adjustable via Standard Adjustment 37, HSTD Reset Count].



Reset Credits

To initiate, from the RESET MENU, select the "CRED" Icon. A ONLY the Credits (includes Service Credits) [adjustable via Standard Adjustment 23, Credit Limit], will be reset to zero (0), Factory Default Settings. Follow the on-screen prompts to perform the Reset.



Reset Factory Settings

To initiate, from the RESET MENU, select the "FACT" Icon. A ALL GAME DATA IS RESET! (with the exception of Earnings Audit 13, Software Meter). NOTE: IF YOU HAD SET-UP CUSTOM PRICING OR HAD CHANGED ANY ADJUSTMENTS OR PERFORMED INSTALLS, IT IS SUGGESTED TO WRITE DOWN YOUR CHANGES PRIOR TO THE FACTORY RESET. Follow the on-screen prompts to perform the Reset.



Go To USB Menu

To initiate, from the UTILITIES MENU, select the "USB" Icon. The USB MENU provides three (3) functions to download game data, update your game code or backup your code onto a USB Memory Stick. Review the inside cover for information on how to update your game code.



Update Game Code

To initiate, from the USB MENU, select the "UPDT" Icon. Follow the on-screen prompts or review the inside cover for more information.




Dump Audits to USB

To initiate, from the USB MENU, select the "DUMP" Icon. Follow the on-screen prompts to perform a Data Dump (download). Note: If Icon is not present, access via the Audits Menu, see the Audits Section.



Backup to USB Memory Stick

To initiate, from the USB MENU, select the "BKUP" Icon. Follow the on-screen prompts to perform a Backup (game code only). This backup feature does not retain adjustments and/or settings changes

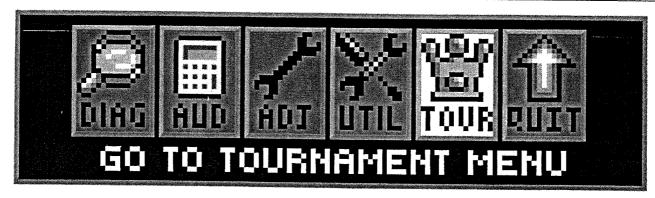

To initiate, from the MAIN MENU, select the "TOUR" Icon. The TOURNAMENT MENU provides ways to quickly and easily start and stop a tournament. Also, tournament data can be viewed (audits, prize info, etc.).

All TOURNAMENT MENU Icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. NOTE: Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some lcons may appear non-functional or may not appear at all. lcons and/or functions, order and operation are subject to change.

In displays where changes can be made or to perform a function, use the GREEN Button to go [BACK], exit or escape, the RED Buttons to [< / -] HIGHLIGHT PREVIOUS or DECREASE / [+ / >] HIGHLIGHT NEXT or INCREASE to highlight the desired option, and the BLACK Button to [SELECT] it or activate.

Start Tournament

To initiate, from the **TOURNAMENT MENU**, select the "STRT" *Icon*. The **START TOURNAMENT MENU** allows the operator to start a tournament. Select **QUICK START** or **CUSTOM** Tournament Start. For the first time Tournament Set-Up, it is recommended to select CUSTOM. Follow the on-screen prompts. After completion of all options in QUICK START or CUSTOM, the Tournament is started, the START TOURNA-MENT MENU is exited and returns to the TOURNAMENT MENU.

QUICK START:

Increase or decrease the: • DAYS, HOURS and MINUTES • PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT • INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT

CUSTOM START:

- Confirm the current date and time (if it was not set previous via the UTILITIES MENU it can be set-up in this display as well). Enter the MONTH, DAY, YEAR and TIME
 Choose the Tournament Start Date: MONTH, DAY, YEAR and TIME
- Choose the Tournament End Date: MONTH, DAY, YEAR and TIME
- Choose the CREDITS per play desired (01-10). Set the maximum number of Credits that may be accumulated per game. Note: The current pricing is displayed; to change pricing GO TO THE ADJUSTMENTS MENU.

Increase or decrease the: • PRIZE POOL \$ (DOLLAR) and ¢ (CENT) AMOUNT • INCREMENT THE PRIZE POOL PER PLAY INCREASES \$ and ¢ AMOUNT

- MAXIMUM (CAP) PRIZE POOL \$ and ¢ AMOUNT.
- Increase or decrease the number of PRIZES (01-05 HIGH SCORE; 02-05 B'N'W). Set the maximum # of Prize Positions to be awarded during a Tournament. Selections are as follows (% distribution cannot be changed): HIGH SCORE:

BUMP N'WIN: Set to 01 1 Winner 100% (1) Prize Pool Cannot set to 01. Minimum of 2 winners required. Set to 02 2 Winners 65% (1) 35% (2) Set to 02 2 Winners 65% (1) 35% (2) Set to 03 3 Winners 50% (1) 30% (2) 20% (3) Set to 04 4 Winners 50% (1) 25% (2) 15% (3) 10% (4) Set to 03 3 Winners 50% (1) 25% (2) 25% (3) Set to 04 4 Winners 40% (1) 20% (2) 20% (3) 20% (4) Set to 05 5 Winners 50% (1) 20% (2) 15% (3) 10% (4) 5% (5) Set to 05 5 Winners 40% (1) 15% (2) 15% (3) 15% (4) 15% (5)

• Select the AWARD TYPE (CASH, POINTS, PRIZE, TICKETS or NONE). Select CASH for the displays to represent the Prize Pool amount (based on Jackpot Base and Max.) in \$Dollars. Select POINTS for the display to represent the Prize Pool amount in *Points*. Select **PRIZE**, if applicable. Select **TICKET** for the display to represent the Prize Pool amount in *Tickets*. Select **NONE** *NOT TO* represent anything.

Custom Start continued on the next page.

CUSTOM START Continued.

The following option is available only if CASH was selected as the AWARD TYPE.

- Select the option to SHOW PLAYER CASH (YES or NO). Select YES for the display to represent the >>> previous <<< Tournament Winners & Cash amount (or Points, Prizes, etc.) will show in the Attract Mode.
- Select the kind of TOURNAMENT desired (BUMP 'N' WIN or HIGH SCORE).

The following options are available only if BUMP 'N' WIN was selected as the TOURNAMENT TYPE.

- Select or confirm the BASE POINT AMOUNT (00 or 1,000,000 4,294,967,295 increments of 1,000,000.
- Select or confirm the RANGE AMOUNT (00 or 1,000,000 4,294,967,295 increments of 1,000,000).
- Select the **BALLS** per game (1 10).

AUD

STOP TOURNAMENT

To initiate, from the TOURNAMENT MENU, select the "STOP" Icon. The STOP TOURNAMENT MENU allows the operator to stop a tournament. Note: This Icon only appears if a Tournament was set-up and is running (in place of the Start Icon).

STOP TOURNAMENT ARE YOU SURE?

• Use the BLACK Button to [SELECT] to confirm. Press the BLACK Button again to continue.

The STOP TOURNAMENT MENU is exited and returns to the TOURNAMENT MENU.

VIEW TOURNAMENT DATA

To initiate, from the **TOURNAMENT MENU**, select the "DATA" *Icon*. If no data is available, the display will indicate NO PREVIOUS DATA. Press the **GREEN Button** to escape [**BACK**] to the **TOURNAMENT**

TOURNAMENT AUDITS [#1 - #14]

To initiate, from the TOURNAMENT MENU, select the "AUD" Icon. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- TOTAL PLAYS: Total number of Regular and Tournament Games played while a Tournament is in progress. 01 This total is derived by adding the below Tournament Audit 02 with Regular Plays.
- TOURNAMENT PLAYS: Total number of Tournament Games played while a Tournament is in progress. 02
- TOTAL QUALIFYING PLAYS: Total number of times a player qualified (invited to enter name). 03
- TOTAL GAME EARNINGS: Total Gross Earnings accepted, while a Tournament is active (in progress). 04
- TOTAL TOUR. EARNINGS: Earnings (Audit 04 less Reg. Game Earnings) while a Tournament is in progress. 05
- PRIZE POOL TOTAL: Total Prize Pool (Jackpot) Amount to be paid out while a Tournament is in progress. 06
- NET EARNINGS: Provides the total Net Earnings (Gross Earnings less Prize Pool) while a Tournament is active. 07
- ACCUM. TOTAL PLAYS: Accumulative total amount of Regular & Tournament Games played since the first 08 Tournament was played.
- ACCUM. TOUR. PLAYS: Accumulative total amount of Tourn. Games played since 1st Tournament was played. 09
- ACCUM. QUALIFYING PLAYS: Accumulative total number of times a player qualified (invited to enter name). 10 11
- ACCUM. EARNINGS: Total Gross Earnings accepted, since the first Tournament was played. 12
- ACCUM. TOUR EARNINGS: Accumulative total Tournament Game Earnings since the first Tournament was played. 13
- ACCUM. JACKPOT: Accumulative total of Prize Pool Amounts paid out since the first Tournament was played. 14
- # TOURNAMENTS: Number of Tournaments (not individual Games) since the first Tournament was played.

SIGN MESSAGES A-B A-B

To initiate, from the TOURNAMENT MENU, select the "A-B TEXT" Icon. At time of print, menu non-functional. If made available in future code updates, this menu will allow the operator to display "Location" and "Prize" Messages. Follow the on-screen prompts to complete [END].

Remember, use the **GREEN Button** to go [**BACK**], exit *or* escape, the **RED Buttons** to [</-] MOVE LEFT / CHOOSE NEXT [+ / >] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK Button** to [**SELECT**] as 'OK'.

This page is intentionally blank.

Backbox W	/iring
-----------	--------

Playfield Wiring

- General Illumination Circuit Detailed Wiring Diagram
 Playfield Switch Wiring Diagram
 Playfield Lamp Wiring Diagram
 Playfield Terminal Strips, Fuses & Misc. Wiring Descriptions & Locations
 #-Flipper Circuit Wiring Diagram

Cabinet and Coin Door Wiring

- Transformer Power Wiring Diagram
 Cabinet Wiring Diagram
 Coin Door Wiring Diagram


- Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

COILS DETAILED CHART TABLE

34	High Current Coils Group 1	D: Transis	ive Driver tor Output P	Power Line CB Color		e Power	Drive Translate	r D.T. Contr	oi Coll GA-
#1	TROUGH UP-KICKER	Q		YEL-VIO	J10-P9/		Control Line Co	or Line Conne	ct or Bulb 1
#2	AUTO LAUNCH	Q	Q2 Q3 🔺	YEL-VIO				J8-P1	090-5044 24-940
#3	LOWER LEFT EJECT	Q		YEL-VIO	J10-P9/		-,	J8-P3	090-5036- 23-800
#4	MAGNETO MAGNET	Q	1/0	VIO VEI	J10-P8			J8-P4	090-5001- 22-600
#5	LEFT UP KICKER	Q	Power Driver	·	J10-P9/			J8-P5	090-5076-1 23-800
#6	CENTER LOCKUP UP	Q	_	YEL-VIO	- 			J8-P6	090-5001- 28-1200
#7	CENTER LOCKUP LATCH		-		J10-P9/1		BRN-BLU	J8-P7	090-5044
#8		Q7	4	YEL-VIO	J10-P9/1	0 50VDC	BRN-VIO	J8-P8	32-1800 515-7695-0
	SHAKER MOTOR (OPTIONAL)	Q8		RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	502-5027-0
	High Current Colls Group 2	Drt. Translate	e Driver or Output PCI	Power Line Golge	Power Line Connection	Power Valtage	Drive Translator	D.T. Contro	Coll GA-T
F9	LEFT POP BUMPER	Qg		YEL-VIO	J10-P9/1		Control Line Colo	J8-P1	28-1200
[‡] 10	RIGHT POP BUMPER	Q10		YEL-VIO	J10-P9/1	0 50VDC	BLU-RED	J8-P2	090-5044-I
11	BOTTOM POP BUMPER	Q11	A	YEL-VIO	J10-P9/1		BLU-ORG	<u>-</u>	090-5044-1 28-1200
12	UPPER RIGHT FLIPPER	Q12	2 1/0	3RY-YEL 3A	 		BLU-YEL	J8-P4	090-5044-1 22-1080
13	LEFT SLINGSHOT	Q13	Power Driver	YEL-VIO	J10-P9/10	50.50		J8-P5	090-5032-N 26-1200
14	RIGHT SLINGSHOT	Q14	_	YEL-VIO		10.00	BLU-GRN	J8-P6	090-5044-N 28-1200
15	LEFT FLIPPER (50V RED/YEL)	+		GRY-YEL-3A	J10-P9/10	50VDC	BLU-BLU	J8-P7	090-5044-N
16	RIGHT FLIPPER (50V RED/YEL)	Q15		Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	22-1080 090-5032-N
		Q16		GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	22-1080 090-5032-N
	Low Current Coils Group 1	Drive ansistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage C	Drive Translator	D.T. Control	Coll GA-Tu
	FLASH: LEFT SIDE (X2)	Q17		ORG	J6-P10	20VDC	ontrol Line Color VIO-BRN	J7-P2	# 89 BULB 165-5000-8
18	FLASH: RIGHT SIDE	Q18		ORG	J6-P10	20VDC	VIO-RED		# 89 BULB 165-5000-8
9	FLASH: DISC CLEAR (X2)	Q19	A	ORG	J6-P10	20VDC	VIO-ORG	J7-P3	# 89 BULB
0 1	FLASH: DISC BLUE (X2)	Q20	1/0	ORG	J6-P10	20VDC	VIO-YEL	J7-P4	165-5000-86 # 89 BULB
1 1	FLASH: WOLVERINE	Q21	Power Driver	ORG	J6-P10	20VDC		J7-P6	165-5000-89 # 69 BULB
2 F	FLASH: MAGNETO (LEFT/RIGHT) (X2)	Q22	V	ORG	J6-P10		VIO-GRN	J7-P7	165-5000-89 # 89 BULB
+	DISC MOTOR POWER	Q23	}-			20VDC	VIO-BLU	J7-P8	165-5000-89
+	OPTIONAL (e.g. COIN METER)		-	BRN	J7-P1	20VDC	VIO-BLK	J7-P9	RELAY 190-5004-00
1		Q24		RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	COIN METER


#25	FLASH: POP BUMPER	Q25	Output PCB			Voltage	Orive Translator Control Line Color	Line Connect	or Bulb Type
#26		U25	<u> </u>	ORG	J6-P10	20VDC	BLK-BRN	J6-P1	# 89 BULB 165-5000-89
#20		Q26		BRN	J7-P1	20VDC	BLK-RED	•	24-940
#27	ICEMAN MOTOR	Q27	A	BRN	J7-P1	+	DEX-NED	J6-P2	090-5036-ND
#28	FLASH: BACKPANEL (LEFT) (X3)	000	1/0		-	20VDC	BLK-ORG	J6-P3	041-5113-00
	***************************************	Q28	Power	ORG	J6-P10	20VDC	BLK-YEL	J6-P4	# 89 BULB 165-5000-89
#29	FLASH: BACKPANEL (RIGHT) (X3)	Q29	Driver	ORG	J6-P10	20VDC	01 V 0		# 89 BULB
#30	FLASH: MAGNETO SPOT LIGHT	+				20000	BLK-GRN	J6-P5	165-5000-89
	- ISTA INTOICE TO SPOT LIGHT	Q30	▼	ORG	J6-P10	20VDC	BLK-BLU	J6-P6	# 161BULB 165-5032-00
#31	FLASH: BOTTOM ARCH (X2)	Q31		ORG	10 040	-			#89 BULE
	P1 - 411		L	ONG	J6-P10	20VDC	BLK-VIO		165-5000-89
F32	FLASH: MAGNETO FIGURE	Q32		ORG	J10-P8	20VDC	BLK-GRY		#161 BULB

Backbox I/O Power Driver Board (Coils Q1-Q32) Detailed Wiring Diagram Partial View (520-5249-00) ALL FUSES RATED 250V SLO-BLO #/O FUSE CHART INFO IN BACKBOX & PAGE DR. 1

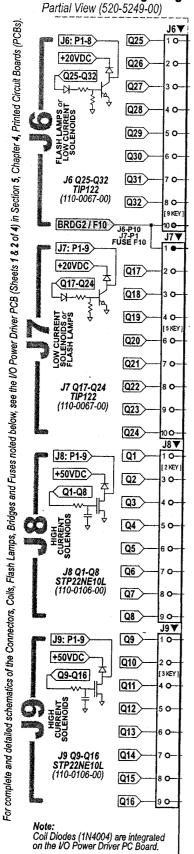

#33 – #35 Note: If this game is equiped with an optional Ticket Dispenser & Meter, see the end of Sec. 5, Chapter 4 for wining information. Ensure Std. Adj. 56, Ticket Dispenser = YES.


Backbox Wiring

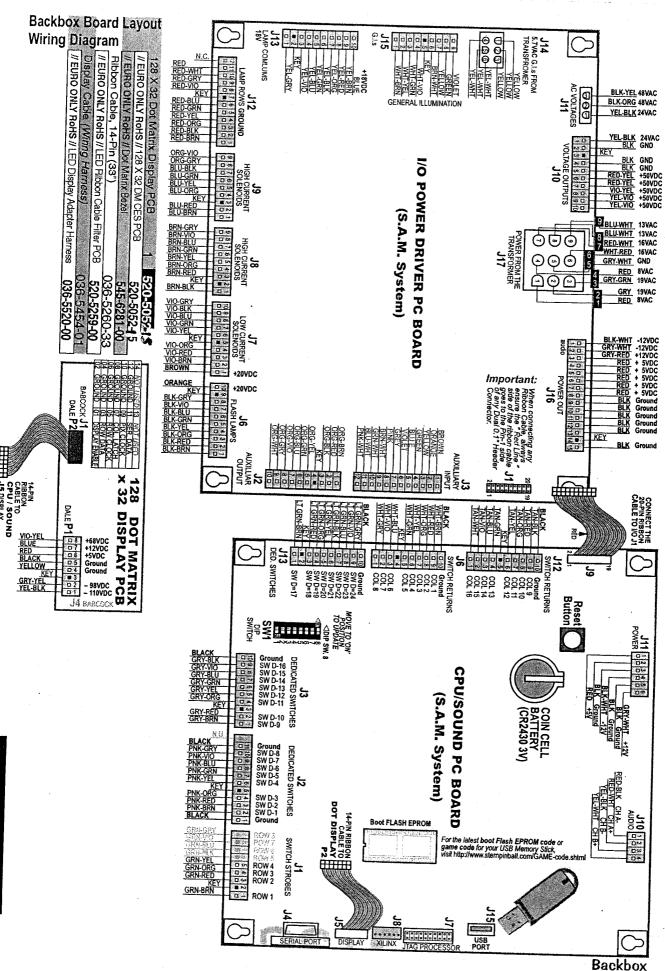


Y4


Wiring


X-MEN PREMIUM Wiring for the 8-Transistor driver board, 520-5325-00

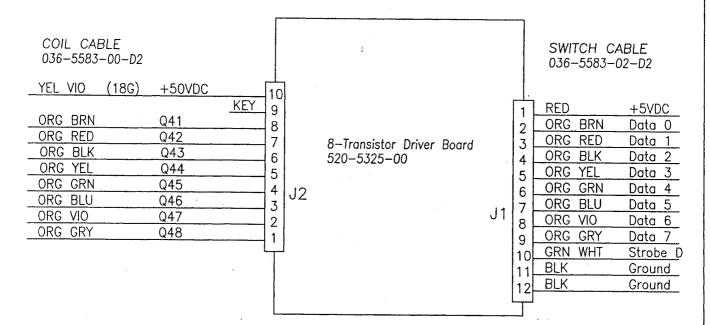


Actual Board Layout

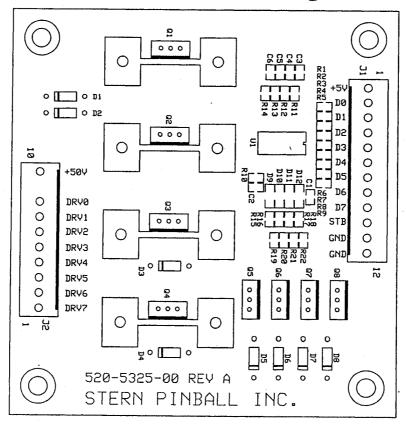


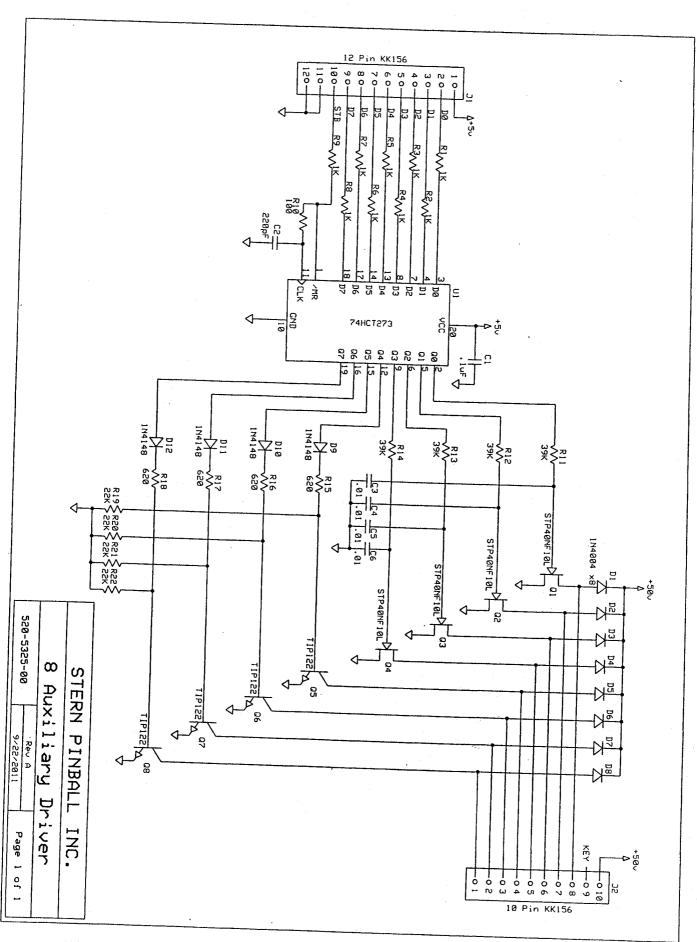


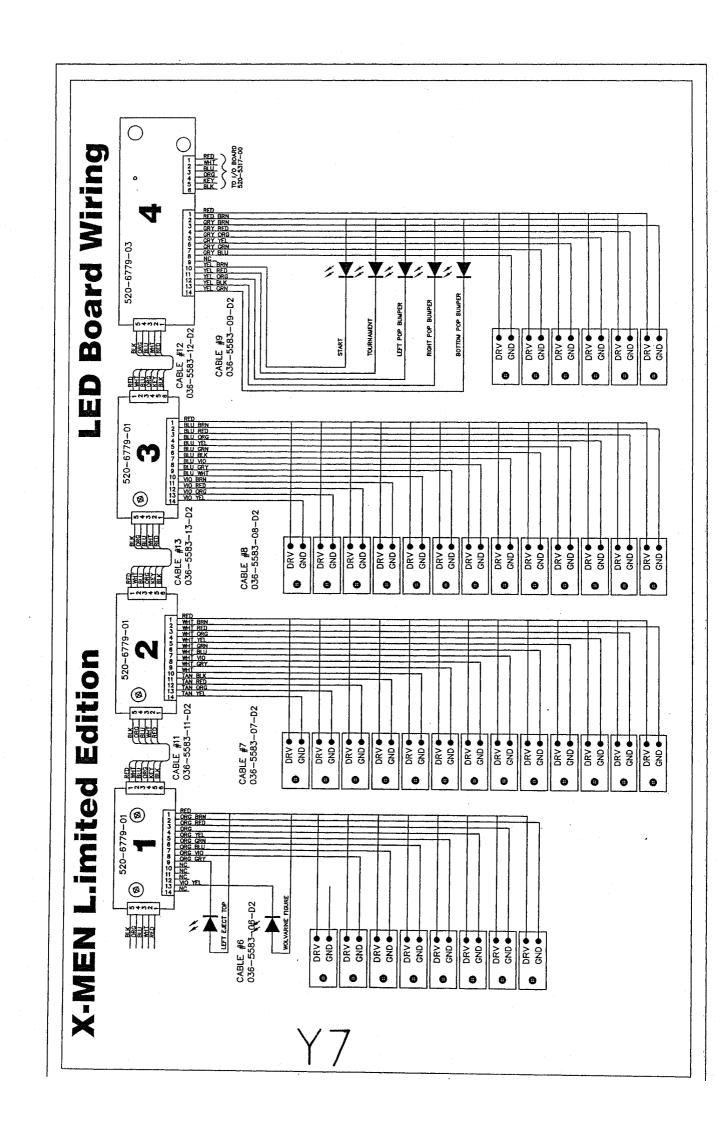

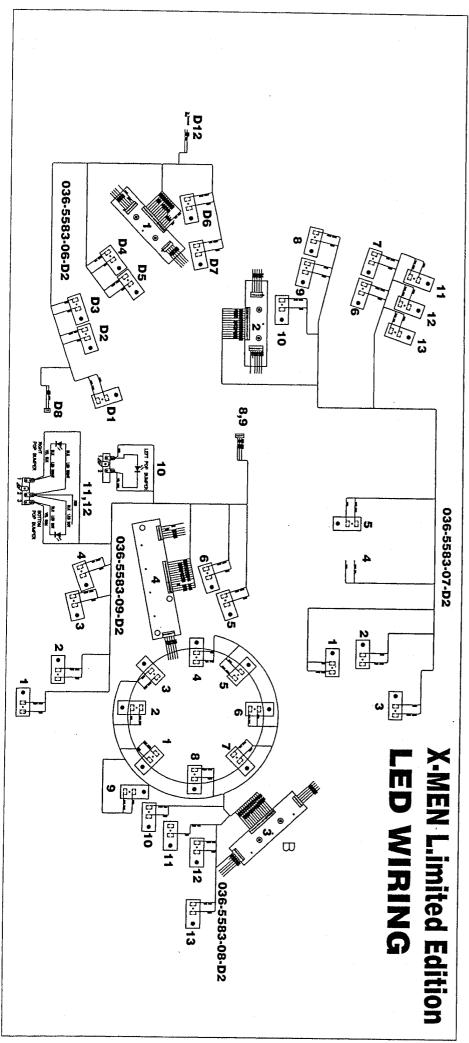



Y83.

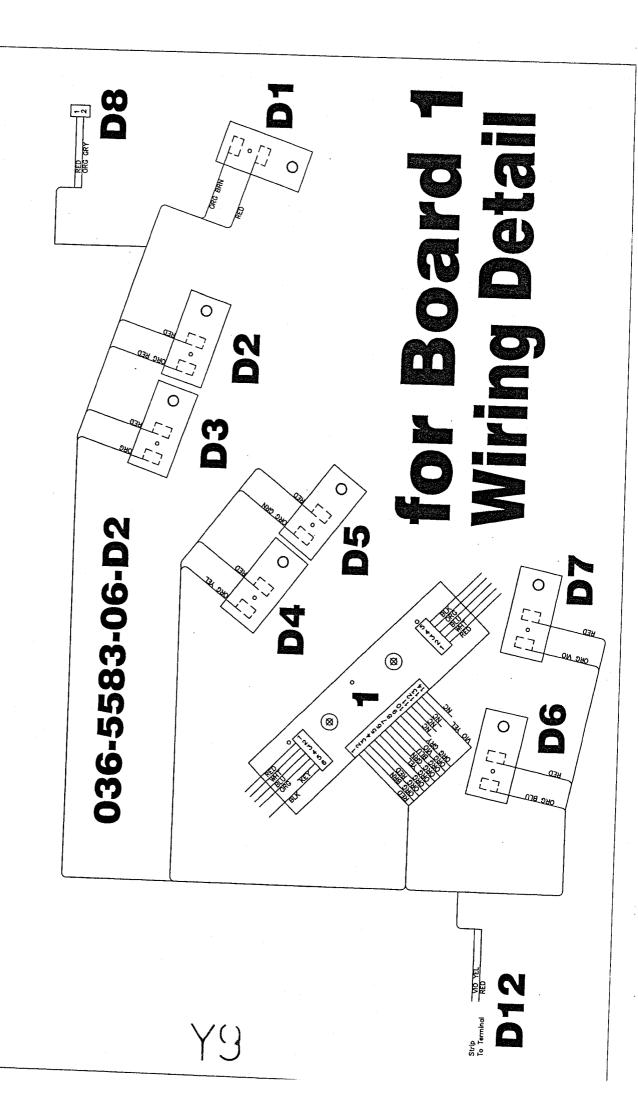


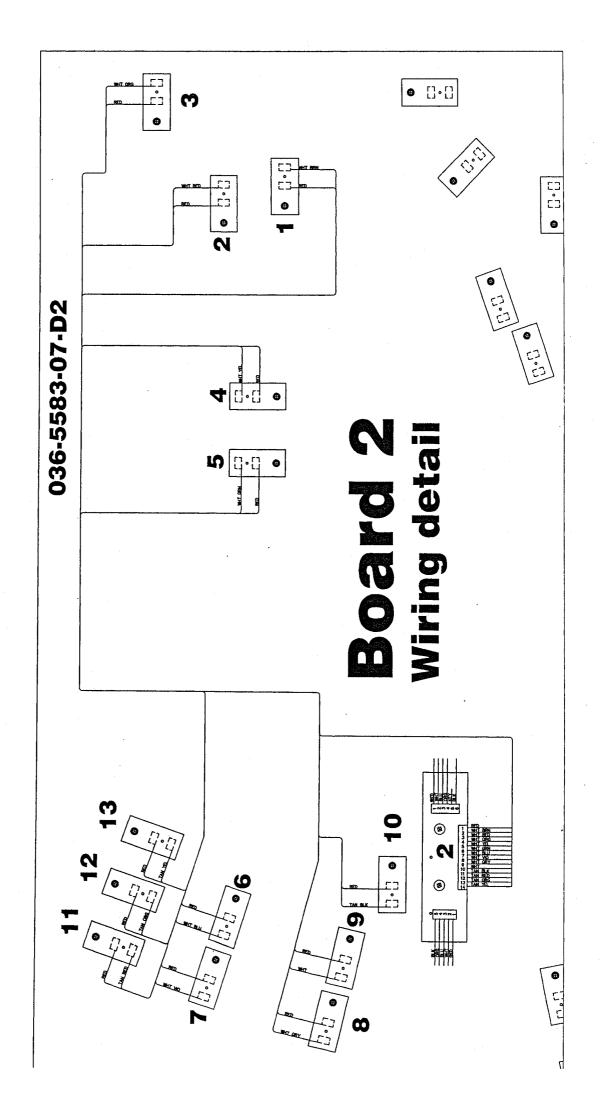



Y1(1

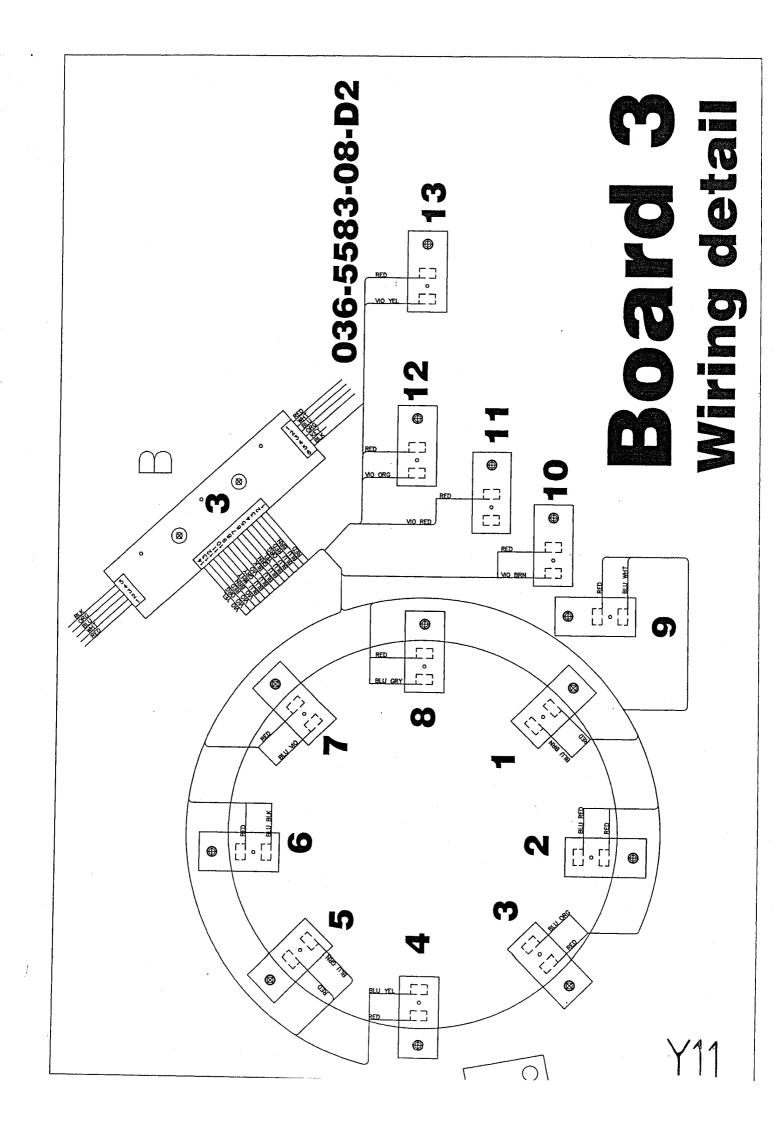

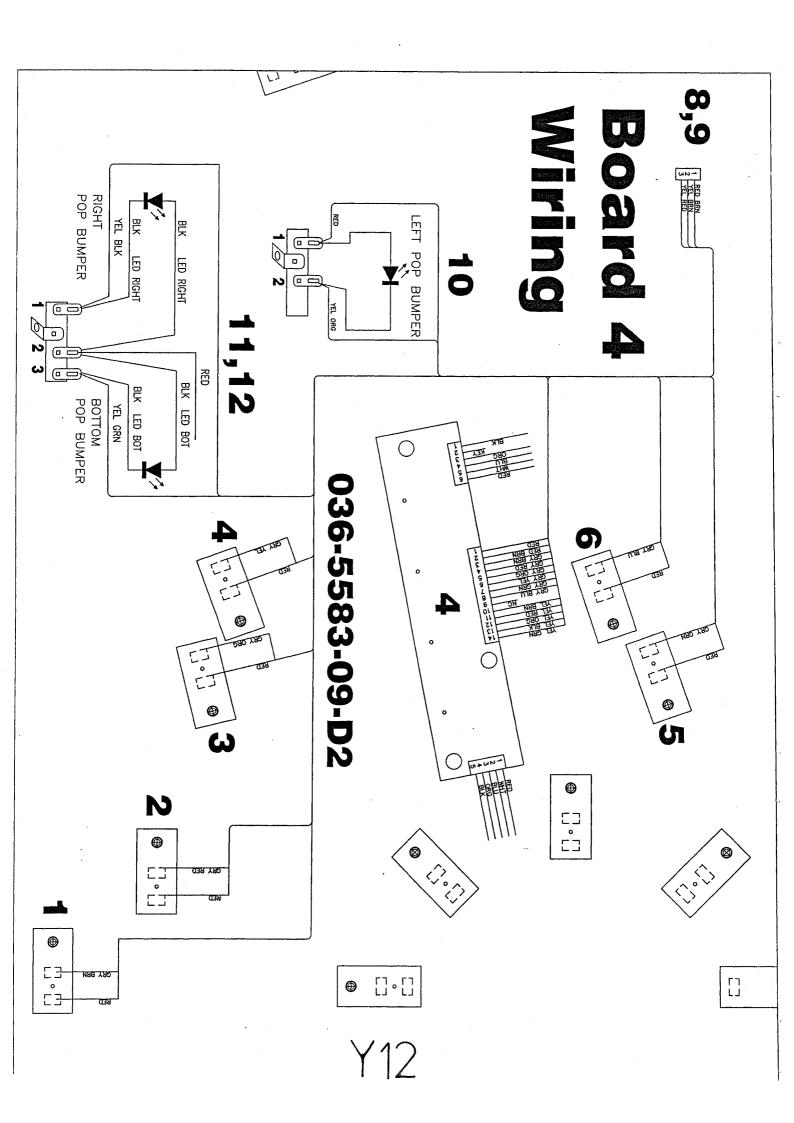


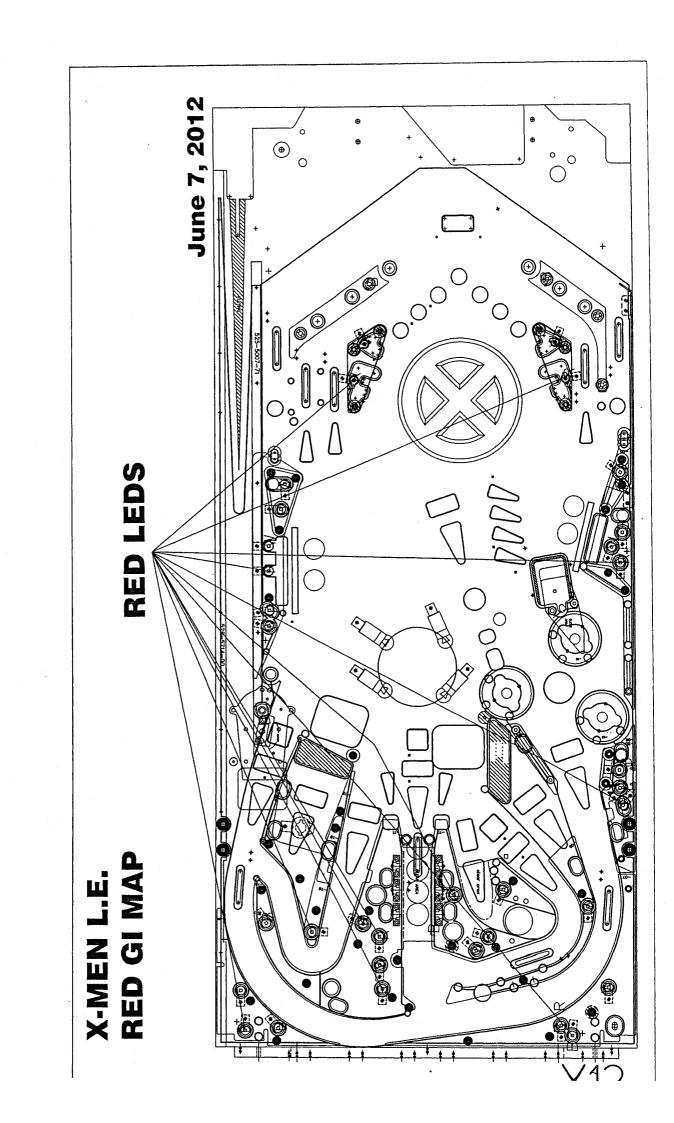

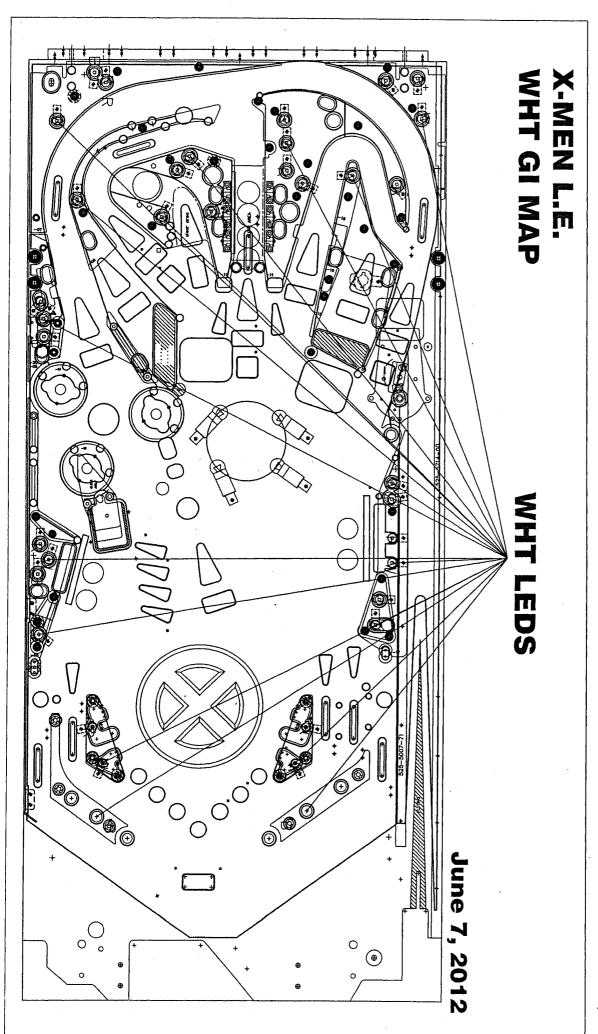

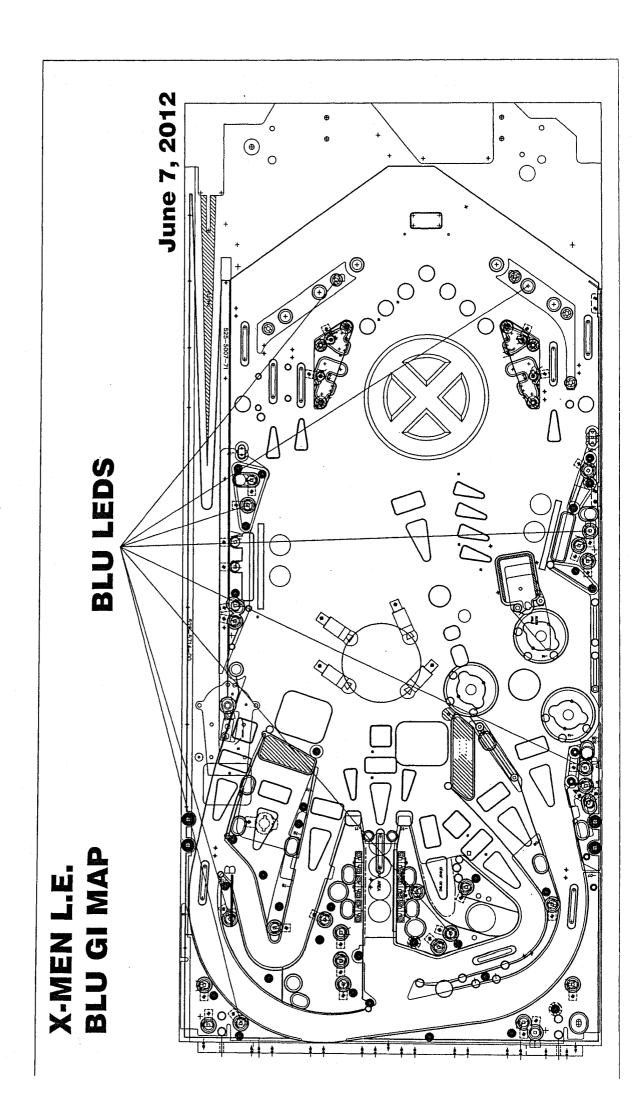

LAMP 41

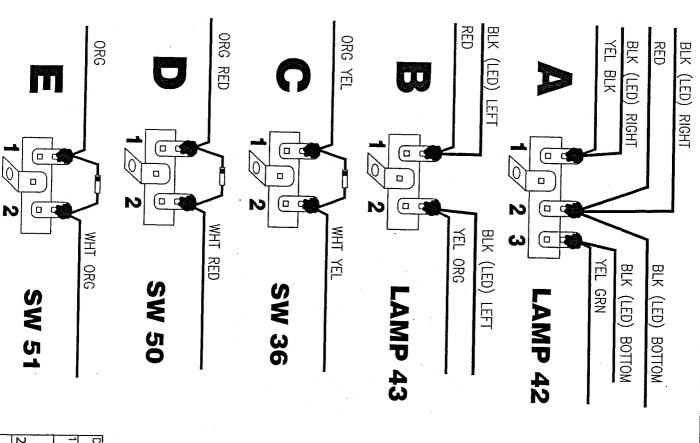

RED BRN

RED


(0

LAMP 59

(0

(0

Q

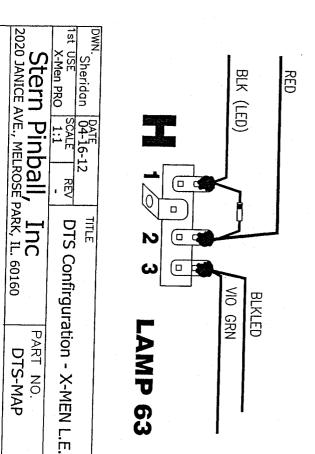



WHT VIO

RELAY ASSEMBLY X-MEN Limited Edition

05-24-12

Sheridan

Date

Eng

Description Released


Rev

-[N]- 2[4]	 - -		
WHT	WHT GRY	BRN GRN	BRN

-81	190-5004-00	RELAY		71018	
036-5530-09-B1	CABLE				

ItemPartNumberDescription1190-5004-00Packard Relay2036-5539-09-B1Relay CableDWN. SheridanDATE SheridanTITLE TITLE1st USE AVATARRelay and Cable Assembly AVATAR		
2-5004-00 Packard R 3-5539-09-B1 Relay Cab 05-24-12 Thre Scale N/S Relay and Cable A	sscription	0+4
3–5539–09–81 Relay Cab	ickard Relay	1
PATE 12 THLE SCALE Relay and Cable A N/S To Company The Company Th	slav Cable	- -
SCALE Relay and Cable A N/S Tool Tool		-
The	nd Cable Assemblý	
	PART NO.	
ARK, IL. 60160	•	-01

Relay Cable 036-5539-09-B1

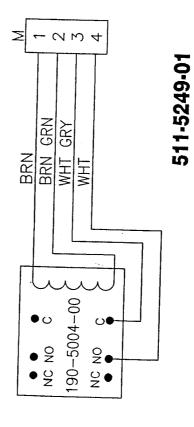

511-5249-01




Rev

Description

Eng

Date

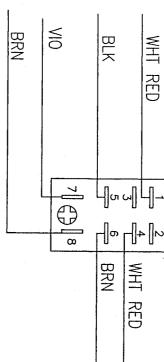

Relay Cable 036-5589-00


190-5004-00

NC NO ●

VIO BRN

WHT RED


Z - 0 W 4

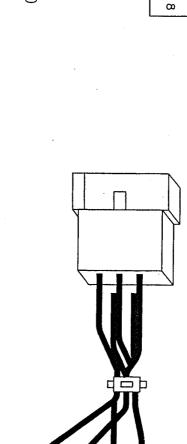

511-7234-00

	× St 2220 J/	DWN. Sheric	2	Item		А
1	Pinball, VE., MELROSE PA	DATE 1-12	-5004-00 5589-00		036-5589-00 CABLE	Released
	PA	TITLE Relay and Cable Assembly	Packard Relay Relay Cable			Sheridan
	ET NO. 511-7234-00			Qty	190-5004-00 RELAY	05-11-12

RELAY ASSEMBLY X-MEN L.E.

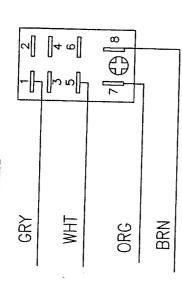


Description	Released	
Rev	A	


Date

Eng

Sheridan

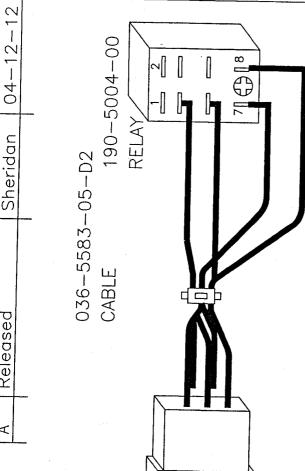

02
7
ó
5
5583
ις) I
920
0
응
ਲ
>
<u>ㅎ</u> ,
చ

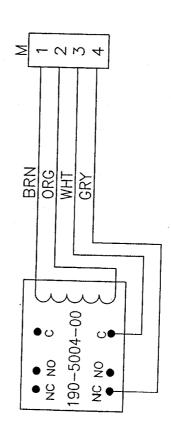


511-7226-00

_					
Item	Part	Item Part Number	Description	C	>+0
	400	00 1001			7
	, S -	190-2004-00	Packard Relav	Selav	ζ-
7	-920	036-5583-05-02			
J. W. W.		20 00 0000		טַ	_
Sheridan		DATE 04-12-12 T	ITLE		
1st USE		Τ	Relay and Cable Assembly	Assembly	
×	X-MEN L.E. N/S		ליים ממטול	Course,	
ひ	Drn	Storn Dinhall		PART NO	
ر ر	<u>-</u>				
2220 JA	NICE A	2220 JANICE AVE., MELROSE PARK, IL. 60160	RK, IL. 60160	511-7226-00	8


Playfield Wiring

Please NOTe: Switch & Lamo Descript

#-Flipper Circuit Wiring Diagram

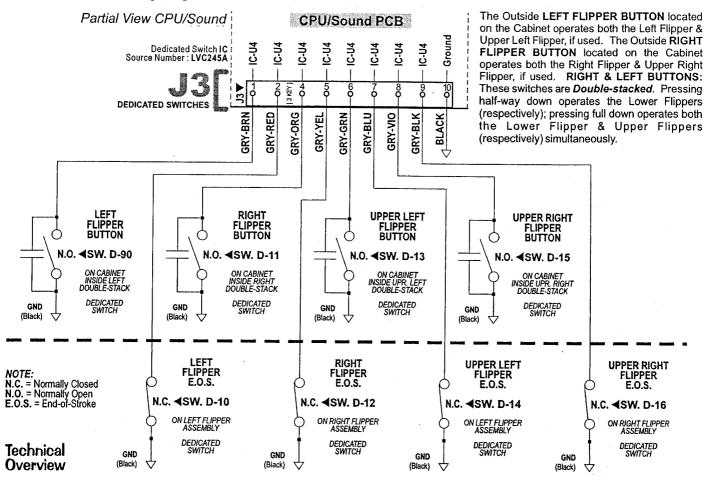


Our *Flipper System* uses one supply voltage (+50VDC) for both *kick* & *hold*. Once the **Game CPU** detects a Flipper Cabinet Switch closure (*during game play*) it applies a 40*msec* pulse to the gate of the Flipper Drive Transistor (STP22NE10L). If it continues to detect a Flipper Cabinet Switch closure (*the player holding the button in*) it will continue to pulse the flipper drive transistor 1*msec* every 12*msecs* for the duration of the hold cycle.

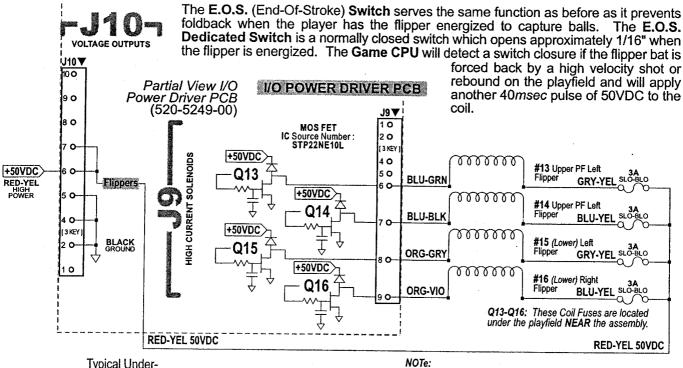


Typical UnderPlayfield Fuses are rated:

3A 250v Slo-Blo
Do Not Over-Fuse


NOTe: Coil Diodes (1N4004) are integrated on the I/O Power Driver PCB. See Coils Detailed Wiring Diagram for actual number of flippers used on this game.

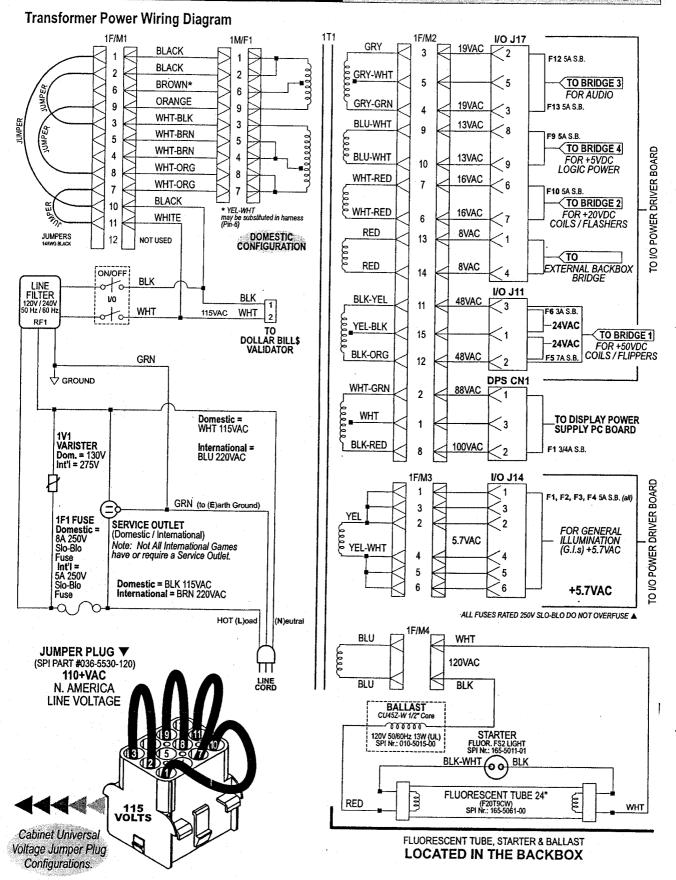

Cabinet and Coin Door Wiring

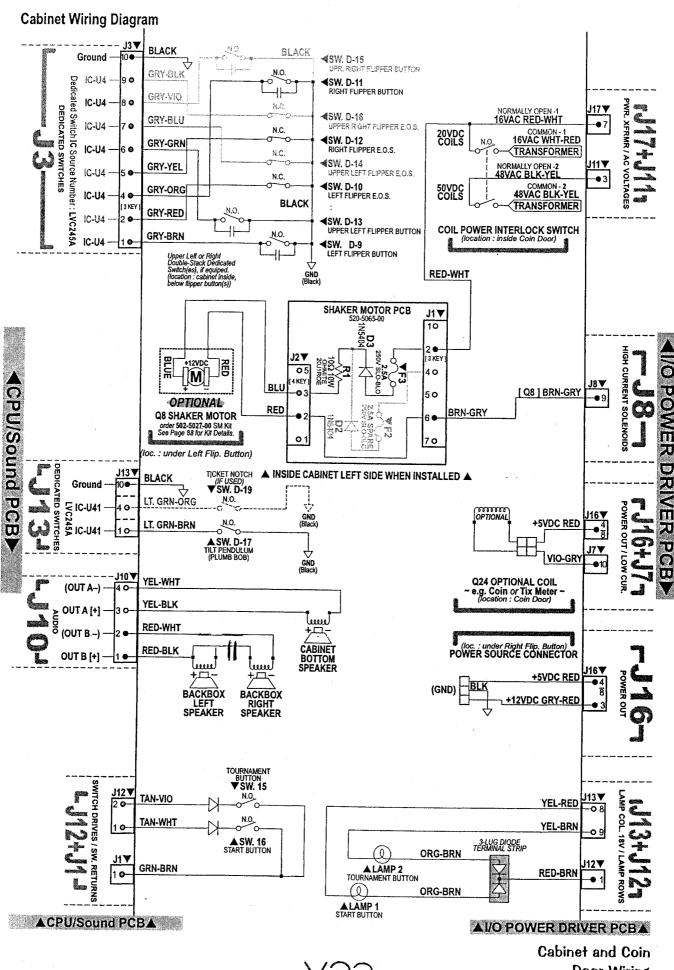


Door Wiring

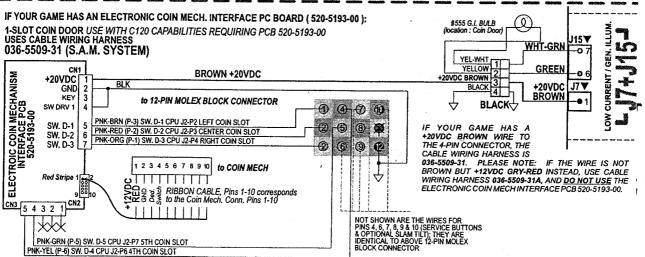


~ WIRING CONFIGURATION WILL VARY ACCORDING TO COUNTRY ~


Cabinet and Coin Door Wiring


Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

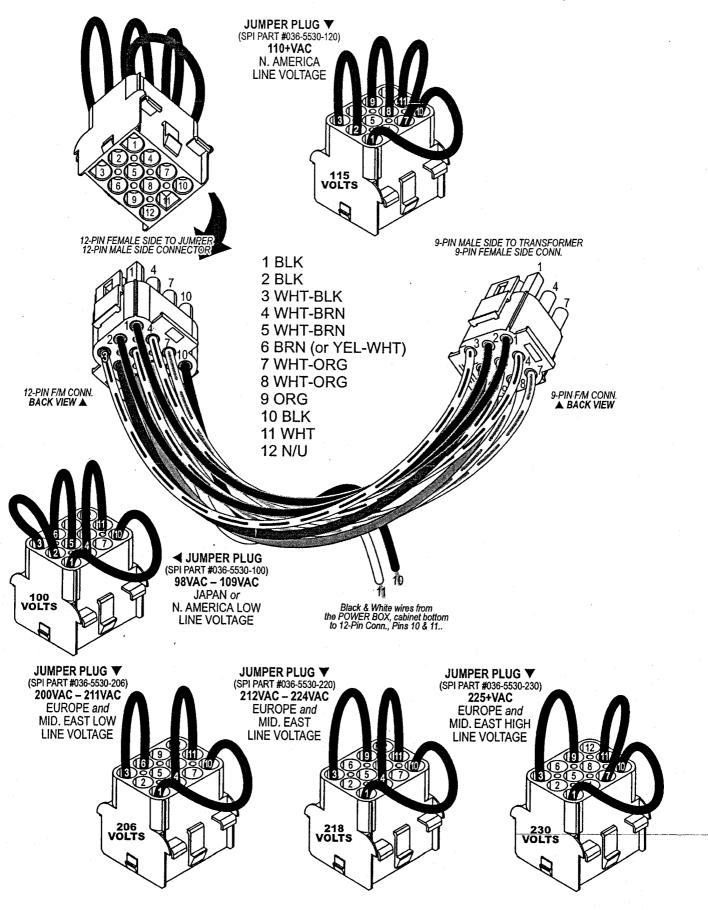


Cabinet and Coin Door Wiring

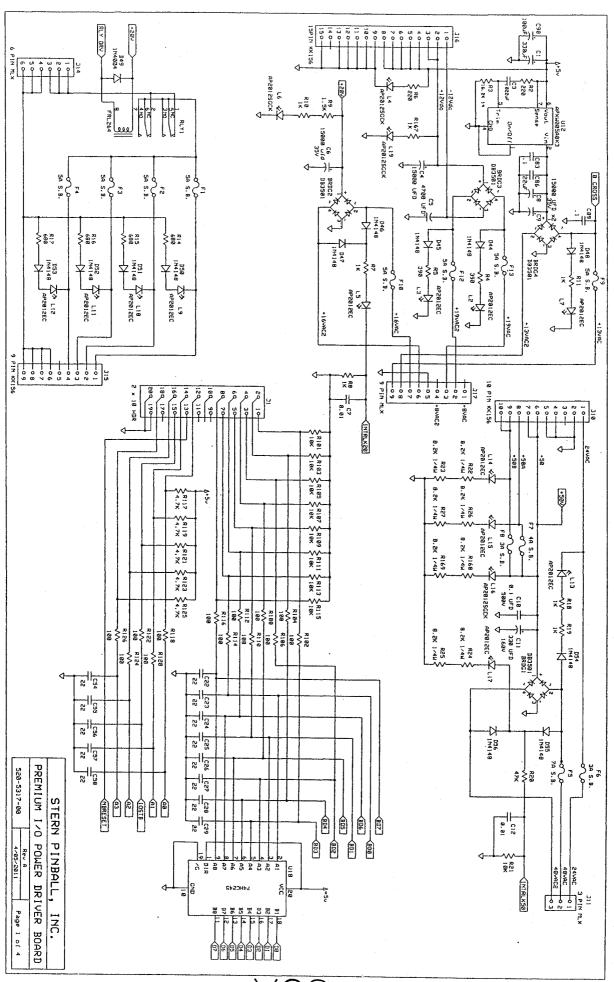

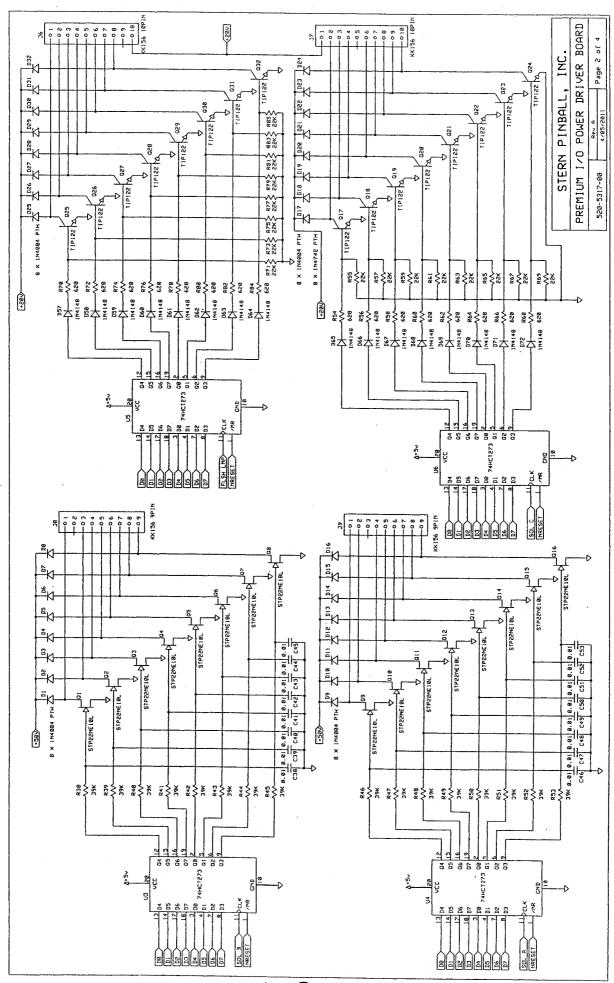

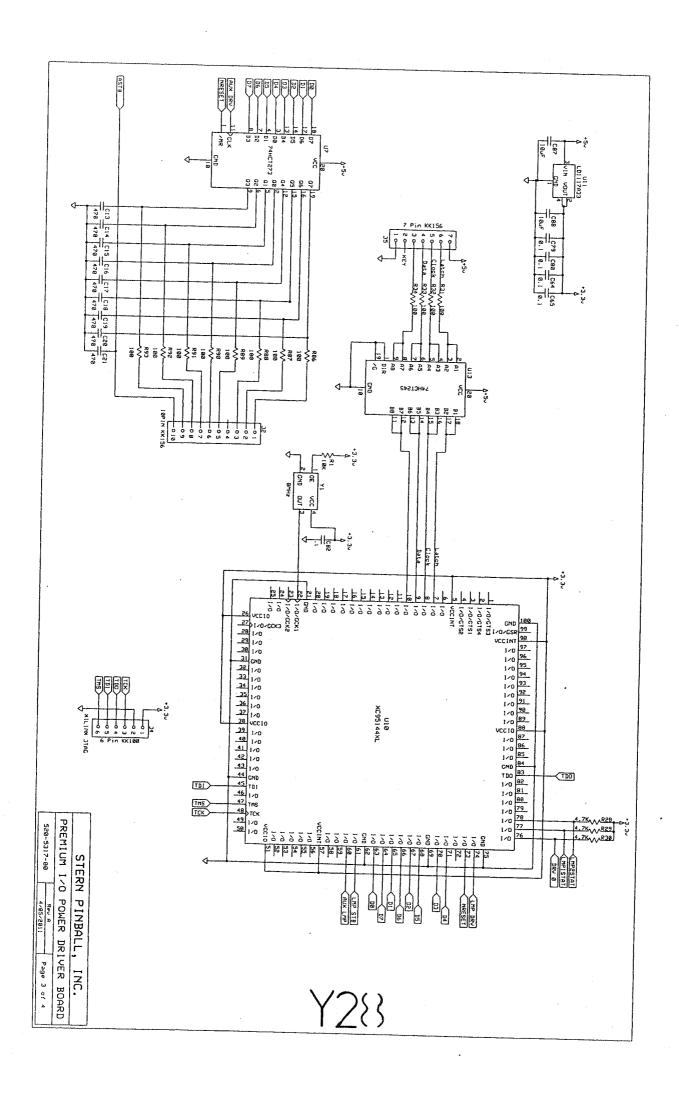

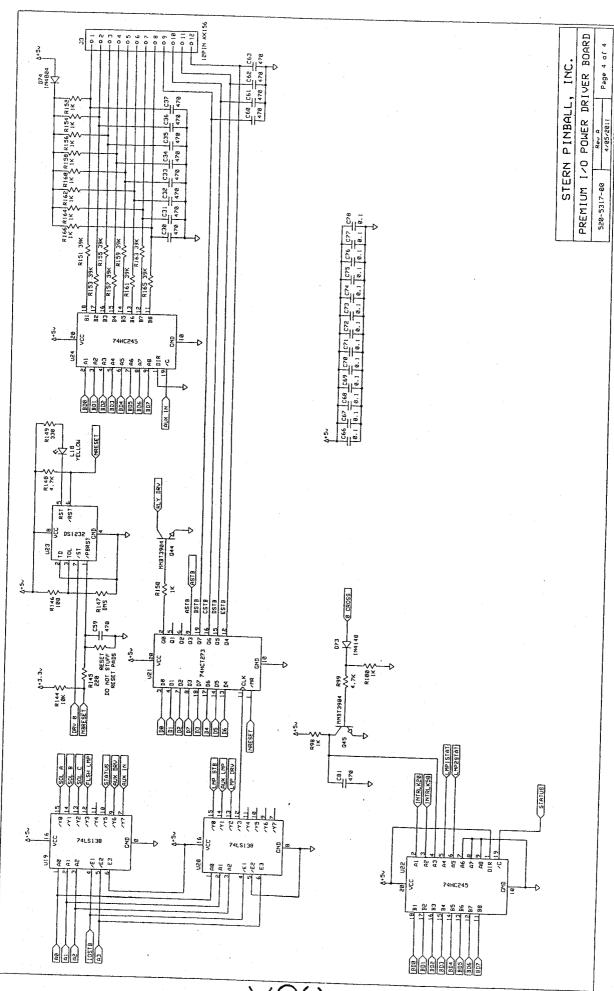

CES

Creative Electronics and Software


Stern Mini CPU


520-5303-04 Revision A

Table of Contents:


Page 1: Title Page
Page 2: Processor
Page 3: I/O Connectors
Page 4: USB
Page 5: Regulator
Page 6: Audio DAC


PCD, Education Line CPU, Ray 1

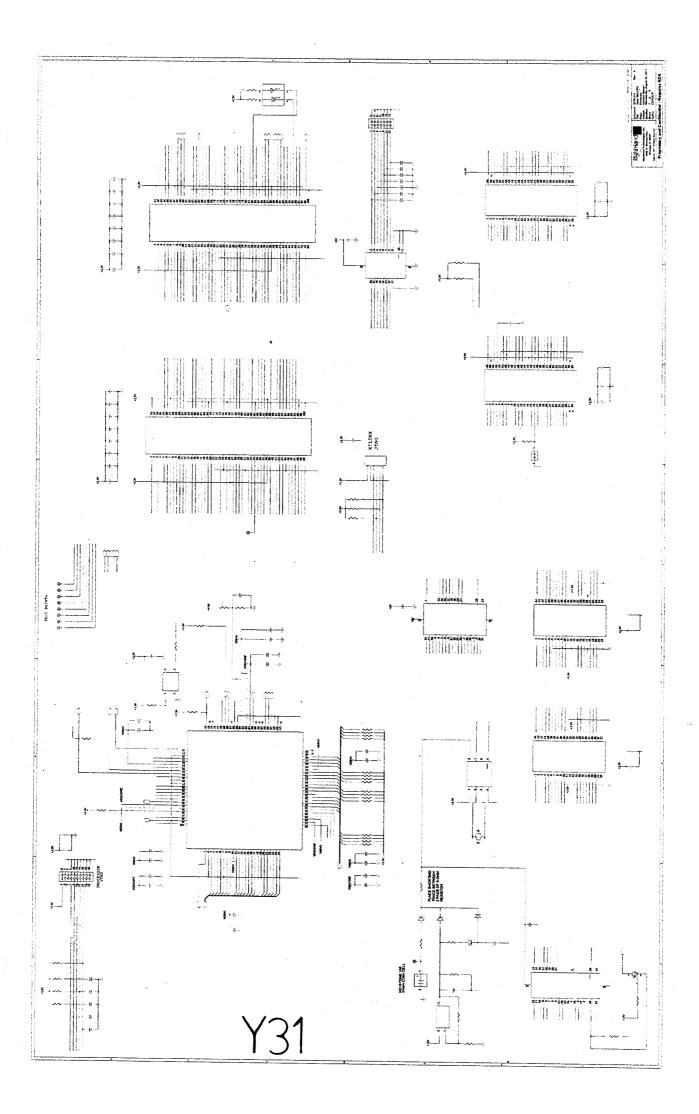

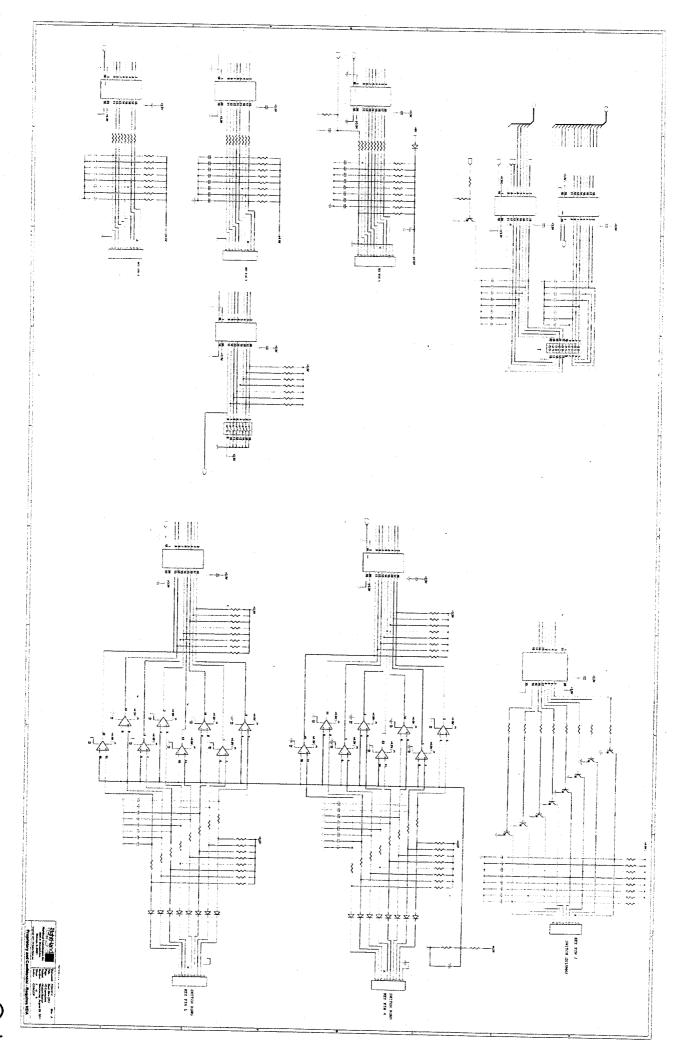


 $\frac{1}{3}$

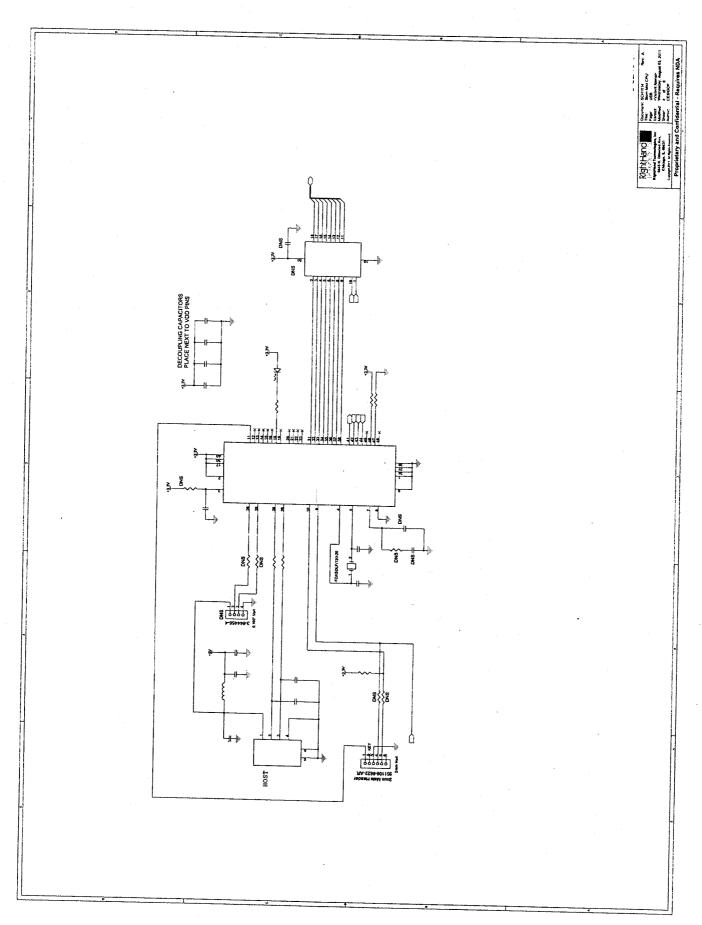

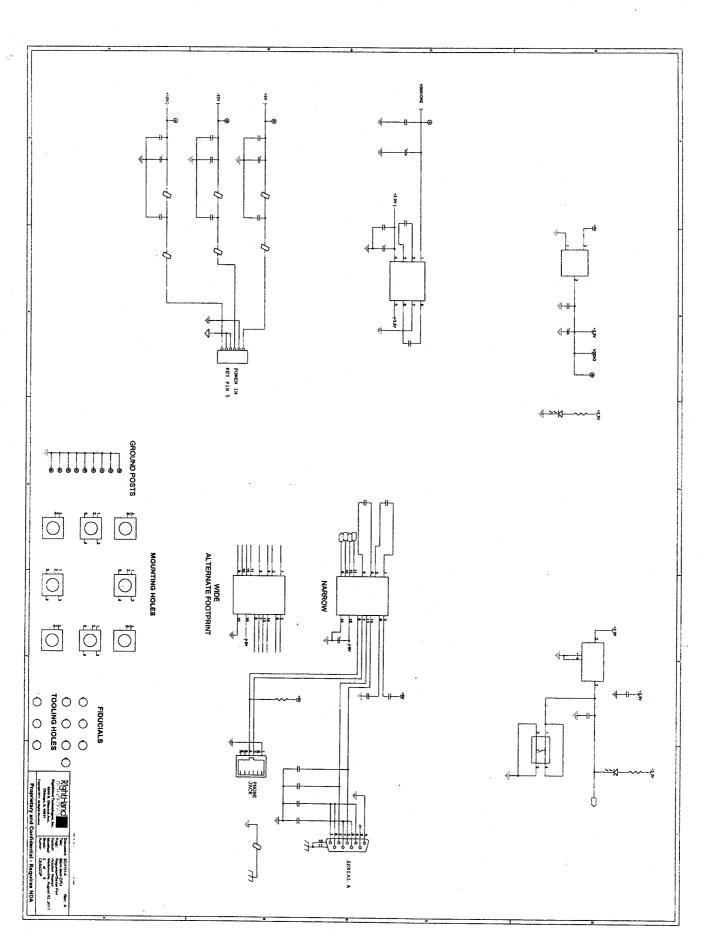

Y34

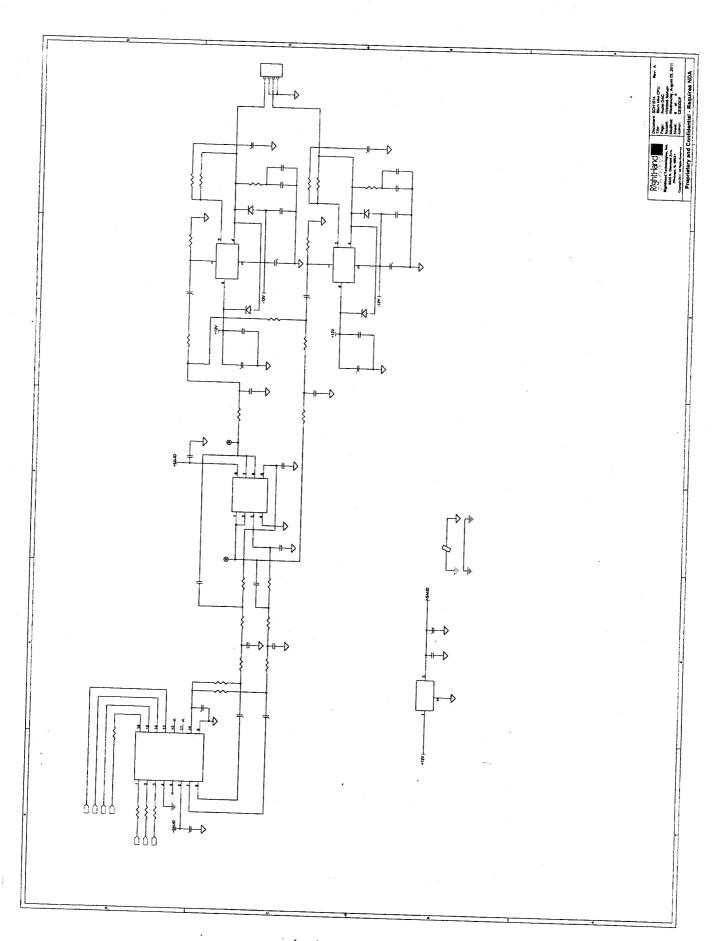

S.A.M. SYSTEM BOARD TYPE TABLE

		· ·	
Game Name	CPU Bd. No.	I/O PWR DRV Bd. No.	U9 Pinball Boot ROM
World Poker Tour	520-5246-00	520-5249-00	V3.1
Pirates Of The Caribbean	520-5246-00	520-5249-00	V3.1
Family Guy	520-5246-00	520-5249-00	V3.1
Spider-Man	520-5246-00	520-5249-00	V3.1
Wheel Of Fortune	520-5246-00	520-5249-00	V3.1
NBA	520-5246-00	520-5249-00	V3.1
CSI	520-5246-00	520-5249-00	V3.1
Batman	520-5246-00	520-5249-00	V3.1
Indiana Jones	520-5246-00	520-5249-00	V3.1
Shrek	520-5246-00	520-5249-00	V3.1
24	520-5246-00	520-5249-00	V3.1
Avatar	520-5246-00	520-5249-00	V3.1
Big Buck Hunter	520-5246-00	520-5249-00	V3.1
Iron Man	520-5246-00	520-5249-00	V3.1
The Rolling Stones	520-5246-00	520-5249-00	V3.1
Tron	520-5246-00	520-5249-00.	V3.1
Avatar L/E	520-5303-03	520-5249-00	V3.1
The Rolling Stones L/E	520-5303-03	520-5249-00	V3.1
Tron L/E	520-5303-03	520-5317-00	V3.1
Transformers	520-5246-02	520-5249-00	V2.0
Transformers L/E	520-5303-04	520-5317-00	V2.0
AC/DC	520-5337-01	520-5249-00	AC/DC 1.0
AC/DC (L/E)	520-5337-00	520-5317-00	AC/DC 1.0
X-MEN	520-5246-02	520-5249-00	V2.0
X-MEN (L/E)	520-5303-04	520-5317-00	V2.0
Batman (Standard)	520-5303-03	520-5249-00	V3.1
Iron Man (Classic)	520-5303-01	520-5304-00	Not Used
The Simpsons Kooky Carnival (RED	520-5246-00	520-5249-00	V3.1