









EUROPE

Digital Centre
Dr. Ferran, 27-29. Bufalvent
08243 Manresa, BARCELONA
Spain +34.938.748.158
info@dc-image.com



AMERICA

Digital Centre America Inc. 13651 SW 143rd CT Unit #105 Miami, FL 33186 USA +1.305.387.5005 sales@dc-image.com



Links of interest:

🛐 www.facebook.com/digitalcentre

www.twitter.com/photobooth_DC

www.youtube.com/digitalcentrepb www.photoboothparts.com

www.digital-centre.com



Copyright and Trademarks

This manual contains materials protected under International copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted or transcribed without the express written permission of the manufacturer and author of this manual.

The information of the products in this manual is subject to change without prior notice and does not represent a commitment on the part of the vendor. Who assumes no liability or responsibility for any errors that appear in this manual.



INDEX

1-SAFEIT INSTRUCTIONS	8
2-SPECIFICATIONS	10
3-FIRST STEPS WITH YOUR PHOTOBOOTH	11
3.1 CONTENT	11
3.2 INSTALLATION	12
3.3 POWER SWITCH	12
4-CONNECTIONS	
4.1 CONTROL BOARD	13
4.2 ACCESSING THE CONTROL BOARD	1.4
4.3 LAND CABLE RJ45 ETHERNET (INTERNET)	17
4.4 PC WIRING	18
4.5 PRINTER	
4.6 HOW TO TAKE THE PRINTER OUT OF THE PHOTOBOOTH	
4.7 USER CONNECTIONS	21
4.8 GENERAL	
4.9 MONITORS	23
5-PRINTER	
5.1 FEATURES & FUNCTIONS	
5.2 BEFORE OPERATION	_
5.2.1 INSTALLATION OF PRINT PAPER	
5.2.2 INSTALLATION OF INK RIBBON	
5.2.3 INSTALLATION OF INK CASSETTE	
5.3 ERROR MESSAGES & COUNTER MEASURES	
5.4 CLEANING	35
6-USING THE PHOTOBOOTH	37
6.1 GENERAL OVERVIEW	
6.2 PRODUCTS	
6.3 PLAY	
6.4 OPTIONS MENU	_
6.4.1 SCAN QR-PHOTO	
6.4.2 SMARTPRINT	59
7-CUSTOMIZED MANUALLY	62
7.1 STRUCTURE	
7.2 LOGO	

7.3 WELCOME/BYE	66
7.4 TEXT	70
7.5 MUSIC	72
7.6 FRAMES	73
7.7 COLLAGE	79
7.8 ADVERTISING PHOTOS	83
8-CUSTOMIZED ONLINE	86
8.1 ACCESS TO MYPHOTOCODE.COM	
8.1.1 THE HOME SCREEN OF MYPHOTOCODE.COM	86
8.1.2 LOG IN TO MYPHOTOCODE.COM	
8.2 MYPHOTOCODE.COM - HOME	89
8.3 MYPHOTOCODE.COM - MY PROFILE	90
8.3.1 MY PROFILE - INFO	90
8.3.2 MY PROFILE - ADDRESSES	91
8.3.3 MY PROFILE - CONTACTS	92
8.4 PHOTOBOOTHS	93
8.4.1 PHOTOBOOTHS - INFO	94
8.4.2 PHOTOBOOTHS - ALERTS	95
8.4.3 PHOTOBOOTHS - EVENTS	97
8.5 MYPHOTOCODE.COM - EVENTS	99
8.5.1 EVENTS - INFO	100
8.5.2 EVENTS - CLOUD	102
8.5.3 EVENTS - SCREEN	106
8.5.4 EVENTS - PRINT PHOTOS	110
8.5.5 EVENTS - PHOTOS & VIDEOS	112
8.5.6 EVENTS - EMAILS	114
8.5.7 EVENTS - EMAIL DESIGN	115
8.7 MYPHOTOCODE.COM - EMAILS	116
8.8 MYPHOTOCODE.COM - ALERTS & ERRORS	117
8.8 MYPHOTOCODE.COM - WARNING	118
9-UPLOADING CUSTOM USB STICK TO PHOTOBOOTH	119
10-DOWNLOADING	120

11-SETUP MENU	121
11.1 PRODUCTS % PRICES	122
11.1.1 MONEY	122
11.1.2 PHOTOBOOTH	
11.1.3 MODULES	123
11.2 RENTALS	123
11.2.1 SIGN OPTION	123
11.2.2 Show animations before Capture	124
11.2.3 GAME MODE	124
11.3 CUSTOMIZE	126
11.3.1 LOGO	126
11.3.2 TEXT	126
11.3.3 DATE	127
11.3.4 LOAD FROM USB	127
11.3.5 WELCOME/BYE	129
11.3.6 FRAMES	130
11.4 OPTIONS	130
11.5 CAMERA	132
12-INTERNET	133
12.1 INTERNET CONNECTION STATUS AT A GLANCE	
12.2 CONNECTING VIA ETHERNET	
12.3 CONNECTING VIA WI-FI	
12.4 SETTING UP THE WI-FI NETWORK TO ACCESS THE INTERNET	137
13-TROUBLESHOOTING	
13.1 GENERAL PROBLEMS	
13.2 MONITOR'S PROBLEMS	142 142
13.3 MONITOR NO SIGNAL MESSAGE	142
13.4 PRINTER PROBLEMS	
13.5 PRINTER ERROR	145 11/1
13.6 PC PROBLEMS	115
13.7 HARD DRIVE ERROR	
13.8 DONGLE ERROR	170
13.9 CAMERA ERROR	1 4 7 15∩
13.10 CONTROL BOARD ERROR	151
13.11 SOUND PROBLEMS	157
	102



13.12 PROBLEMS UPLOADING THE LOGO	152
14-CHARACTERISTICS	
14.1 CONTROL BOARD DIAGRAMS	
14.2 DECALS	155
14.3 DIAGRAM PHOTOBOOTHS PARTS	156
14.4 PARTS LIST	157
15-FAQS	
16-OPTIONALS	
17-NOTES	



1-SAFETY INSTRUCTIONS

The following directions must be followed carefully for safe use, to prevent personal injuries, and damage to the equipment.

Please read this entire manual before initial use and store it in a convenient location for on easy access.



MARNING: To ensure safe operation, observe specifications, notices and cautions in this document. Digital Centre Accepts no liability for damage or injuries from improper use of this product.



riangle **WARNING:** Prevent electrical shock and equipment damage. Before connecting or disconnecting cables and/or changing the paper, disconnect power cord from the A/C outlet.



MARNING: Prevent shock hazard and damage. Only plug the power cord into a 220 volts (110 volts for USA) grounded A/C outlet.



WARNING: Do not touch exposed wires or moving parts such as power supply modules. and the control board. Touching these parts could cause electric shock or other injury, data loss, and/or printer malfunction.



⚠ **WARNING:** Only use Mitsubishi CK9046(DC) paper / ink ribbon set in the printer. Use of other paper / ink ribbon will cause software malfunction, poor image quality, and/or printer damage.



MARNING: Do not touch the thermal print head, or head area of the printer. The print head operates at an extremely hot temperature. Touching it might cause burns or other injury.



 \triangle **WARNING:** Follow the directions in the Mitsubishi manual when cleaning the printhead. Do not use cotton, wool or other fabric swabs. The lint left behind poses a fire hazard.

NOTICE: Read additional **Warnings** in Mitsubishi Printer Manual.



WARNING: The printers are not interchangeable.



DANGER: Tipping Hazard! PhotoBooth may pose danger to small children and/or pets. Unplug the power cord from the A/C outlet immediately if the PhotoBooth tips over.



WARNING: Use only original parts from Digital Centre.

Use only original parts from Digital Centre. Use only original parts for your PhotoBooth from Digital Centre. Non original parts may compromise the use of the PhotoBooth and may create a malfunction and cause serious damage. Using different components, changing wiring, or altering the photo booth in any fashion will void the warranty.

Digital Centre is unable to assist any customer that has changed, modified, or altered the PhotoBooth using non original parts. We cannot provide a guarantee or service for products that are not original parts from Digital Centre.





↑ **DANGER:** Power Off the PhotoBooth immediately if any of the following occurs:

- ·Smoke
- · Unusual Odor
- · Unusual Noise
- · Water or other Liquids spill inside the PhotoBooth
- · Physical Damage



DANGER: Do not place or store the PhotoBooth in wet or extremely humid areas, in direct sunlight, near an open flame or heater, and/or swimming pools. Avoid Condensation.



♠ Danger: Operate the PhotoBooth in locations with ambient temperatures of 5°C – 40°C $(41^{\circ}F - 104^{\circ}F)$



DANGER: Install the PhotoBooth on a flat, even and, clean surface.



DANGER: Repairs should only be made by qualified technicians.



▲ WARNING: The PhotoBooth has to be connected to internet

MAINTENANCE: Cleaning: Use only a clean, dry, soft cloth. If necessary use a damp cloth and/or neutral detergent. Do not use window cleaner or any other alkaline cleaners.



2-SPECIFICATIONS



Power Supply: AC 220V 50/60

Hz(110V for USA)

Power Consumption: 260W

Weight = 124.5 Kg / 274.4 lbs.

Nominal fuse rating= 6 Amps

Monitor: LCD Monitor 19" AOC (4u)

Printer: Mitsubishi CP-D80DW Dye

Sublimation Photo Printer



3-FIRST STEPS WITH YOUR PHOTOBOOTH

3.1 CONTENT

These are the accessories included with your new Digital Centre PhotoBooth:

Manual



Keys



Boot DVD



Power Cord



Mini Wireless "N" USB Adapter



USB extension cable (optional)





Warning: Movement of the PhotoBooth requires assistance from two or more people.

- · Unwrap and remove all packaging materials.
- · Access to the printer and the USB port of the computer is on the left. Unlock and open this side service door and then remove the protective polystyrene foam block before first use.
- ·The keys for the service door, service panel, manuals, and power cord are located in the picture chute on the right side of the PhotoBooth.
- · Inspect the wiring harnesses for disconnected plugs.



3.2 INSTALLATION



The PhotoBooth has at the rear carries two wheels to move.

3.3 POWER SWITCH




Plug the power cord into the socket on the part of behind PhotoBooth. Slide the power switch to the "ON" position.



4-CONNECTIONS

4.1 CONTROL BOARD

CONTROL BOARD (DC-EVO-V4.0)

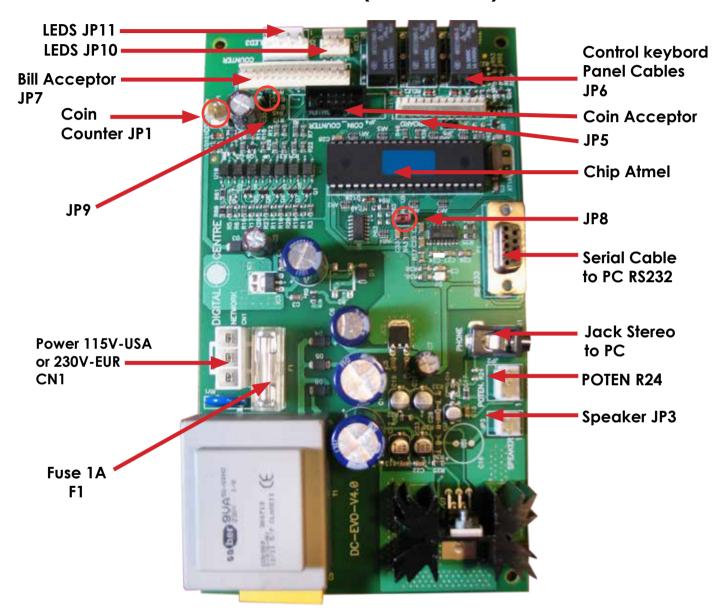

RS232. Serial Cable. From Control Board to PC.
JP7. Bill Acceptor Cable. From Control Board to Bill Acceptor.
CN1 Power Supply at 230 volts (115 volts for USA).
Jack Stereo. From Control Board to PC
F1. We need 1A fuse here to run the Control Board.
JP3. Speakers. JP3 gives us the volume control.
POTENT R24: Volume control



4.2 ACCESSING THE CONTROL BOARD



Open the Bottom Left Door (Photo Slot)




*There are 2 keys 1314 included on your PhotoBooth






Remove the 2 nuts that hold. (The front monitor chassis with the back chassis)



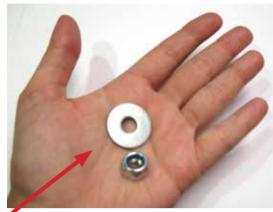



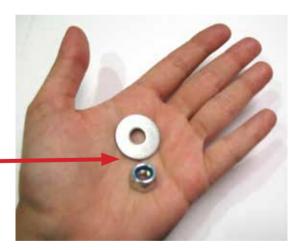




Open the STRIP, as if we open a door....




WARNING!. Do not open more than 60 $^{\circ}$. Attention, it is a very delicate operation.



CONTROL BOARD (DC-EVO-V4.0)

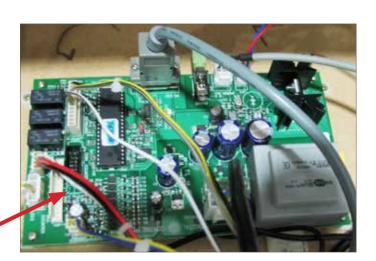

4.3 LAND CABLE RJ45 ETHERNET (INTERNET)

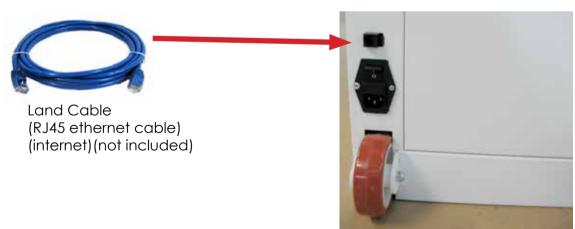

Internet connection

- · Check the distance between the internet connection and the position of your PhotoBooth in the room.
- · Ensure you have Land Cable (RJ45 ethernet cable) that is long enough.



WARNING:

·The cable just can only be plugged into one position.

CARD

READER

WIFI

CAM



4.4 PC WIRING


PC HP-C2D

Rear USB Slots

FREE FREE USB AUX DONGLE TOUCH PRINTER

Front USB Slots


USB STICK	EDEE
CUSTOM	FREE

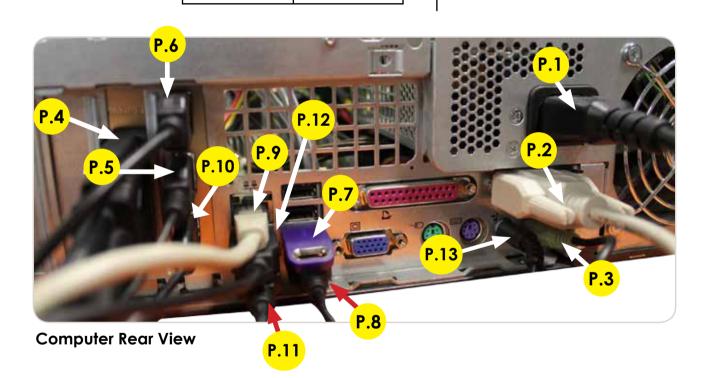

- P.1 Main Power cable
- P.2 Control Board. Serial Cable From PC to Control Board. STRIP (200 cm Inch 78,74)
- **P.3 Jack Stereo.** Cable. (180 cm Inch 70,87)
- P.4 VGA Cable to 4 Monitors
- **P.5 Wifi (or Antena).** USB Extension AM/AF (180 cm Inch 70,87) FROM to USB Cable AM/AF to PC (50 cm Inch 19,69) Optional feature
- P.6 Credit Card Reader USB
- **P.7 Dongle.** USB Extension AM/AF From Dongle to PC. (180 cm Inch 70,87)
- P.8 Printer. USB Cable From Printer to PC. (180 cm Inch 70,87)
- P.9 Ethernet cable (internet). Land Cable (RJ45 Ethernet cable)
- P.10 Camera. USB Extension AM/AF From Camera to PC. (180 cm Inch 70,87)
- P.11 Touch. USB Cable From Touch Monitor to PC. (180 cm Inch 70,87)
- **P.12 USB Auxiliar**. USB Extension Cable AM/AF (180 cm Inch 70,87) From USB Cable AM/AF PANEL to PC (50 cm Inch 19,69)
- P.13 External Mic jack Cable to PC



4.5 PRINTER

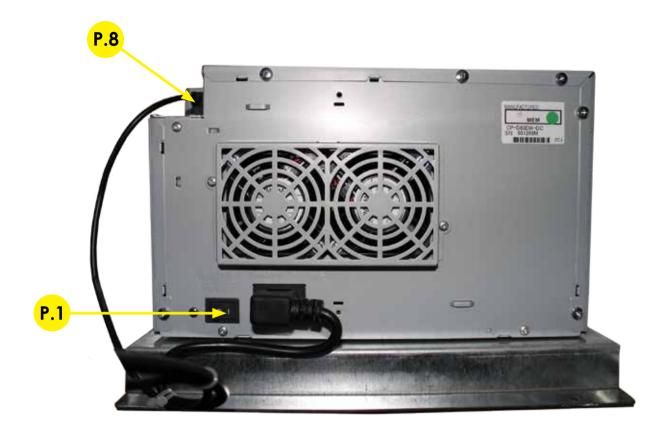



PRINTER WIRING

P.1 Main Power cableP.8 Printer. USB Cable From Printer to PC. (180 cm - Inch 70,87)

4.6 HOW TO TAKE THE PRINTER OUT OF THE PHOTOBOOTH



1. Open the photoslot door




4-Remove the photo slot upper side by pushing down the spring latch



2-Open the plastic clamper to take out the cables



5-Unsrew the two round faston screws

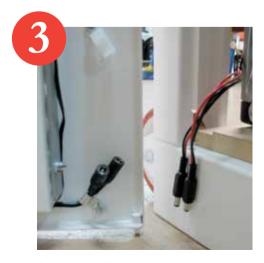

3-Unplug the led cables



6-Take out the printer




4.7 USER CONNECTIONS





4.8 GENERAL

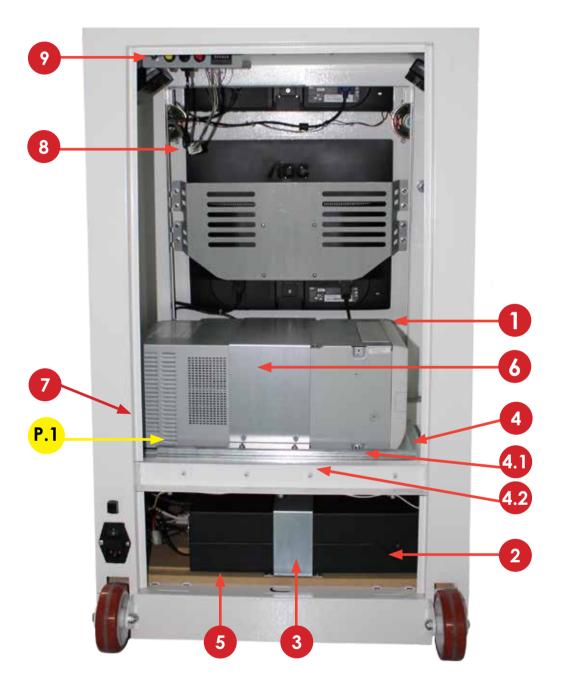



COMPONENTS


- 1. Printer Mitsubishi CP-D80DW
- 2. PC HP C2D
- 3. PC HP Holder. (RAW METAL)
- 4. Wood Printer Base. STRIP (RAW)
- 4.1 Set 2 Printer Support Guideway
- 4.2 Printer Support Strip / I-go
- 5. Wood PC Base. STRIP (RAW)6. Printer Holder CP9550DC. (RAW METAL)
- 7. Transformer 2A 12V
- 8. Cable From Control Board to Service Panel + Speakers + Led.
- 9. Service Control Panel Model 2

PC WIRING

P.1 Main Power cable **P.7 Dongle.** USB Extension AM/AF From Dongle to PC. (180 cm - Inch 70,87)



4.9 MONITORS

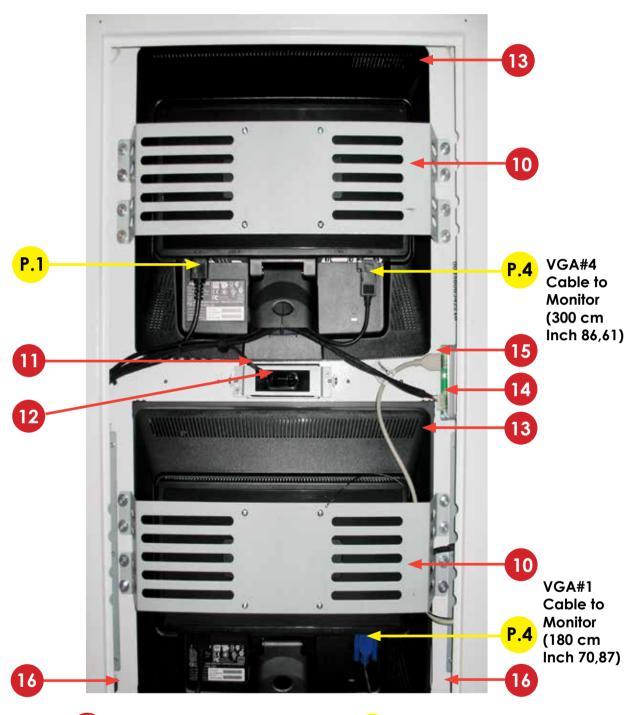

COMPONENTS

10. Monitor 19" Holder. STRIP (RAW METAL)

11. Tilting Camera Back Holder.

(RAW METAL)

12. Full HD Camera

13. LCD Monitor 19" AOC

14. Touch Cable From

Touchboard to USB PC +12V Adaptor

+USB Extension (360cm - Inch 141.73)

15.Touch Cable from Touch glass to

Touchboard.


16. Leds Cable. (BLACK)

(53 cm - Inch 20,87)



PC WIRING

P.1 Main Power Cable P.4 VGA Cable to Monitor.

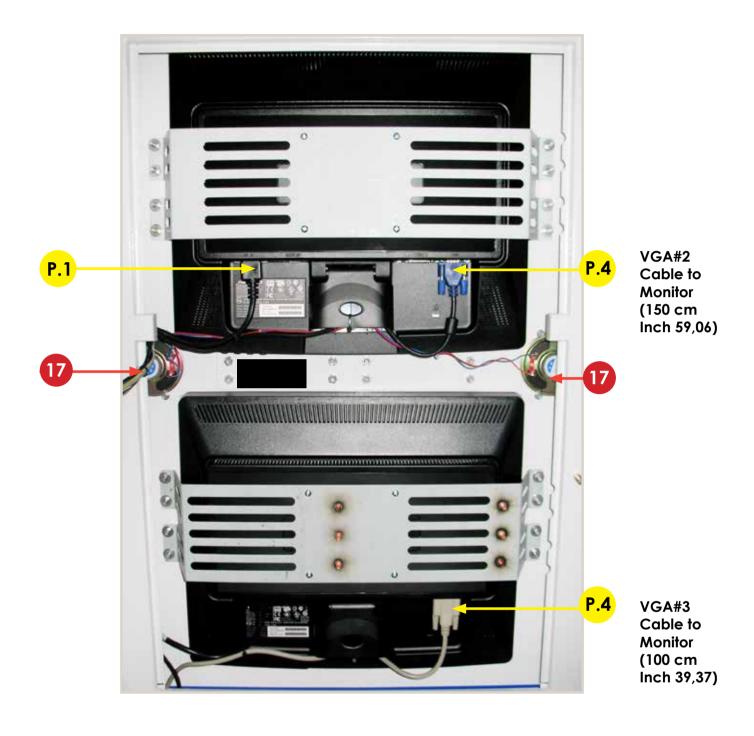





P.1 Main Power Cable P.4 VGA Cable to Monitors



5-PRINTER



WARNING: The printers are not interchangeable

· Protective Measures

This printer is designed to operate with PhotoBooth systems. Do not remove any inside components. Do not try to repair or manipulate it. Before printing, install an lnk sheet and paper.

Never insert any object into the unit.

Foreign objects of any kind inserted into this unit is safety hazard and can cause extensive damage.

Do not place anything on the digital color printer.

Heavy objects placed on the digital color printer can cause damage or obstruct proper ventilation.

Do not remove the cabinet.

Touching internal parts is dangerous, and may lead to malfunction. Contact the sales dealer to carry out internal checks and adjustments. Before opening the cover for eliminating a jammed paper, etc ..., be sure to disconnect the power cord plug.

When transporting the unit.

When transporting the unit, remove the ink sheet and print paper from the unit.

Be careful around print paper exit slot.

Do not insert your hand or any material into the paper exit slot during printing. Do not touch the cutter blade inside the paper exit slot. Otherwise, your finger will be injured.

Changing the film.

When the film end sand takes it out of the printer, it may appear that there is still film. The film is left can not be exploited. The amount of ink is tied to the amount of paper.

Do not touch the thermal head.

Do not touch the thermal head (located inside the unit).

The thermal head is heated to a high temperature. This may cause injury.


Ink sheet and paper print supply.


Use only the ink sheet and paper supplied by Digital Centre, otherwise the Photo Booth system will not work, and Digital Centre does not assume any responsibility for damages or injuries.




5.1 FEATURES & FUNCTIONS

FRONT PANEL

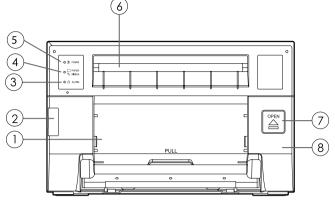

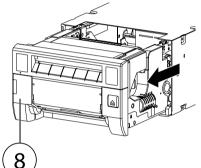

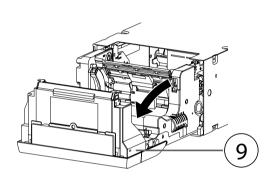

1 · PAPER STRIP BIN

Holds the paper strips generated by margin cut. Empty the bin frequently to prevent jamming the strips at the print outlet.

NOTE

Remove the bin before opening the door. If the door is opened with this bin attached, the printer or this bin may be damaged. Do not remove the bin during printing. It may cause a malfunction.

2 · CONNECTOR COVER

Do not open the cover during normal use.

3 · ALARM INDICATOR (△)

This indicator illuminates or blinks when a paper jam

occurs or the door is open.

4 · PAPER RIBBON INDICATOR (□/%)

When an error concerning the ink ribbon or print paper

occurs, this indicator illuminates or blinks

5 · POWER INDICATOR (①)

When the power is turned on, the indicator illuminates.

It normally illuminates green, however, blinks or

illuminates orange depending on the printer status.

6 · PRINT OUTLET

The printed paper comes out here.

7 · OPEN BUTTON (♠)


Press to release the printing unit out.

8 · PRINTING UNIT

Open to load print paper or ink ribbon. Press the $\ensuremath{\mathfrak{D}}$


OPEN button to release the printing unit.



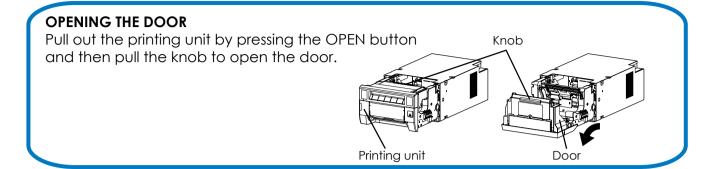


PAPER STRIP BIN

Hook and pull up the paper strip bin to attach it firmly. Hold and pull the handle on the lower part of paper strip bin to remove.

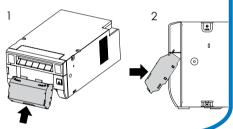

SIDE AND REAR PANEL

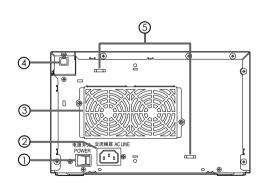

1 · POWER SWITCH

Use to switch the power ON and OFF.

2 · POWER SOCKET (AC LINE)

Use to connect the provided power cord. Insert the cord firmly.

3 · FAN COVER /

HANDLE FOR TRANSPORTING

When carrying the printer, hold this handle and the front upper part of the printer.

4 · USB TERMINAL

Use to connect the USB cable.

5 · SECURING HOLES FOR THE CABLE TIE

Use to secure the power cord or USB cable by using the cable ties (supplied).



5.2 BEFORE OPERATION


5.2.1 INSTALLATION OF PRINT PAPER

· SPACERS

See the Quick Setup Guide on how to use the spacers.

How to attach the spacers

- 1. Insert the spacer with the paper flange's stoppers retracted.
- 2. Turn the spacer until the latches are locked. When you remove the spacers from the paper flanges, follow the above procedure in reverse.

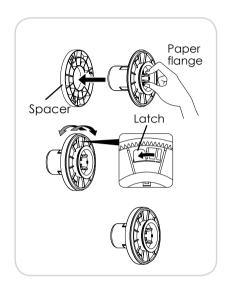

Attach the supplied paper flanges to both sides of the print paper. When you pinch the latches on the paper flange, the stoppers retract into the shaft. Attach the flanges to the print paper with the stoppers retracted. Make sure that the flanges are attached to the print paper securely, and release the latches.

NOTE

- Take care not to pinch your fingers.
- Do not remove the sticker on the print paper roll yet.
- Do not loosen the paper roll. Any slack in the print paper may degrade the print quality.




CAUTION


- When placing the print paper, keep the print paper upright.
- When you put the print paper sideways, it may roll and fall. This may cause injury.


NOTE


• Fingerprints or dust on the paper's surface may degrade print quality and cause paper jams.

When the paper flange cannot be attached due to the deformation of the print paper, reshape the print paper manually before attaching the flange.

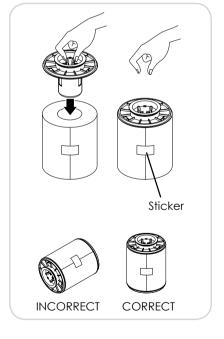


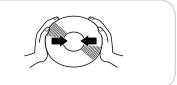

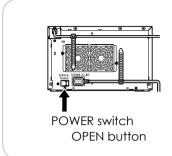


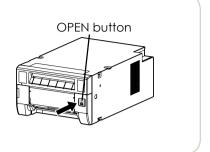

Press the POWER switch on the rear panel to turn on the power. After the POWER indicator's color has changed from orange to green, press the OPEN button to release the printing unit out.

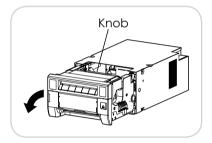



Remove the paper strip bin and then pull the knob to open the door.

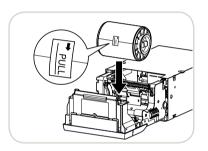

Install the print paper into the unit.
Place the printing paper in the correct orientation.

Make sure the paper roll is firmly installed.

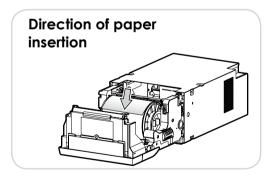

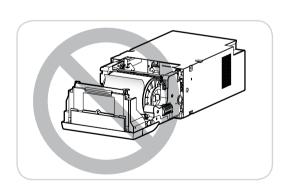

CAUTION


Do not push down on the printing unit or the door.

If you push down on the printing unit or the door when they are open, this unit may fall and it can cause damage or injury.

NOTE

- Make sure to turn on the power before installing the print paper. Otherwise, a paper jam may occur.
- Load the paper roll slowly into the unit. If it is dropped along the ditches, the unit or accessories may be damaged.



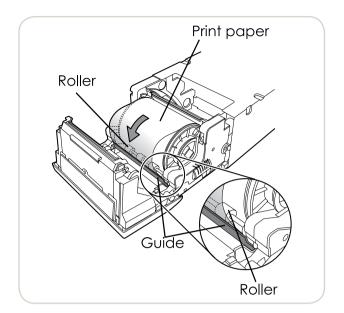

Remove the sticker and insert the print paper between the roller Print paper and guide as shown right to feed it. When the buzzer sounds, stop the paper feeding.

Remove the sticker before inserting the print paper between roller and guide. Make sure to insert the paper straight.

Buzzer continues to sound until the printing unit is closed.

NOTE

- · Keep the roller clean.
- · Dirt on the roller may degrade the print quality.

NOTE

- · When taking the print paper out, pull it up toward you.
- · Make sure to turn on the power before replacing the print paper.
- · Make sure to eliminate any slack from the print paper. If you carry out the following steps without eliminating the slack, the print paper may be damaged.
- If you continue to feed the print paper inward after the buzzer sounds, it may cause a paper jam.


5.2.2 INSTALLATION OF INK RIBBON

After installing the print paper, install the ink cassette into this unit.

Before installing the ink cassette into this unit, load the ink ribbon in the ink cassette.

NOTE

- Place the ink cassette on a flat surface, when loading the ink ribbon.
- Select a place that is free of dust when loading the ink ribbon. Dust or dirt settling on the ink ribbon results in poor print quality.
- Make sure that the shafts of the ink ribbon fit into the ink cassette firmly.

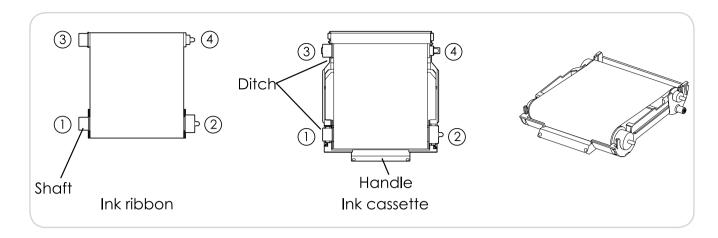


5.2.3 INSTALLATION THE INK CASSETTE

Place the ink cassette containing the ink ribbon in the position as shown in the illustration.

To insert the ink cassette, align the protrusions on both sides of the cassette with the right and left guides inside the printing unit and slide it in a slanting direction.

Mount the ink cassette to the back firmly by holding the handle.

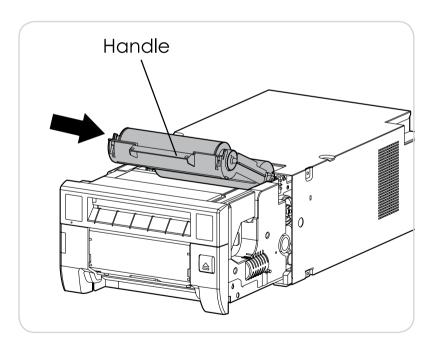

NOTE

Do not touch the thermal head.

Fingerprints or dust on the thermal head will degrade the print quality.



CAUTION

Do not touch the thermal head right after printing because it is extremely hot. Otherwise you may get burned or injured.



Note that the thermal head is quite sensitive to static electricity. When you touch the thermal head while carrying static electricity on your body, the thermal head may be damaged.




Push the printing unit to close.

Close the printing unit by pushing the right and left sides of the unit from the front with both hands.

When a new paper is loaded and the printing unit is closed with the power turned on, the paper will be automatically fed and cut.

CAUTION

When closing the printing unit, be careful not to get your hands caught between the printer and the printing unit. Otherwise, you may get injured.

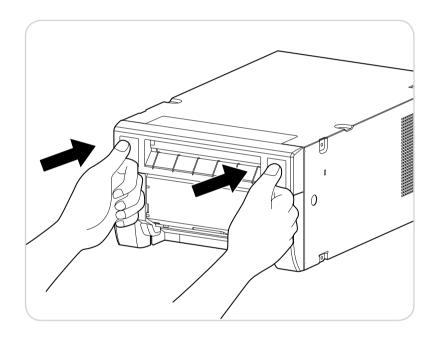

NOTE

- When closing the printing unit, push it until a click is heard.
- If the PAPER RIBBON indicator illuminates when the printing unit is closed, the print paper may have not been installed correctly.

In this case, open the printing unit to make sure that the print paper has been installed correctly. Then close the printing unit again.

• When the paper roll is reinstalled more than three times, the print paper may be used up earlier than the ink ribbon.

Installation of the print paper and the ink ribbon is completed.

NOTE

- Make sure to replace the print paper and the ink ribbon simultaneously.
- Empty the paper strip bin frequently to prevent jamming the strips at the print outlet. Whenever you replace the paper and ink ribbon, make sure to throw away the paper strips in the paper strip bin.
- Whenever you replace the print paper and the ink ribbon, clean the thermal head and the platen roller. For the cleaning procedures.




5.3 ERROR MESSAGES & COUNTERMEASURES

OVERCOMING PAPER JAMS


1 Press the OPEN button to open the printing unit.

Make sure that the power is turned on before opening the printing unit.

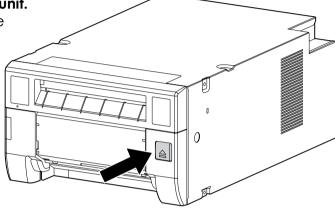


2 · Remove the ink cassette.

Push down the ink cassette as shown by the arrow 1 and pull it out.

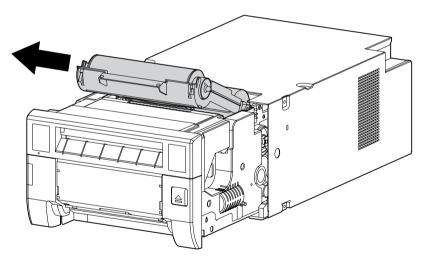


3 · Open the door.

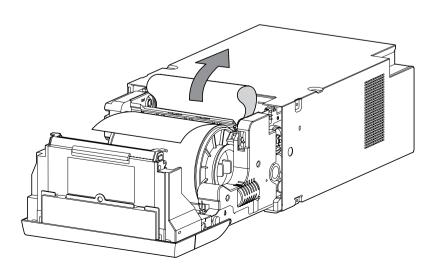



4 · Pull out the defective part of the print paper to the direction of an arrow.

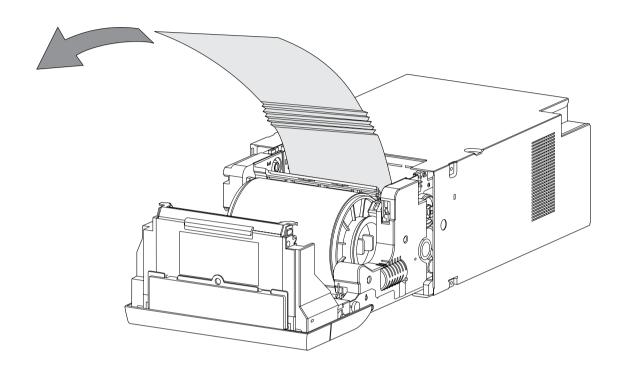


5 · Cut off the defective part of the print paper with scissors.

NOTE

Make sure to cut off the printed part of the print paper. Failure to do this may result in the ink ribbon sticking to the print paper and being torn.

- Make sure to clean the thermal head and the platen roller.
- 6 · Remove the print paper.
- $7 \cdot$ Install the print paper and the ink cassette with the ink ribbon.
- 8 · Close the door.
- 9 · Close the printing unit by pushing it.

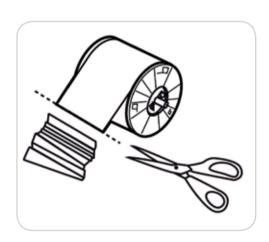



5.4 CLEANING

Cleaning as indicated below will help maintain stable printer operation and extend the printer's life. Preparations:

Alcohol (isopropyl alcohol)

Tissue paper (Fold in half about four times, and use the folded side to clean.) or soft and clean cloth.

PREPARATIONS FOR CLEANING

- 1 Press the POWER button to turn on the power.
- 2 Press the DOOR OPEN button to open the door.
- 3 Remove the ink cassette.
- 4 Take out the print paper.
- 5 Press the POWER button to turn off the power. Make sure to turn off the power before cleaning.


THERMAL HEAD CLEANING


When lines appear on the printed images, clean the thermal head.


Wipe the head cleaning part (as shown right) carefully with cloth dampened with a small amount of alcohol.


NOTE

- · Do not damage the thermal head.
- When the poor print quality is not corrected even if the head has been cleaned, replacement of the thermal head may be required. Contact your dealer.

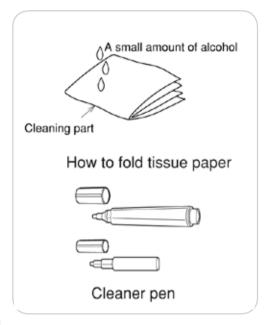

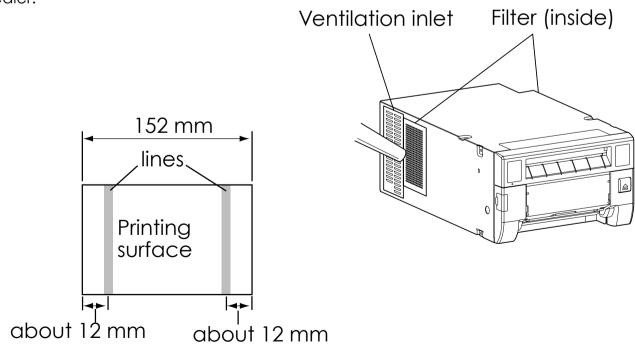

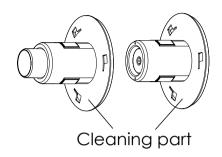

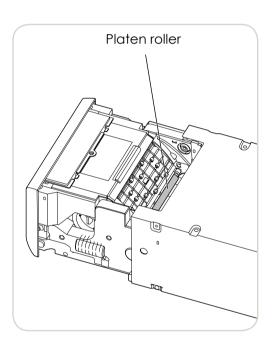



CAUTION

· Thermal head is hot right after printing. Wait until the head is cold before cleaning the thermal head.



· The thermal head may be damaged if you touch it while static electricity builds up on your body.


PAPER FLANGE CLEANING

Clean the parts that contact the print paper sides as shown above. Wipe the parts carefully with tissue paper dampened with a small amount of alcohol.




6-USING THE PHOTOBOOTH

6.1 GENERAL OVERVIEW

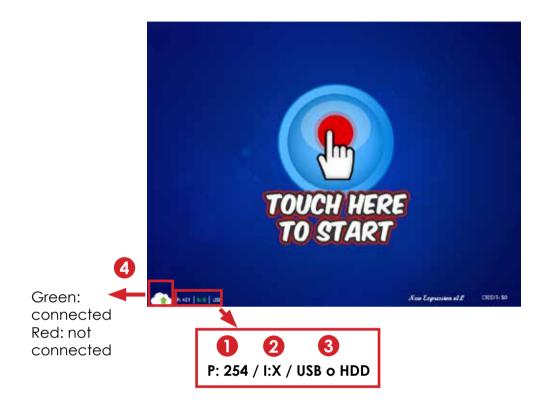

- 1 Displays the film stock
- Displays the photos that haven't been uploaded to the Cloud, if X=0 it means that there are no photos waiting to upload to the Cloud.

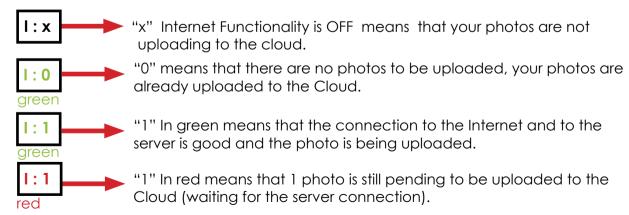

3 Shows if the PhotoBooth is working with the USB stick (USB) or not (HDD).



SCAN QR-PHOTO

SCAN: If you press the Scan button, a screen appears where you're asked to show the QR-PHOTO at the camera. Instantly, your photo will appear on the screen and you can make extra copies.

SMARTPRINT:

If you press the Smartprint button you will be able to print the photos of your Smartphone in the PhotoBooth.

For more information visit section 6.4.2 SMARTPRINT.

This function is optional, you will need an extra hardware, provided by DC.



6.2 PRODUCTS



DEMONSTRATION

When there are no vends the machine enters in Demo Mode. Photo samples are displayed. Once money is inserted, you are taken to the credit screen.

You can choose among 7 different products and 3 formats: two strips, one 4x6 or a 4x6 collage.



2 STRIP

Get Frames

FRAME SELECTION

You can choose different Frames options.

Use the arrows(left/right) to view more options.



Black & White

4 different shots (3 shots if the logo is enabled, the logo will appear in the 4th shot).





Color

4 different shots (3 shots if the logo is enabled, the logo will appear in the 4th shot).



Street Art

4 different shots (3 shots if the logo is enabled, the logo will appear in the 4th shot).



Fashion

SELECT DESIRED LOOK

You can choose different Fashion options. Use the arrows (left/right) to view more options.





4x6"

Get Frames

FRAMES SELECTION

You can choose one Get Frames. There are different options. Use the arrows (left/right) to view more options.



Black & White One unique shot.



ColorOne unique shot.





Street Art

Select one design. One unique shot.



CollageSelect one design. 4 different shots.



6.3 PLAY



Game mode COINOP

Coinop mode, at the bottom right of the screen you can view the price of the products. You can change the price for product and format in the setup menu. (Setup Menu Products & Prices)



PAYMENT

There are 3 different options: CASH / CREDIT DEBIT / SMARTPHONE

The default option is CASH. If there is a credit card reader it will appear in the screen.

If you have the SMARTPHONE option activated it will appear in the screen. To select this payment option you should go to MyPhotoCode and introduce your PayPal Merchant account ID.

(For more information visit MyPhoto-Code manual section 4.1)







DISCLAMER SCREEN

If you select option "Print & Share", your photos will be uploaded to the Cloud and you can retrieve them at anywhere and at anytime and share them with family and friends. Always in a secure environment.

If you only choose print option, the photo only will be printed but you will not have the possibility to buy it in the net.

You can enable or disable this option in the Setup Menu.



DISCLAMER SCREEN

If you select option "Print & Share", your photos will be uploaded to the Cloud and you can retrieve them at anywhere and at anytime and share them with family and friends. Always in a secure environment.

If you only choose print option, the photo only will be printed but you will not have the possibility to buy it in the net.

You can enable or disable this option in the Setup Menu.



SHOTS 1

4 shots are taken. (3 shots if you enabled the logo). At the top left appears the countdown, indicating at what moment will produce the shot.



SHOTS 2

At the bottom right of the screen shows how many shots have been made and how many are left to be done.



SHOTS 3

There is only one shot missing, the last one.





SHOTS 4

You have spent all your shots.



EXTRA COPIES

You can choose to make some extra copies in the same formats.

This screen appears if the option Extra Copies is enabled in the Setup Menu.



EXTRA PRODUCTS 1

You can choose to make some extra copies in other frames. You can make extra prodcuts in 4x6" format.

To choose the photo you have to click over the photo you want.

This screen appears if the option Extra Products 1 is enabled in the Setup Menu.





EXTRA PRODUCTS 1

Choose how many copies do you want make.



EXTRA PRODUCTS 1

The number shown over the photo indicates the number of copies selected.

You can print more photos or check out.



EXTRA PRODUCTS 2

You can choose to make some extra copies in other frames.

You can make extra prodcuts in 4x6" format.

This screen appears if the option Extra Products 2 is enabled in the Setup Menu.





EXTRA PRODUCTS 2

Choose how many copies do you want make.



EXTRA PRODUCTS 2

The number shown on the photo indicates the number of copies selected.

You can print more photos or check out.



PAYMENT

There are 3 different options: CASH / CREDIT DEBIT / SMART-PHONE

The default option is CASH. If there is a credit card reader it will appear in the screen.

If you have the SMARPHONE option activated it will appear in the screen. To select this payment option you should go to MyPhotoCode and introduce your PayPal Merchant account ID. (For more information visit MyPhotoCode manual section 4.1)





TODAY IS YOUR LUCKY DAY! TAKE A NEW PHOTO AND RECEIVE \$2 OFF CREDIT: COST: TO PAR:



VIDEO

This screen appears if the option Record a Video Message is enabled in the Setup Menu.

EXTRA PLAY

Take a photo with a discount applied by the owner (no extra products)

This screen appears if the option Extra play is enabled in the Setup Menu.

PRINTING

While printing, the photos you have selected will appear on the screen. It can also show animations while printing.



Game mode BAR MODE

BAR MODE

If you are playing in Bar mode, the payment screen appears at the end the game.

This game mode has the same game options in Coinop.





Game mode FREEPLAY (Rentals)

If you are playing in Freeplay mode, the payment screens not appears during the play.





DISCLAMER SCREEN

If you select option "Print & Share", your photos will be uploaded to the Cloud and you can retrieve them anywhere and any time and share them with family and friends. Always in a secure environment.

If you choose print only option, the photo only be printed but you will not have access to buy it in the net.

You can enable or disable this option in the Setup Menu.





SHOTS 1



SHOTS 2



SHOTS 3





SHOTS 4



EXTRA COPIES

You can choose to make some extra copies in various formats. You can make extra copies in the same format.

This screen appears if the option Record a Extra Copies is enabled in the Setup Menu.



VIDEO


This screen appears if the option Record a Video Message is enabled in the Setup Menu.





PRINTING

While printing, the photos you have selected will appear on the screen. It can also show animations while printing.

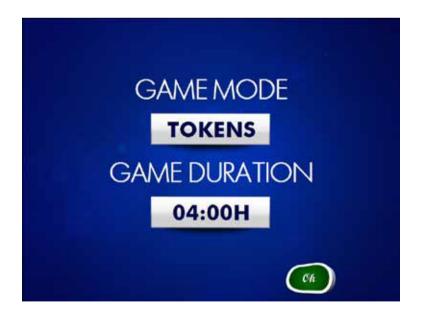

Game mode TOKENS

This screen appears if the option token is enabled in the Setup Menu.





Game mode TIMER

This screen appears if the option token is enabled in the Setup Menu.

The display shows the configured free game period. Shows the time initial period of game and when it will end. Also informs of the current time. If the time has expired, get a message informing

of this.

If in the Setup menu "coinop before and after" is enabled, this screen is not displayed, although the performance will be the same. In this case, to inform to the slide show and the intros out an informational text (of free time) to the bottom of the screen.





Quick Product Selection

This screen appears if the option Quick Product Selection is enabled in the Setup Menu.

To use the Quick Selection screen, the number of products must be less than or equal to 6.

FRAMES SELECTION

You can choose one Get Frames. There are different options. Use the arrows (left/right) to view more options.





FRAMES SELECTION

You can choose Frames. There are different options. Use the arrows (left/right) to view more options.





SHOTS

4 different shots (3 shots if the logo is enabled, the logo will appear in the 4th shot).



SHOTS 2





SHOTS 3



SHOTS 4

2 STRIPS

6.4 OPTIONS MENU



You've seen that in the pictures get a QR-Photo printed.

QR-PHOTO: Exclusive and Unique QR Code to each print to get your Photos Anytime, Anywhere from any Smartphone, or Print them again Anytime, Anywhere from any DC PhotoBooth. At the bottom of the screen left product is a button with a drop down menu with two options: Scan and Login.





6.4.1 SCAN QR-PHOTO

SCAN: If you press the Scan button, a screen appears where you're asked to show the QR-PHOTO at the camera. Instantly, your photo will appear on the screen and you can make extra copies.









PAYMENT

There are 3 different options: CASH / CREDIT DEBIT / SMARTPHONE

The default option is CASH. If there is a credit card reader it will appear in the screen.

If you have the SMARPHONE option activated it will appear in the screen. To select this payment option you should go to MyPhotoCode and introduce your PayPal Merchant account ID.

(For more information visit MyPhotoCode manual section 4.1)



PRINTING

While printing the photos you have selected it will appear in the screen the image "printing".

It can also appear animations while printing.





6.4.2 SMARTPRINT

The easy way to print on SmartPhone photo in any DC PhotoBooth.

This option is not included in the PhotoBooth; this function is optional, you need an extra hardware, provided by DC.

Press **NEXT** to continue.






On this screen it will appear our wifi direction and the password to connect.





Scan QR with your smart-Phone _

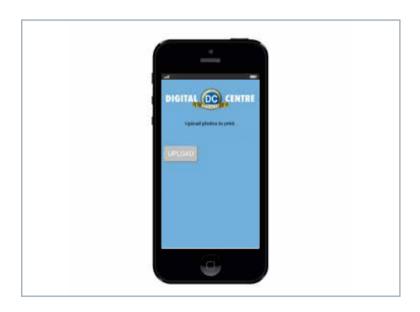







Select photos from your phone and upload your selected photos.





PAYMENT

There are 3 different options: CASH / CREDIT DEBIT / SMART-PHONE

The default option is CASH. If there is a credit card reader it will appear in the screen.

If you have the SMARPHONE option activated it will appear in the screen. To select this payment option you should go to MyPhoto-Code and introduce your PayPal Merchant account ID. (For more information visit MyPhotoCode manual section 4.1).



While printing, the photos you have selected will appear on the screen.


It can also show animations while printing.






7-CUSTOMIZED MANUALLY

7.1 STRUCTURE

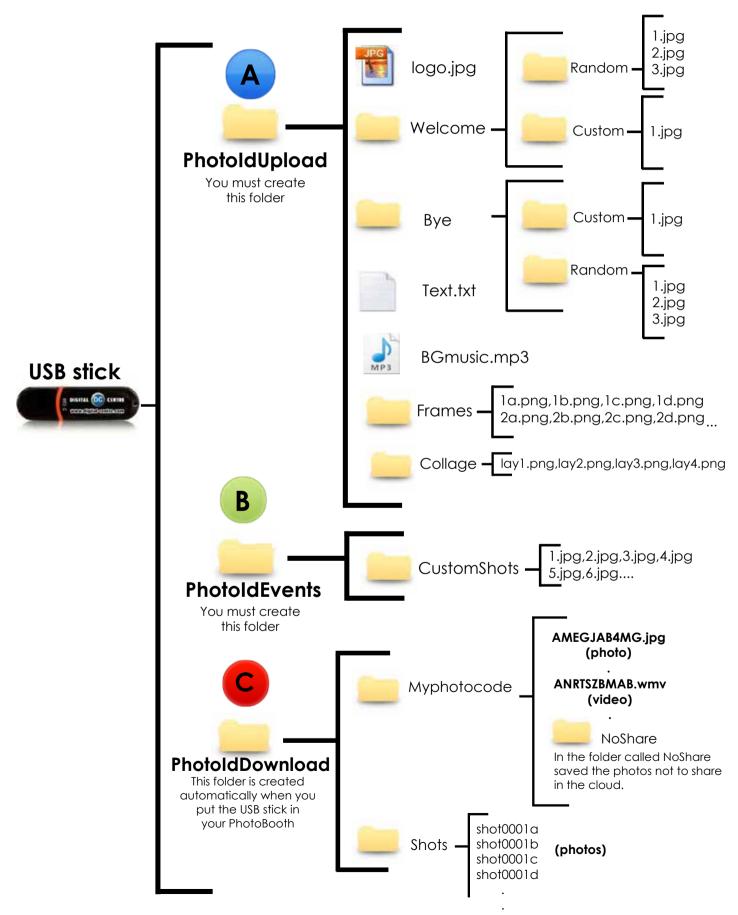



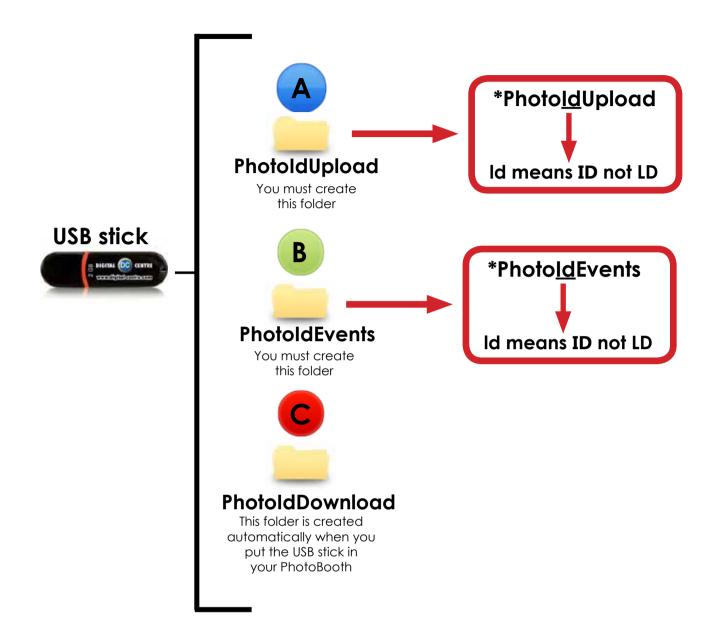


1 · Necessary Materials:

USB Stick with 2 GB of available space We recommend using a USB Stick with a led indicator






7.2 LOGO

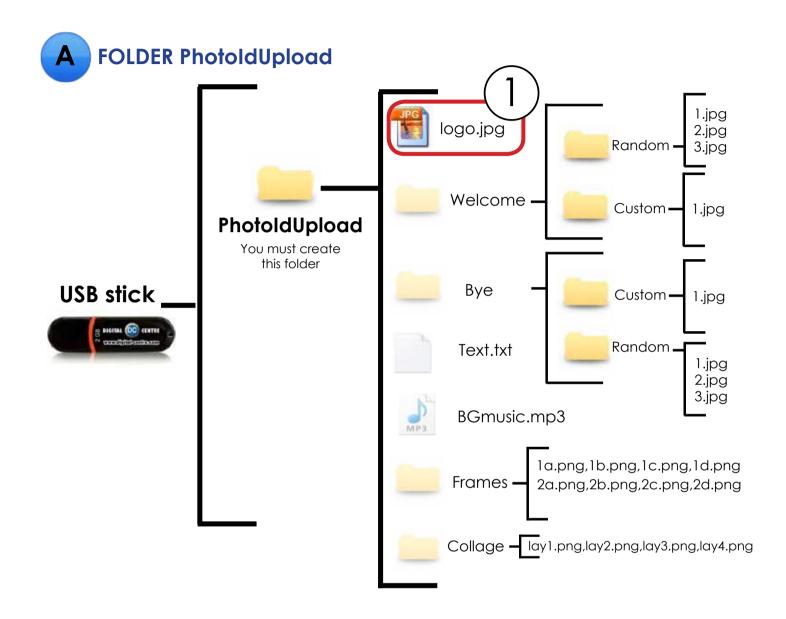


DIRECTIONS FOR UPLOADING THE LOGO

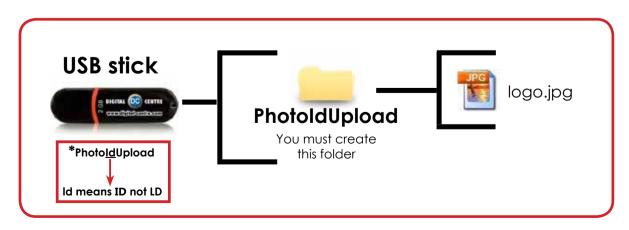




- 1-Create a folder on the USB stick and name it **PhotoIdUpload**
- 2-Insert the logo that you want to use in the folder **PhotoIdUpload**
- 3-Connect the USB Stick to the PhotoBooth
- 4-Go to Setup Menu (important) and confirm that logo is activated

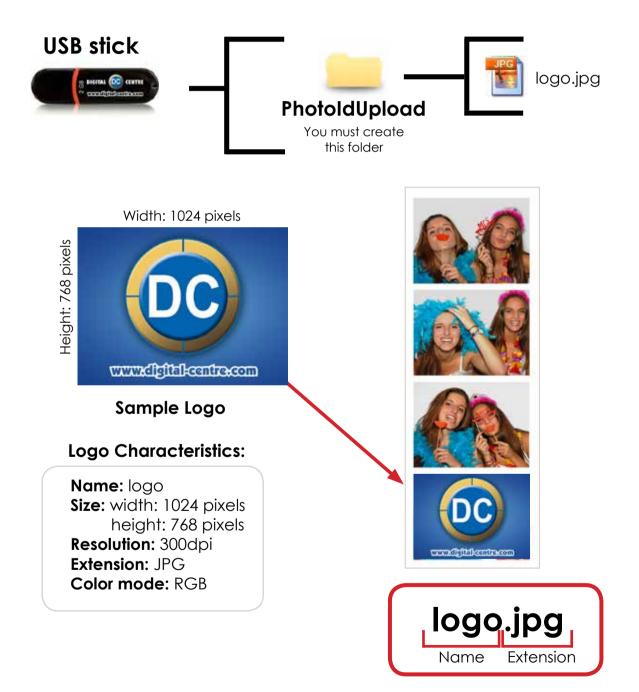


Not working? Please refer to section 13.1 for assistance

UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)




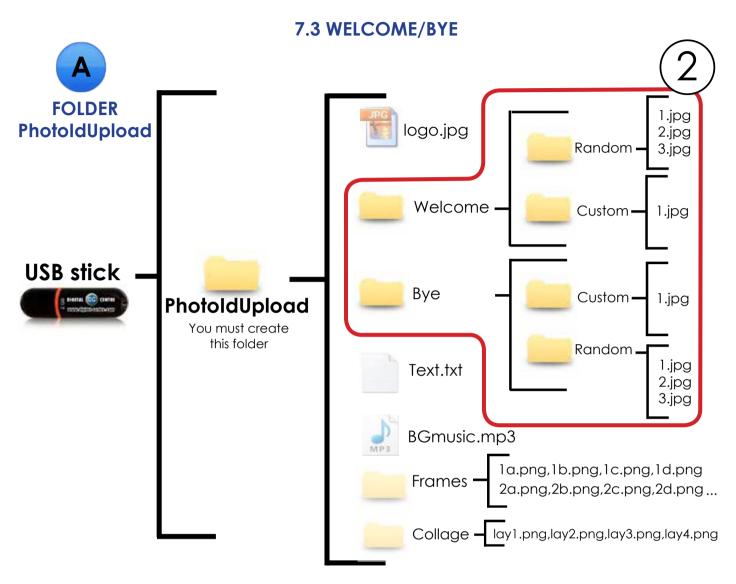

DIRECTIONS FOR UPLOADING WELCOME/BYE

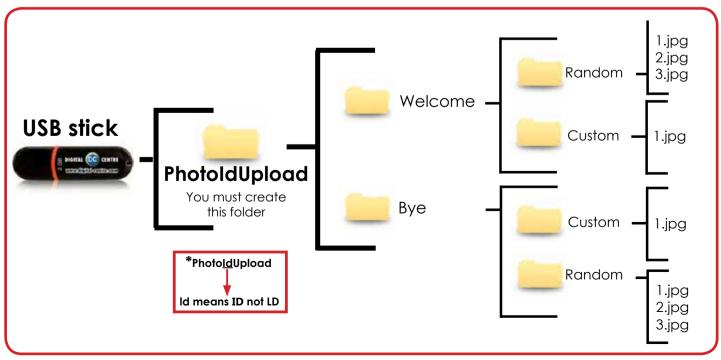



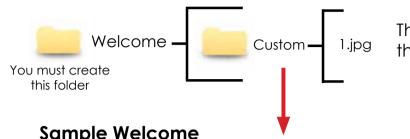

The name of the image must be: 1.jpg

Sample Welcome

Specifications:



1.jpg

Name: 1


Size: width: 1024 pixels

height: 768 pixels Resolution: 72dpi

Extension: JPG Color mode: RGB



Bye message (custom)

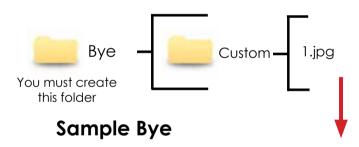

The name of the image must be:1.jpg



1.jpg

Specifications:

Name: 1

Size: width: 1024 pixels

height: 768 pixels


Resolution: 72dpi Format: JPG

Color mode: RGB

UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)



Welcome message random

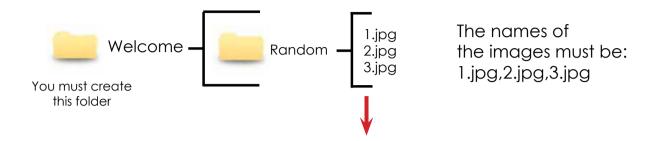

2 Samples Welcome random







2.jpg

Specifications:

(1.jpg,2.jpg,3.jpg)
Each one with following characteristics:


Name: 1

Size: width: 1024 pixels height: 768 pixels Resolution: 72dpi Extension: JPG Color mode: RGB

1 .jpg
Name Extension



Bye message random

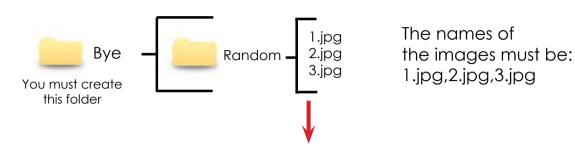

Each player will get a different Random goodbye screen.

2 Samples Bye random





1.jpg

2.jpg

Specifications: (1.jpg,2.jpg,3.jpg) Each one with following characteristics:

1 jpg
Name Extension


Name: 1

Size: width: 1024 pixels height: 768 pixels Resolution: 72dpi


Extension: JPG
Color mode: RGB

UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)



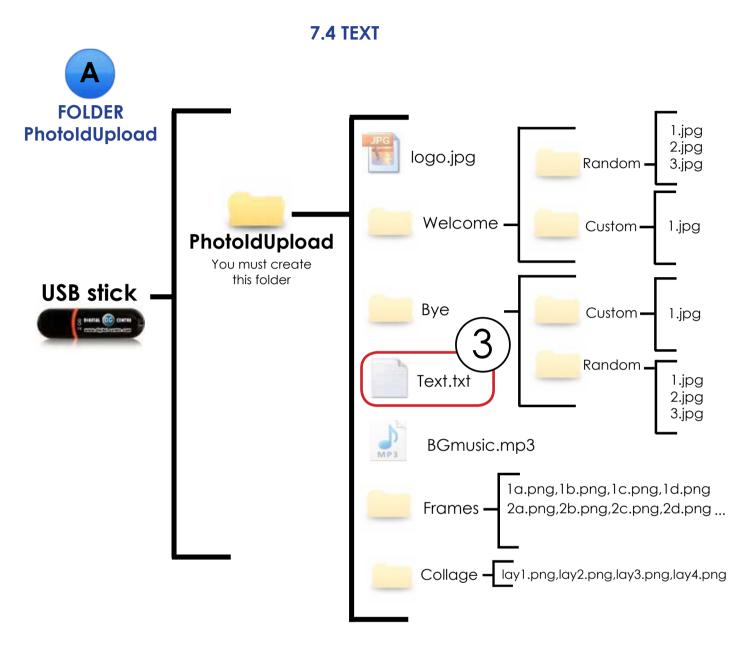

DIRECTIONS FOR UPLOADING TEXT

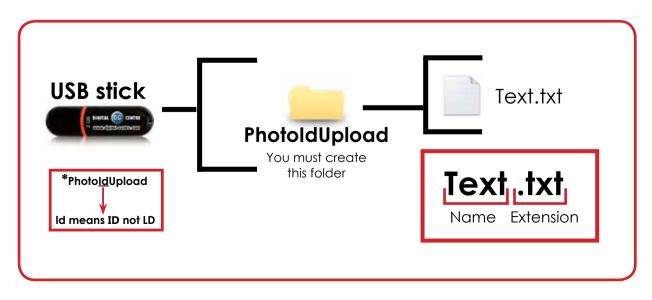



All text in this file is printed vertically on the left side of the photostrips.

Sample:

Date:18-11-2014|Digital-centre.com|QR-Photo|Share Secure go to MyPhotoCode.com and enter this code AME-G23596Z




Sample:

Date: 18-11-2014 ** go to MyPhotoCode.com and enter this code AMEG2KELOB Digital-centre.com | QR-Photo | Share Secure




UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)




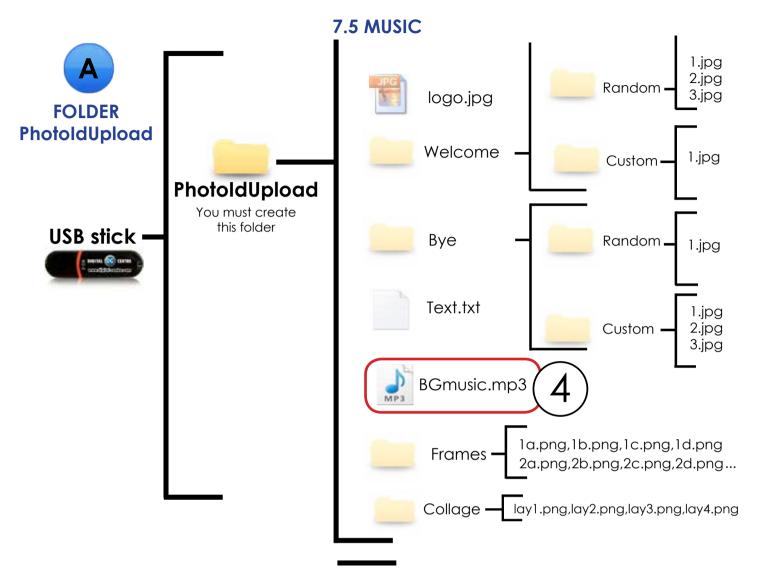

DIRECTIONS FOR UPLOADING MUSIC

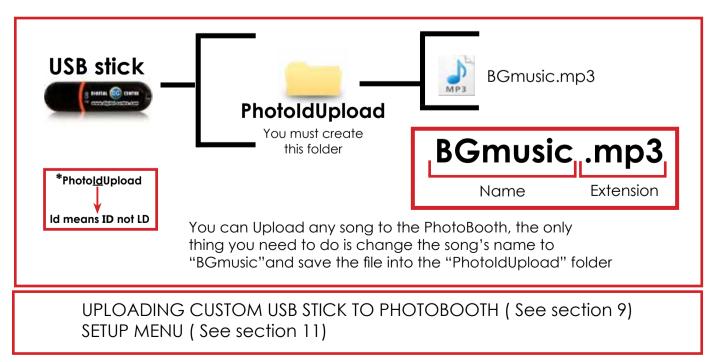



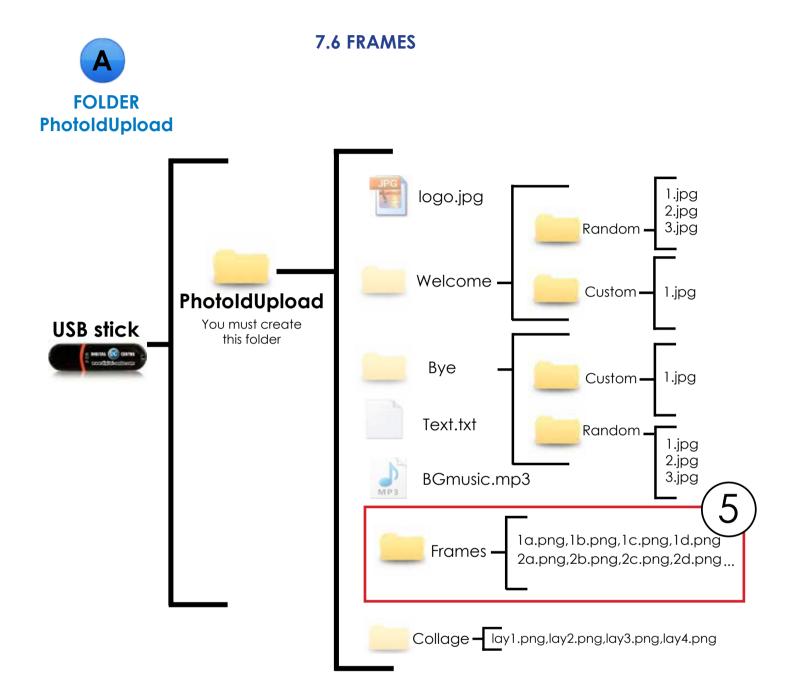




FRAMES

There are **3 screens** with frames. Each screen contains **4 groups**. That means, a total of **12 groups**. Every group of 4 frames will be printed together.

If you want to customize one group (for example number 1), you need four images (frames) 1a.png, 1b.png, 1c.png & 1d.png".



To create a new framework we will create a file with the following characteristics.

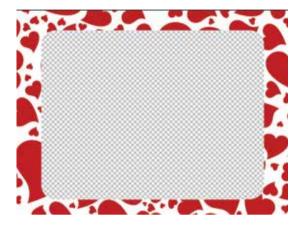

SAMPLE

Name: Check structure name

Size: width: 1280 pixels height: 960 pixels Resolution: 300dpi


Extension: PNG **color mode:** RGB

It's very important to save the file of the frames only in PNG exten-


sion.

Create your own customized frame. Inside of the blank area is where the camera will capture the image, and your customized frame will surround the image.


DIRECTIONS FOR UPLOADING FRAMES

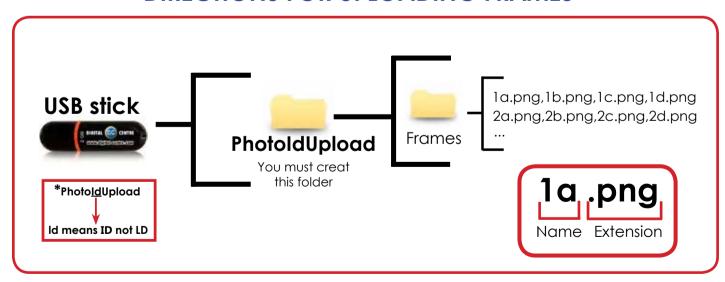



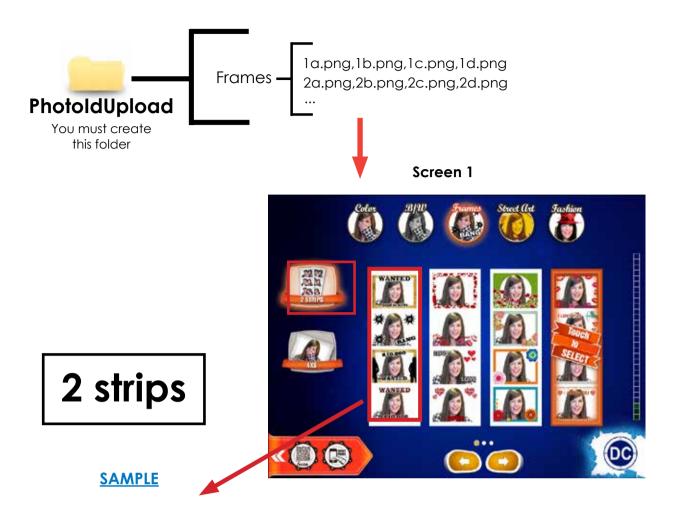


Screen 1 (group 1)

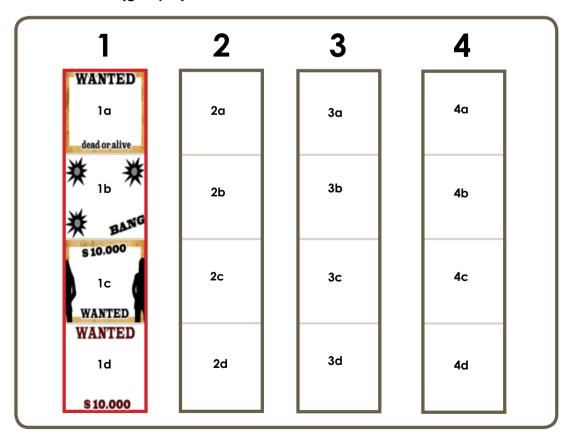





Screen 2

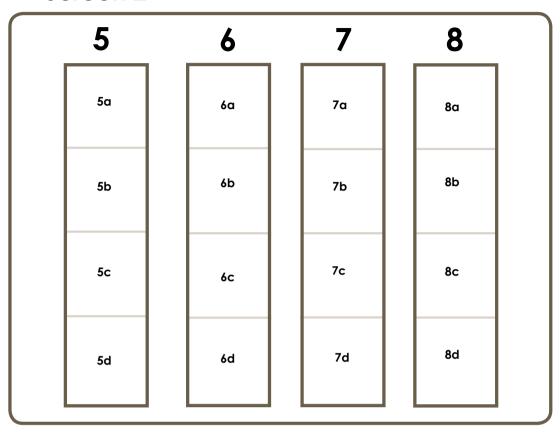


Screen 3

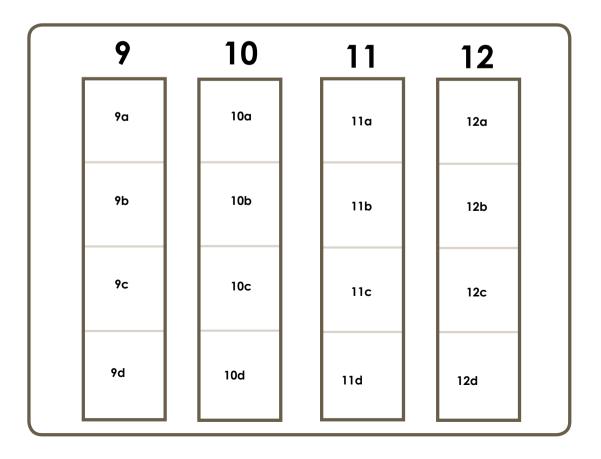




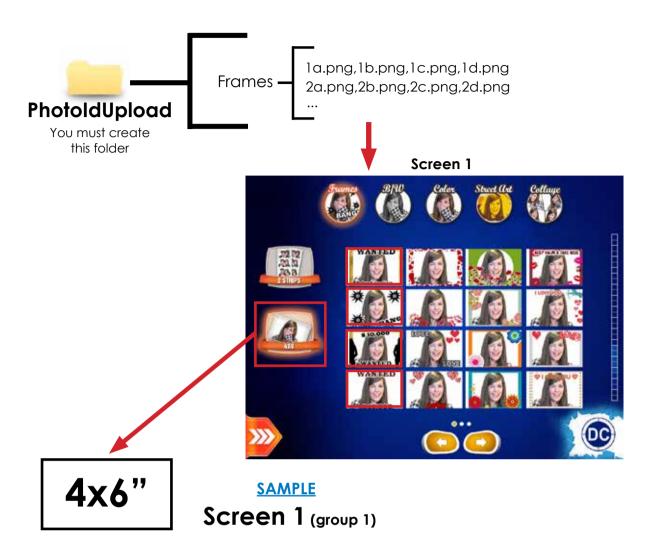

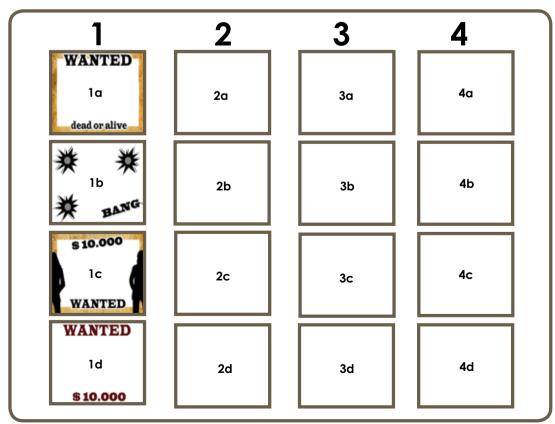





Screen 2

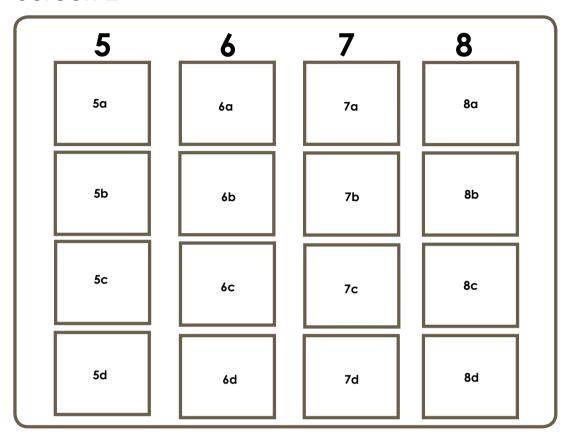


Screen 3

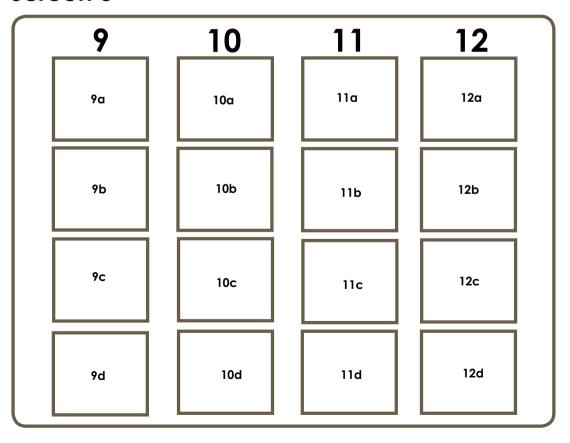



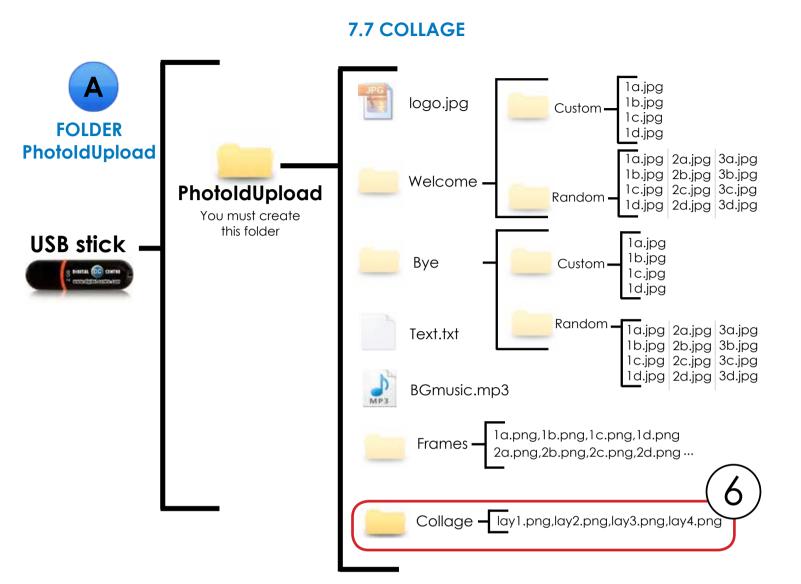

DIRECTIONS FOR UPLOADING COLLAGE

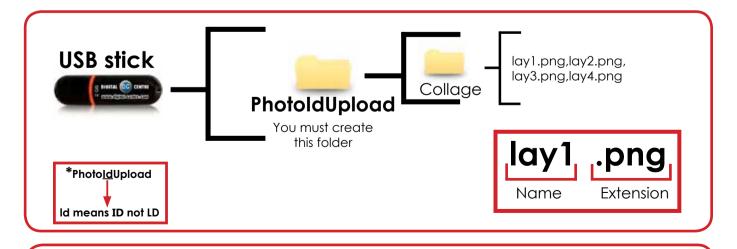

UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)






COLLAGE

There is **1 screen** with four different templates. Each template contains **4 photos**.

Each group of four photos will be printed together on the same custom collage.

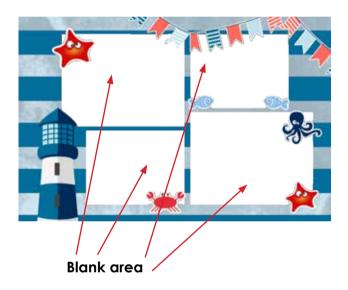

Collage Technical Details:

Name:lay1,lay2,lay3,lay4. Size: width: 2044 pixels height: 1416 pixels

Resolution: 300dpi **Extension:** PNG **color mode:** RGB

It's very important to save the file of the collage only in PNG extension.

Create your own customized collage. Inside of the **blank area** is where the camera will capture the image, and your customized collage will surround the image.

HOW TO MAKE A CUSTOM COLLAGE

0

WHERE CAN I FIND THE COLLAGE TEMPLATES?

Log in www.myphotocode.com



${\tt Go} \uparrow \!\! o \, \textbf{www.myphotocode.com/home}$


Click to download templates







Four different templates:

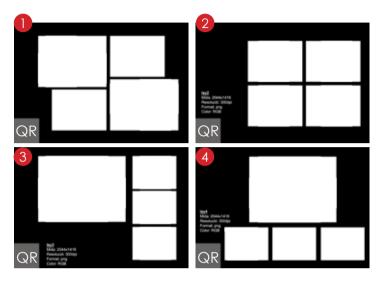


Collage Technical Details:

lay1 Size: 2044x1416 Resolution: 300dpi Extension: png Color mode: RGB

3 lay1 Size: 2044x1416 Resolution: 300dpi Extension: png Color mode: RGB 2 lay1 Size: 2044x1416 Resolution: 300dpi Extension: png Color mode: RGB

> lay1 Size: 2044x1416 Resolution: 300dpi Extension: png Color mode: RGB

3 HOW TO DESIGN A NEW COLLAGE

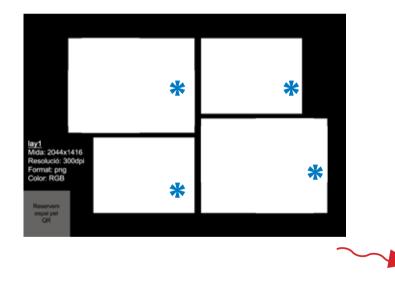



Replace the black space for your design


* Everything that appears in these blank spaces (transparent, png), will be seen above the photos taken by Photobooth, as shown in the example on the right.

After customizing the template is saved with the same name: lay1.png, lay2.png, lay3.png, lay4.png.



4 SAVING YOUR DESIGN IN THE USB

Once you have designed your template which will have these dimensions: 2044x1416 pixels, RGB mode. It has to be save in a png format in a USB stick. As shown below.

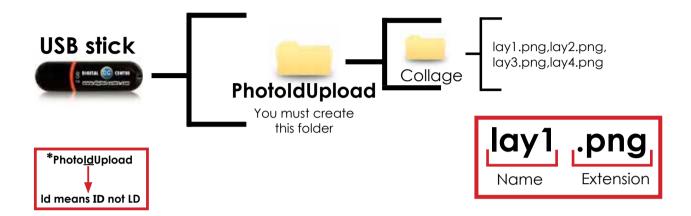

5 UPLOADING THE COLLAGE


- 5.1 Plug the usb stick to any empty usb slot in front of the pc of your PhotoBooth.
- Open the back door of the PhotoBooth and access to the configuration menu pressing the yellow button.
- 5.3 Enter to the customized menu, select: customize/collage/custom/press load/press exit.






7.8 ADVERTISING PHOTOS



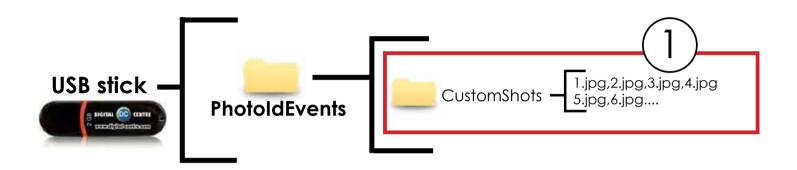

DIRECTIONS FOR UPLOADING CUSTOMSHOTS

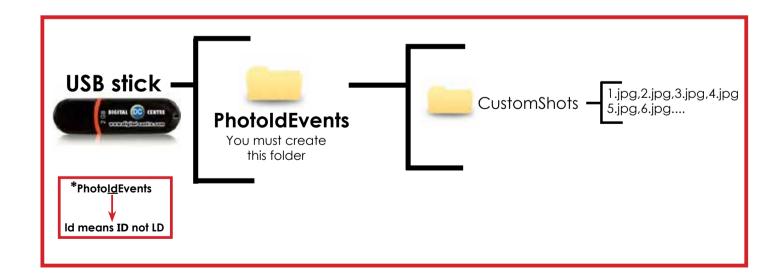



CUSTOM SHOTS are the images (made previous to the event) that we want to show on the screens during the event. An example could be for a wedding were the bride wants to show pictures from when the couple first met etc, or a company event, were they want to display brand names or products.

The CUSTOM SHOTS are shown Random during the Demonstration Mode.



Specifications:

Name: 1


Size: width: 1024 pixels height: 768 pixels Resolution: 72dpi

Extension: JPG
Color mode: RGB



UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9) SETUP MENU (See section 11)



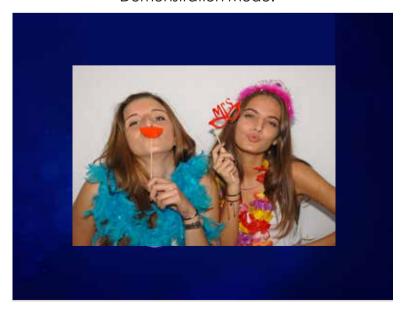



Sample custom shots



- ·You can put as many pictures as you want. ·The names of the images have to be: 1.jpg,2.jpg,3.jpg,4.jpg,5.jpg,6.jpg,7.jpg...




8-CUSTOMIZED ONLINE

8.1 ACCESS TO MyPhotoCode.com

8.1.1 The home screen of MyPhotoCode.com

Go to www.MyPhotoCode.com.


On home screen of www.myphotocode.com appears:

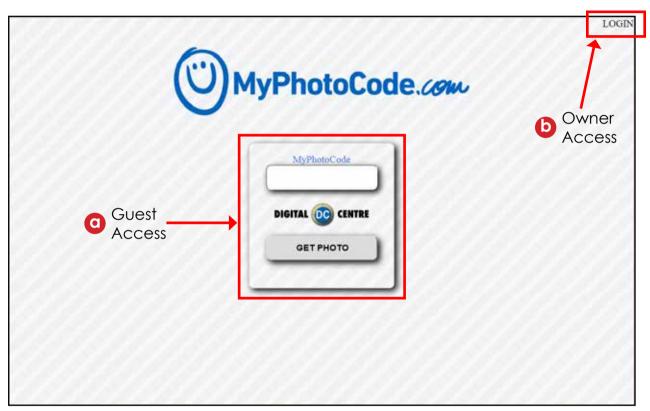

Guest Access

If you only want to see a photo, enter the code that's on the side on the strip and click on "GET PHOTO".

This is designed for the guest to access their photos/videos.

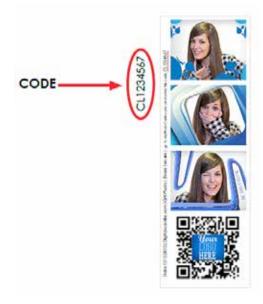





Guests can share their photo or video on Facebook and Twitter, and send them by email.

The owner of the PhotoBooth (with which the photo was taken) can customize the background, title and a banner of this screen from their personal Cloud.

The owner can also make a questionnaire for patrons who want to see their photo. And choose if an event is private (only patrons will be able to see their photo) or public (patrons will be able to see all the photos of the event).


We'll be adding more functionalities to the Cloud, stay tuned.

(b) Owner Access

Click "Login" if you want log into your account on MyPhotoCode.com -- Section 1.2



8.1.2 Log in to MyPhotoCode.com

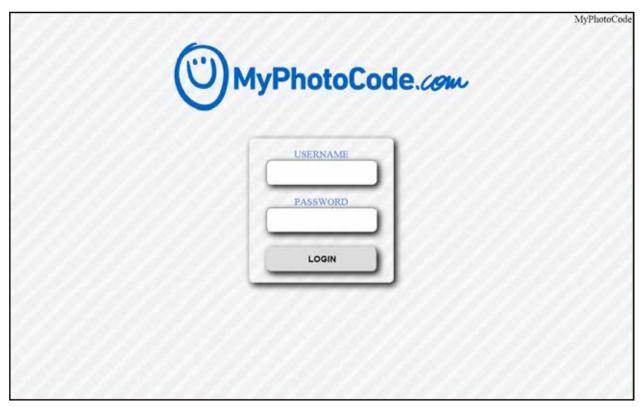

Enter the username and password and click on LOGIN to log into your MyPhotoCode account.

Digital Centre provides a username and password to have access on MyPhotoCode, where the PhotoBooth's owner has many options;

- Manage the owners information (contacts, addresses...)
- Create and customize events
- Download the photos of an event
- Capture emails from patrons to use for marketing purposes.
- Get audits, reports, alerts of the PhotoBooths
- and much more


If your company did not receive the Welcome Email, please send an email to myphoto-code@dc-image.com requesting your account information. This email should contain, the name of the company who purchased the PhotoBooth, a code printed on the left side of the photo strip and the serial number from the PhotoBooth along with the PhotoBooth model.

If you forgot your password, send and email to myphotocode@dc-image.com, with your username, the name of your company and the code printed on the left side of one photo strip, and also the S/N from the PhotoBooth along with the PhotoBooth model.



8.2 MyPhotoCode.com - HOME

At the home page on MyPhotoCode, you can find the lastest news about Digital Centre. Thanks to these updates we can keep you inform about our improvements, offers, new videos, and more.

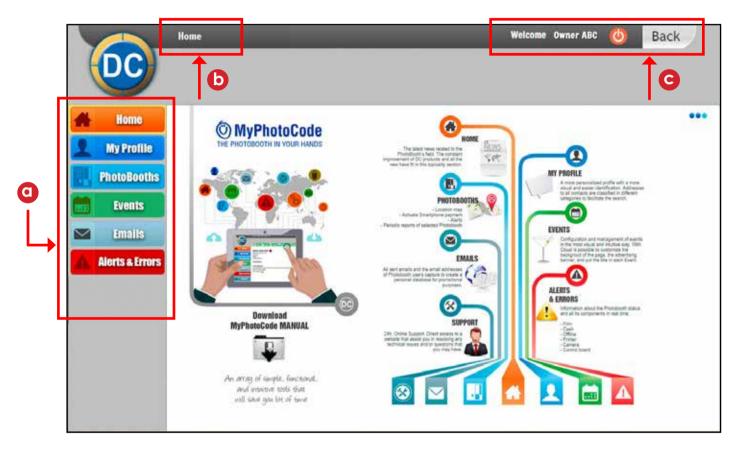

On the left side of the screen there is the main menu of MyPhotoCode which will able you to navigate throughout the website.

The different sections of the website are:

- Home: the latest news about DC offers and improvements...
- My Profile: contains information about the owner of the PhotoBooths, and contacts.
- PhotoBooths: information about your PhotoBooths.
- Events: information about the events you have created.
- Email: all guests emails collected via the Cloud.
- Alerts & Errors: alerts and/or errors that the PhotoBooth may have, listed by type. For example, the PhotoBooth is running out of film.
- Support: link that takes you to our support website.
- **b** Info displaying the current section that you are inquiring about.
- On top right side, you can find the username, the Log OUT button, and the BACK button to use each time you want to go back on the website.



8.3 MyPhotoCode.com - My profile

8.3.1 My profile - info




This section contains the owners information:

- Company name
- Username: the username to login on MyPhotoCode.com
- Alert email: this email is where alerts, reports and/or errors will be sent.
- Password: the password to login on MyPhotoCode.com
- Profile picture


When you see the icon $\boxed{\hspace{-0.1cm} \emph{I}\hspace{-0.1cm}}$, this means that you can edit the information by clicking on it.

When you click on the edit icon, a window will open. There you will find the instructions to edit. Here is an example, of the pop up window to edit the profile picture.

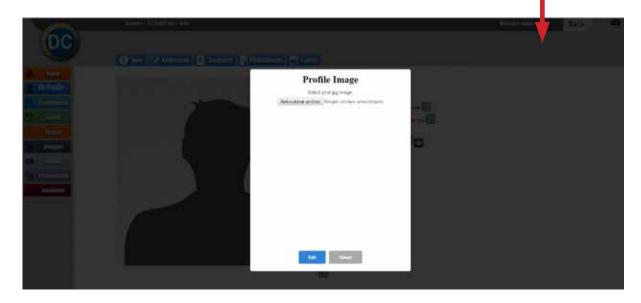



8.3.2 My profile - addresses

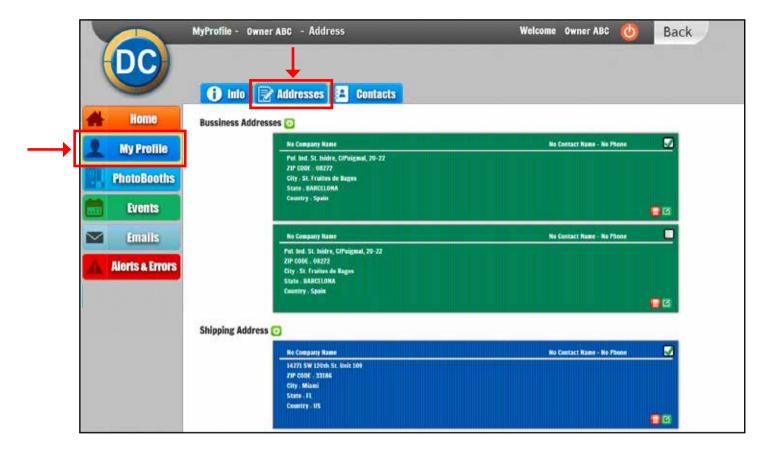


In this section you can store your addresses. The following are your options:

- Add a new bussiness address or shipping address.
- Edit the address.
- Delete the address.
- Default address.

The selected shipping address will be used for future purchases of film, and other items to improve your PhotoBooth.



8.3.3 My profile - contacts

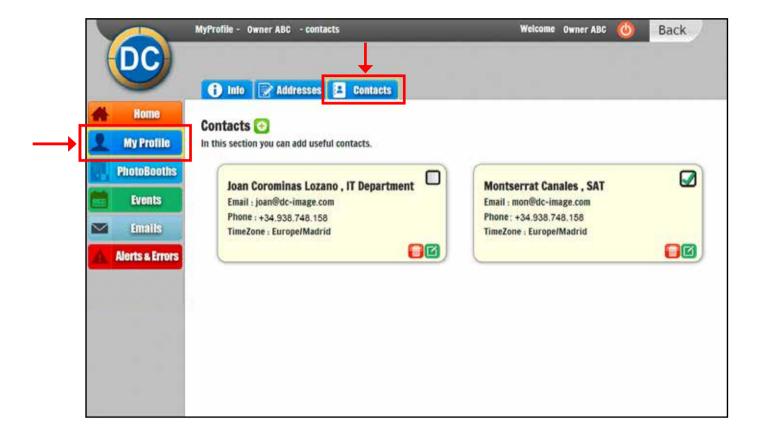


In this section you can have a list of contacts of your company and your customers.

- Add a new contact.
- Edit each contact.
- Delete a contact.
- Select as the main contact.



8.4 PHOTOBOOTHS

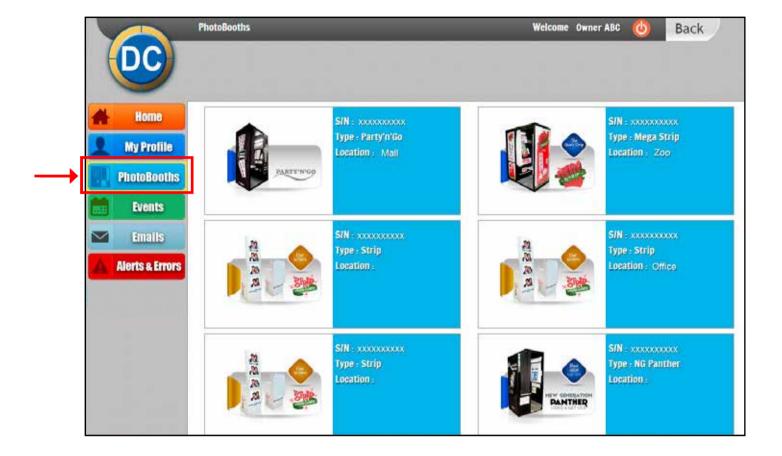

When you click on PhotoBooth it will display all of your PhotoBooths on the screen.


Each PhotoBooth shows its serial number, the type of the PhotoBooth, and the location.

On the example, you can see different models of PhotoBooths with the picture of each one and the type. In this case you can see some PhotoBooth with a location like the Zoo, the Mall or the office and some others without location.

If you click on any of the PhotoBooths, you will access the profile and information. -- Section 4.1




8.4.1 PhotoBooths - info

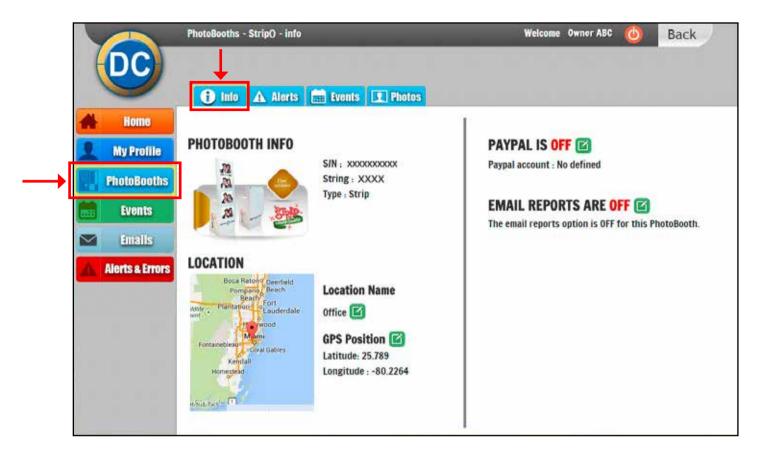


- PhotoBooth info: the main information of the PhotoBooth: serial number, string and type.
- **Location:** this information is important for CoinOp PhotoBooths; on location name you should type the name of the location, like a zoo, mall, cinema, bowling,...

You can also locate your PhotoBooth on a map. This will be used on the MyPhotoCode APP so users can locate the nearest PhotoBooth.

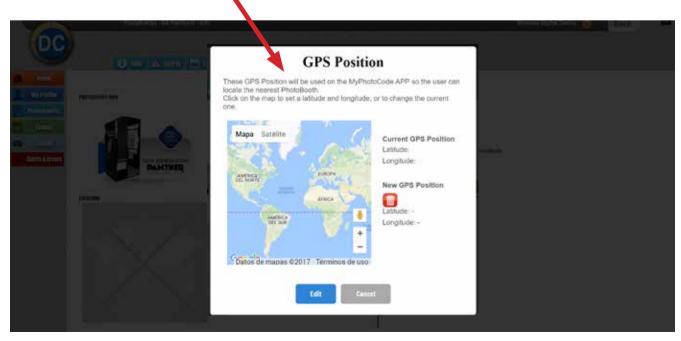




- **Paypal:** to pay via Paypal using your SmartPhone this option must be turned on. To turn ON this option, you will need to introduce your Paypal Merchant account ID, the Merchant account ID is sometimes referred to as your Paypal Account ID number.

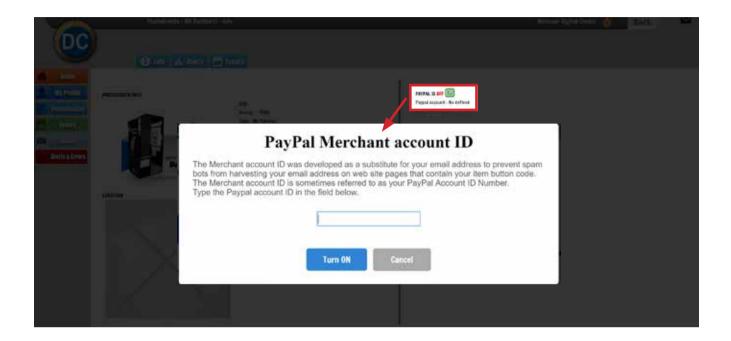

- Email Reports: by activating this option you will receive weekly, monthly and yearly email Reports along with a report of the PhotoBooth's activity (sales, cash, stock, etc...). You will receive this email to the email address that you have provided in your profile under Email Alerts. -- Section 3.1

8.4.2 PhotoBooths - alerts

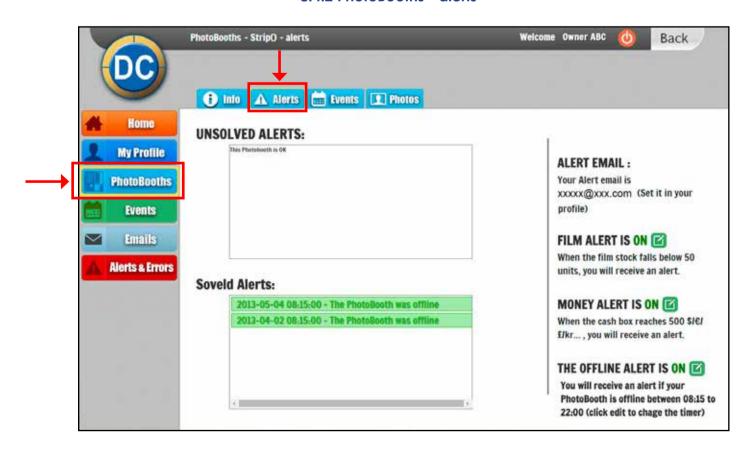




This will show any issue with your PhotoBooths. You can retrieve records of solved alerts, as well.

On the right side you can activate different alerts by clicking on the dit button on each one.




These alerts are:

- Film Alert: you will receive an alert when the film stock is below the value that you have selected.

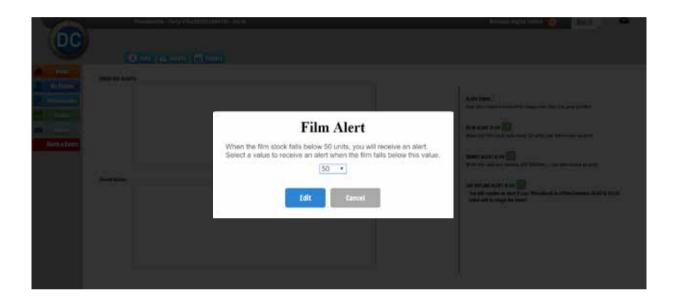


- Money Alert: you will receive an alert when the cash box has reached the value you have selected.

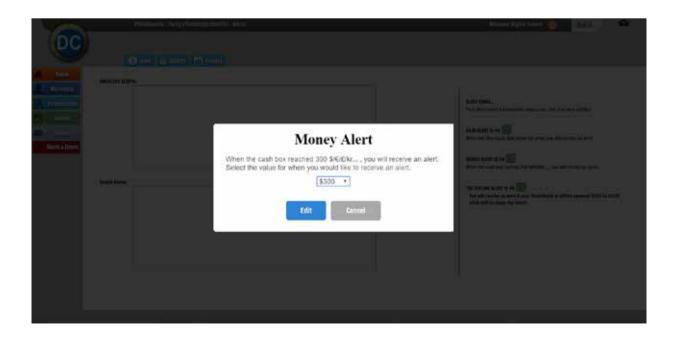




- Offline Alert: you will receive an alert if your PhotoBooth is offline within the period of time that you have selected.

Selected the time frame to be advised when the PhotoBooth is offline. Make sure to select the proper time zone where the PhotoBooth is located.

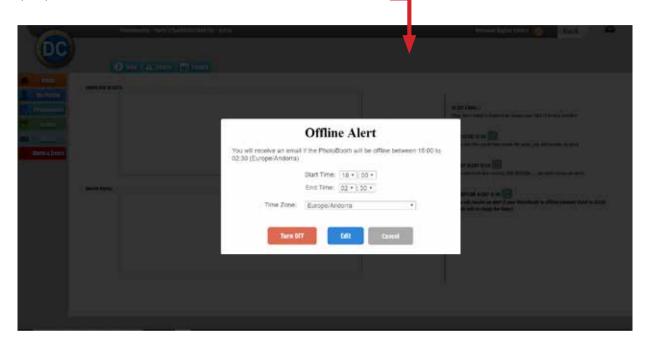


8.4.3 PhotoBooths - events

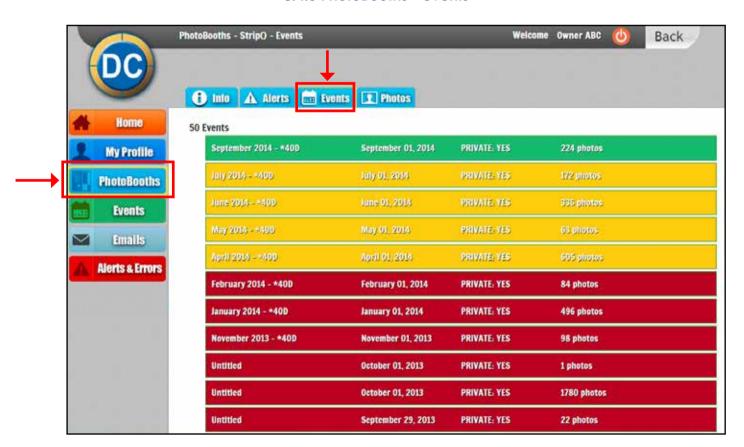




In this section a list of events which have been made with the selected PhotoBooth; you can also see the number of events created.

The events are organized by color:

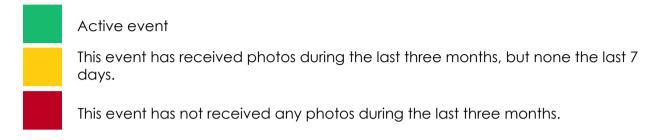


The list shows the information for each event:

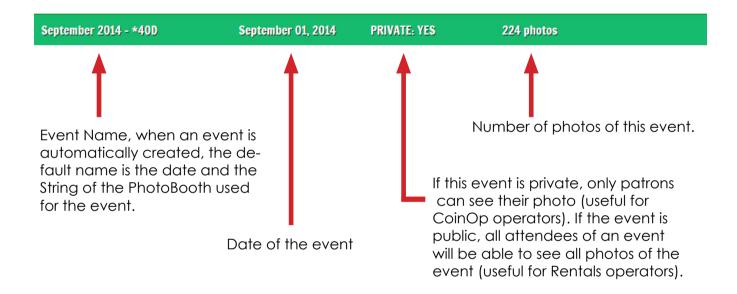

By clicking on one event, the contents of that event will be displayed. -- Section 5 (EVENTS)






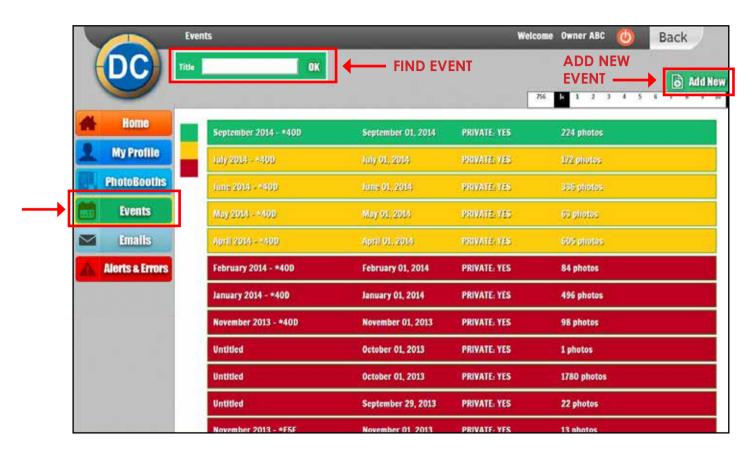

This section shows a list of all events created for your PhotoBooths. The events are organized by color. (The list shows the same basic information of each event that was explained on the section 4.3)

- Add a New Event: In this section you can also add a new event by clicking the button "Add New".

To create a new event, type the title of the event, select the date and then click on the checkbox if the event is private. Then click SAVE.

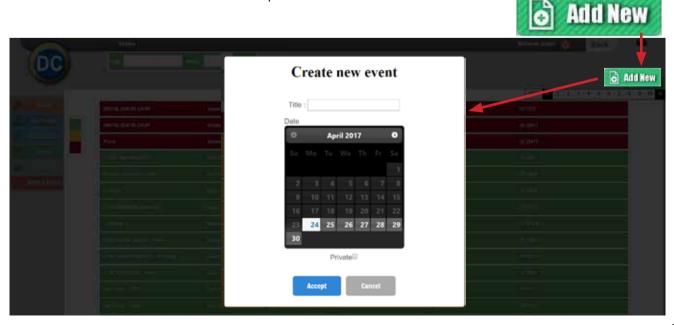




- **Find Existing Event:** If you want to find a specific event, type the name in the box below (located at the top left corner).



Clicking on one event will take you to he content.

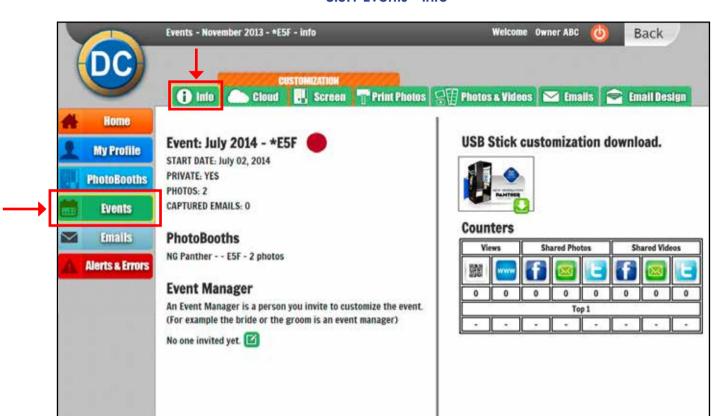

8.5.1 Events - info

Info Display: (located at the top left) this shows the name of the section and event. In this case we are on EVENTS for "November 2013 - *E5F".

In the event INFO you can see a brief information about the event:

- EVENT:

- · the name of the event and if it is an active event or not (round color indicates if it is active/inactive)
- · the start date of the event
- · if the event is private/public
- · the number of photos taken during that event
- · the number of captured emails from that event




- **PHOTOBOOTHS:** the PhotoBooth(s) in which this event was made.
- **EVENT MANAGER:** the person you assign to customize the event (for example the bride or the groom).

If you want to invite an event manager, click on the EDIT button.



Type the name and the e-mail address of the person you want to assign, an click on SEND INVITATION

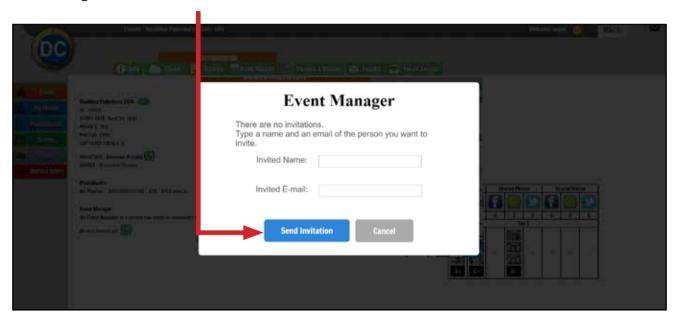


- **USB Stick customization download:** if you want to customize your PhotoBooth for an event, follow the instructions in sections 5.3 & 5.4. and return to this page to download the content to the USB stick for this event.

A zip file will be downloaded by clicking the button, then you need to unzip this file and download all onto the USB stick.




Next step will be plug the USB Stick to the front of the Computer (at the PhotoBooth), go to the customize section from the setup Menu, and click LOAD.

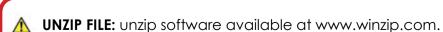



- COUNTERS:

- \cdot Views: shows the number of photos which have been seen via the QR code or via the WEB
- · Shared Photos: shows how many photos have been shared by Facebook, Twitter, or have been sent via E-Mail.
- · Shared Videos: shows how many videos have been shared by Facebook, Twitter, or have been sent via E-Mail.
- ·Top 1: here shows the photo or video with more views or shares of each category.

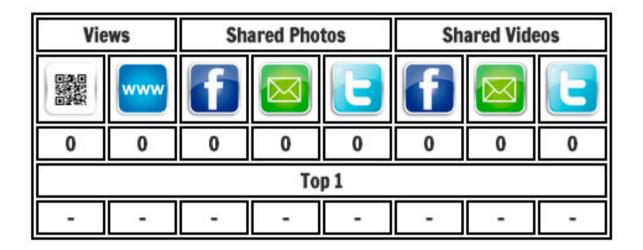

8.5.2 Events - cloud






It allows to Customize what Patrons see on their Phone or Computer when they scan the QR code or type the code from their Photo to MyPhotoCode.com.

You can also customize the Cloud for each event. To customize the Cloud, click on specific buttons to edit each part.




Type the title you want and click on SAVE.

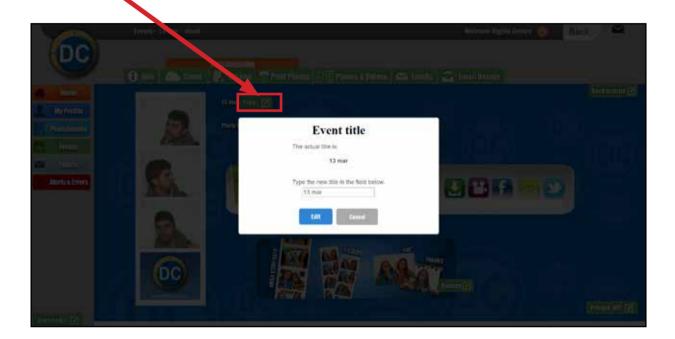



Select a 1 Predefined Background or 2 Upload your own. Once selected the one you want click on EDIT.

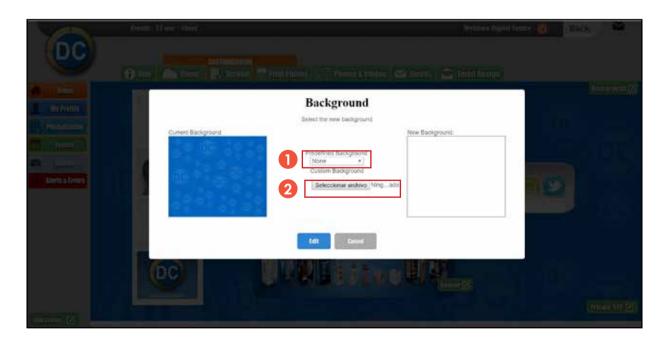






You have the option to switch On an advertising banner that will link to your website.

- Type the URL that you want (for example your website), don't forget to use http://.
- Choose an image or gif to be the banner.
- Click EDIT.

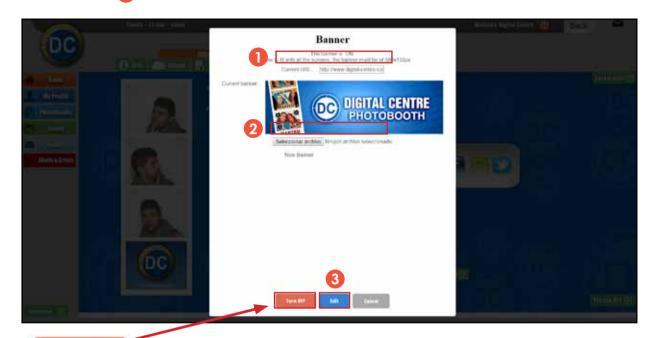


Turn OFF

Click here to enable or disable the banner.



Here you have the option to edit the privacy level of the event. If the event is private, patrons will only be able to see their own photo. If public, they will be able to see all photos from the event.

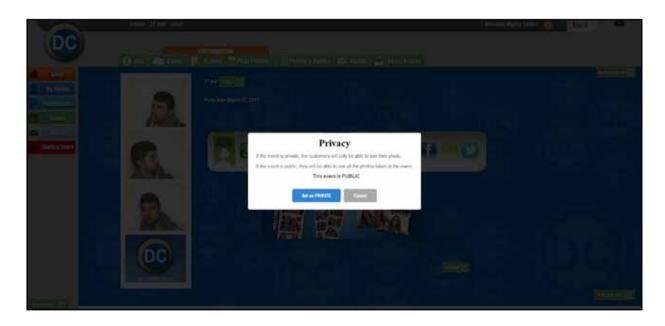






You can switch On a questionnarie section to ask patrons for their email address and their opinion.


If the section is On, patrons will answer your questions before they can see their photo.

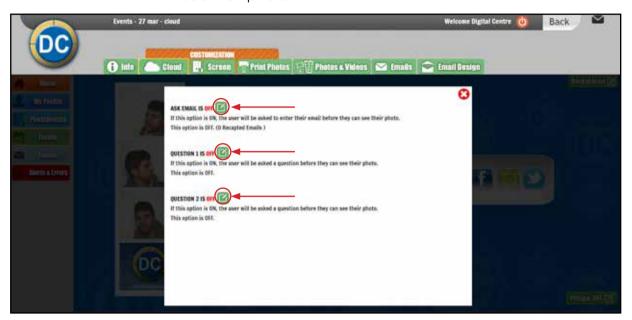



Click on each edit button to edit each option.


(Turn on) this option to request an email address or a question.

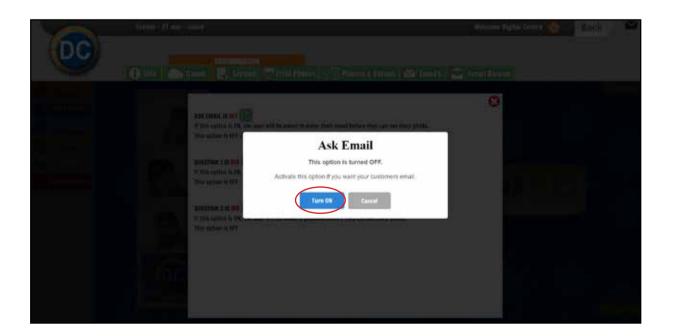



8.5.3 Events - screen


It allows to Customize what Patrons see on the PhotoBooth Screens at the location or during the Event.

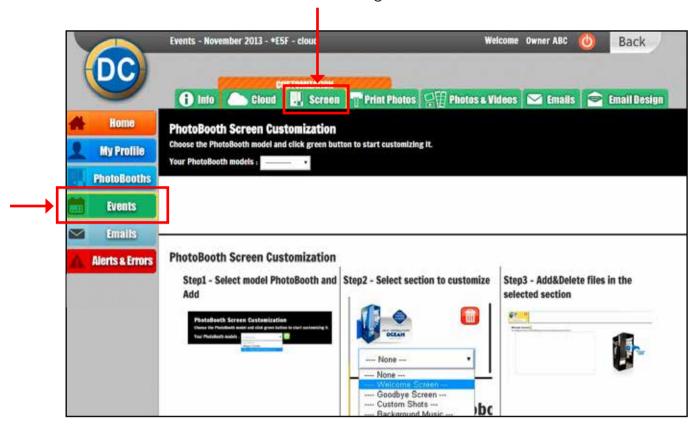

On the bottom half of this screen (image above) are the steps to follow to customize the PhotoBooth(s) for the event.

0


To customize the PhotoBooth, choose the PhotoBooth and click on the "add" button to start.

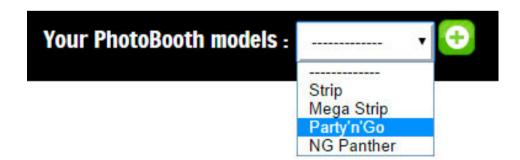

The second step will be to select the section you want to customize. The options are:


- Welcome screen
- Goodbye screen
- Custom Shots
- Background Music
- Header Banner (this one is only on the Strip PhotoBooth)



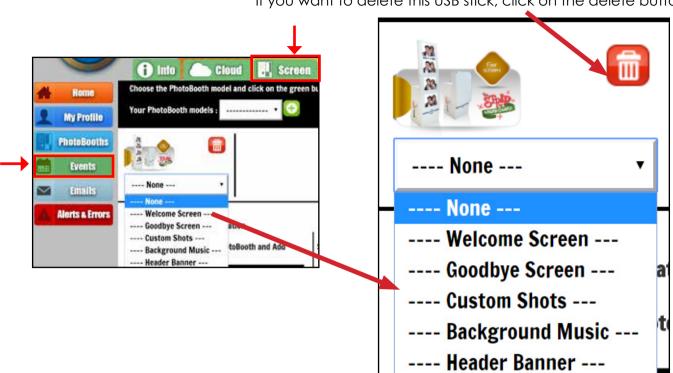


If you want to delete this USB stick, click on the delete button.

Welcome Screen: on the Strip PhotoBooth there will be 4 images. All other PhotoBooths only one image. This image will appear when a patron begins to take a photo.

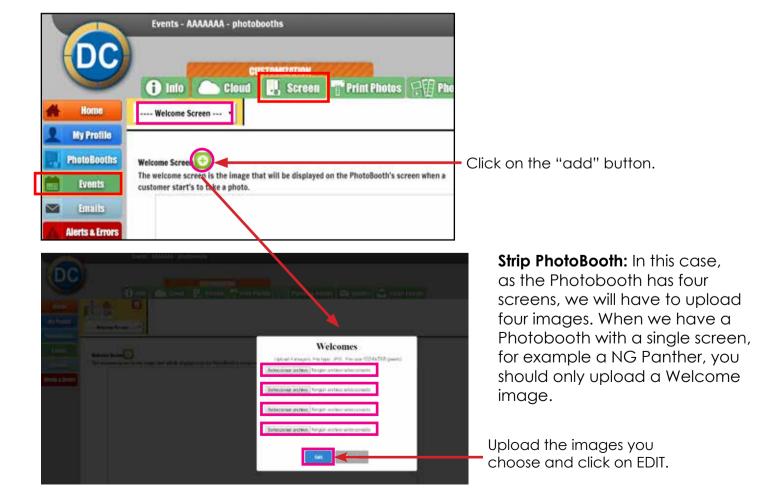




Bye Screen: on the Strip PhotoBooth there will be 4 images, for all other PhotoBooths only one image. This image will appear when a patron finishes taking a photo.

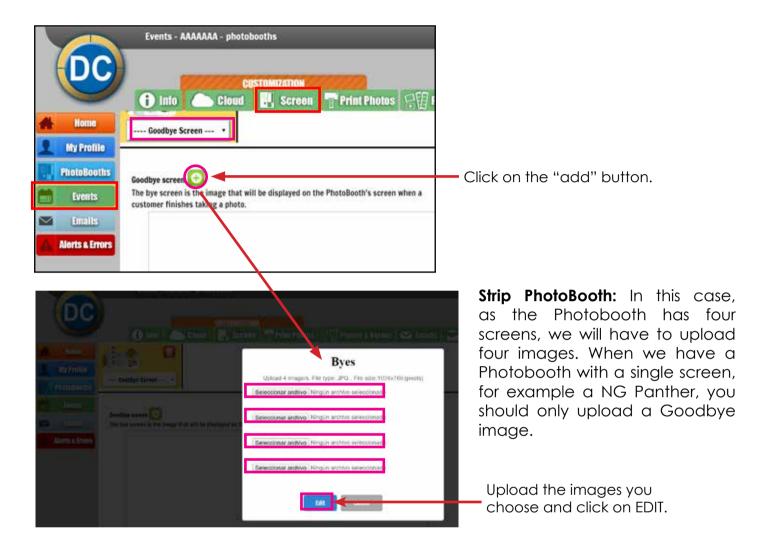


Custom Shots: these are the images that appear on the screens during the event. An example could be for a wedding were the bride wants to show pictures from when the couple first met, or a company event where they want to display brand names or products.

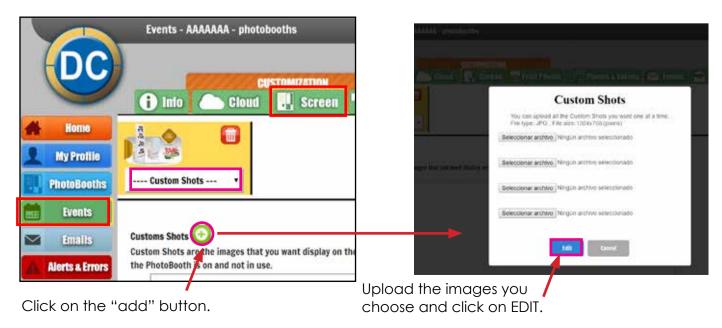




Background Music: is the music that will be play during an event.

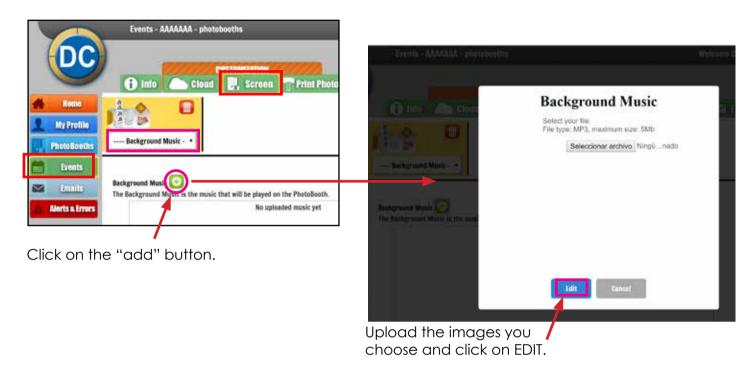


Header Banner: is the image that appears on the top screen (1st screen) during the game. (available on the Strip PhotoBooth only)

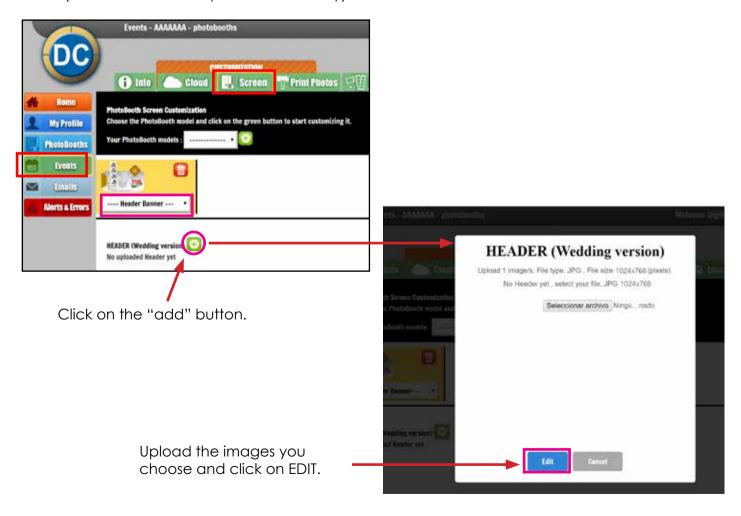



8.5.4 Events - Print photos

It allows to Customize Patrons printed Photos with LOGOS, FRAMES and Text on the side of each Photo.

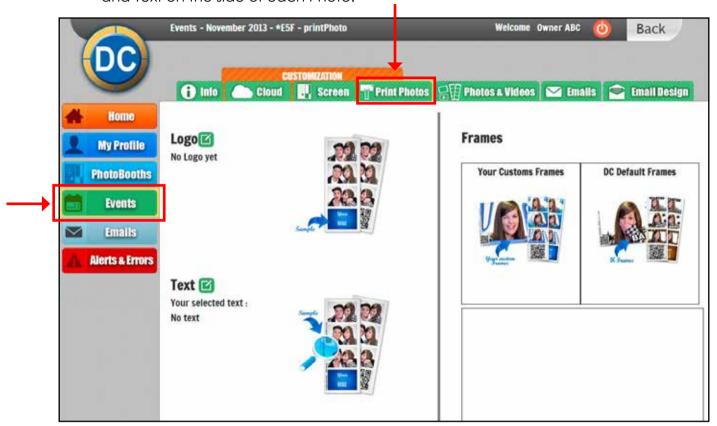

There are three customization options:

- **The Logo:** the logo will be printed on the 4th photo of each strip. Click on the "edit" button to upload your logo.
- The Text: this text will be print on the side of the photo. Click on the "edit" button to type the text you want to appear on each photo.
- Frames: you can use your own frames and/or designs as well as the DC default custom frames.



Click on "Your Custom Frames" if you choose to use your own frames. Upload the frames and click on SAVE.









8.5.5 Events - photos & videos

This is where all of the photos and videos are stored from an event. Here you will know if the photo has been shared, which is the code, the date, etc.

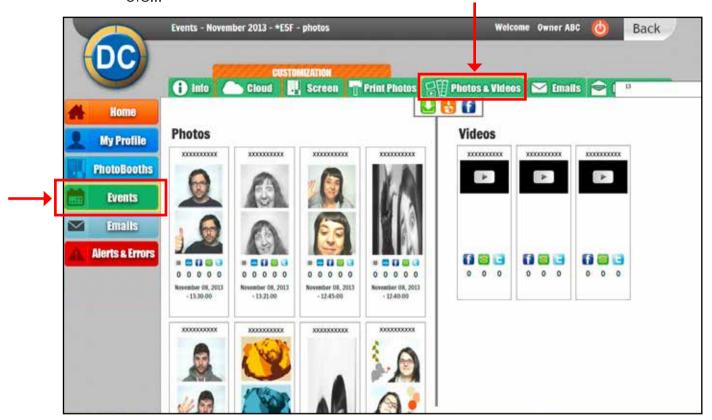

This is where all of the photos and videos are stored from an event. Here you will know if the photo has been shared, what the code is, the date, etc...

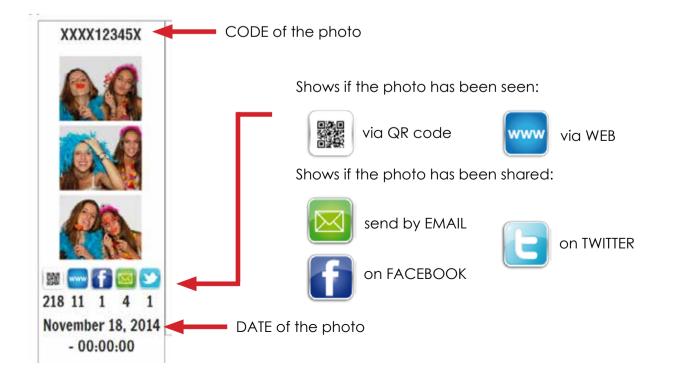



This section offers different photo options:


- Download all photos & videos of the event (a zip file with all the photos and videos will be downloaded to your computer).
- 1 Share ALL Photos and Videos together to a specific Facebook account
- Market into this event.





8.5.6 Events - emails

It allows to see and download Patrons email addresses.

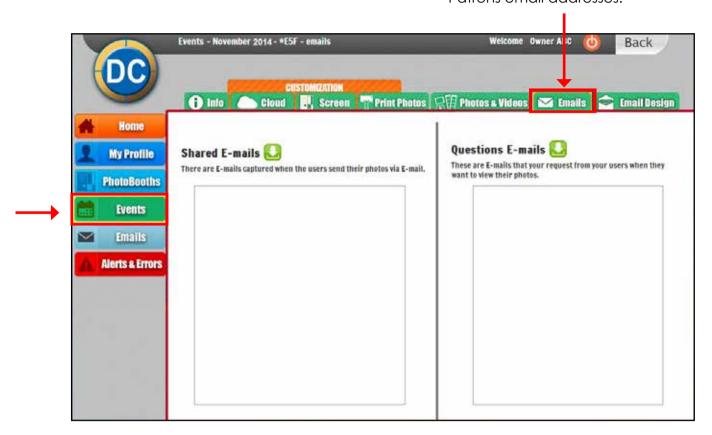

Here is two lists of email addresses:

- Shared E-mails: email addresses captured when the user share their photo by E-mail.
- **Question E-mails:** these are the emails that you request (in the questionnarie module) from users when they want to see their photo.



By clicking on the download button of each list, an excel file with all of the email addresses will be downloaded.

CoinOp Operators:

The emails from your clients can be used for marketing purposes. Such as "Thanks for visiting", "We look forward to seeing you again soon!", or to offer a discount, just for showing the photo strip on their next visit. The marketing possibilities are endless!


Rental Operators:

You can use all emails to offer a discount for future events, a great sales tool.



8.5.7 Events - email design

It allows to customize patron's E- Mails when they share their photos through an E-Mail.

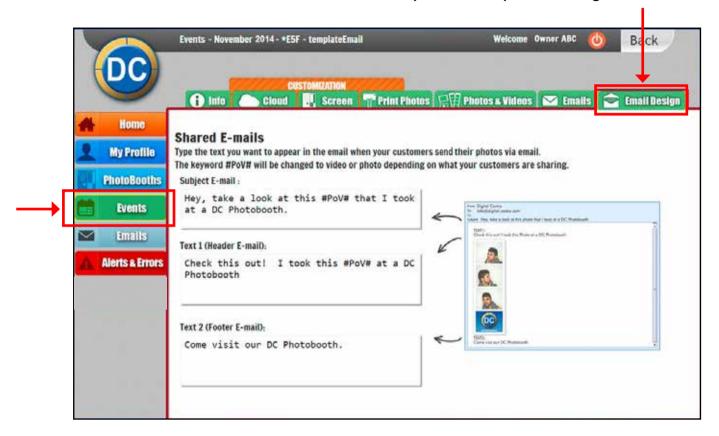

When a customer shares their photo using the email button, the photo will be sent to an email, that you can customize.

In this section there is a template of the email. Fill in the fields with the text you want. For example, you can promote your company by inserting a link to your company's website.

The customers can share their photos and videos, for this reason it's important to use the keyword #PoV#. This keyword will be changed for the word photo or video depending on what the customers are sharing.



WARNING: It's important that the keyword be #PoV#, you should use the pound-sign "#"; without the pound-sign, the word will not change.



8.6. MyPhotoCode.com - emails



All captured emails are in this section, they are not separated by event however, listed together. The emails are only separated for shared emails and question emails.

On each line the code for the photo is displayed. Also the email captured and the date when the photo was sent by email.


On the top right corner of the screen is the download button.



By clicking on this button an excel file with all the email addresses will be downloaded.




8.7 MyPhotoCode.com - Alerts & errors

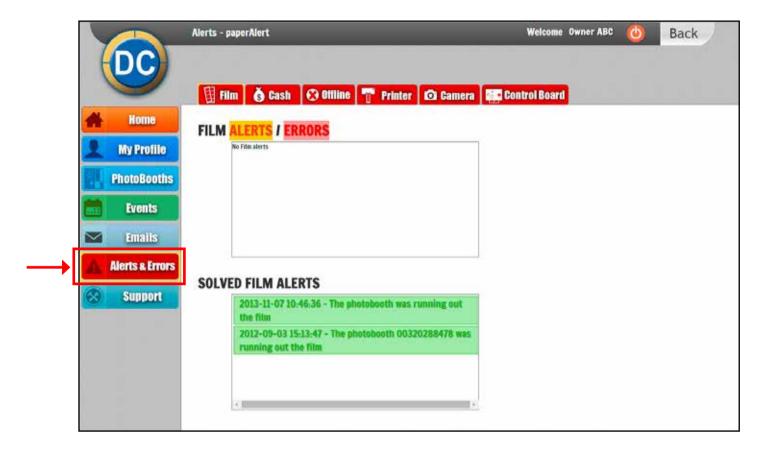

In this section you will be able to see at a glance if a PhotoBooth has an alert or error only if you have turned on the alerts for each PhotoBooth. -- **Section 4.2**For example if the PhotoBooth is running out of film, you will receive an email and in addition you will be able to see when the alert has been solved. Once solved it will appear in the solved alerts list.

The alerts and errors are separated by type:

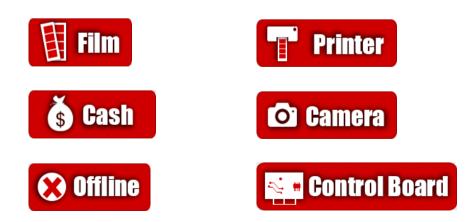



8.8 MyPhotoCode.com - Warning



WARNING!


Remember, to get the photos, by MyPhotoCode.com, the PhotoBooth must be connected to Internet.

If there isn't connection to Internet, you can save the photos in a empty USB memory in the computer.

When the USB will be detect by the computer, will be create automatically a New Folder called PhotoldDownload.

Inside the PhotoIdDownload folder you will find 2 folders more, the first one called "MyPhotoCode" with your images and videos inside (just in case that you have recorded a video) and the second one called "Shots" with the individual shots.


Once the event finish, you can take off the USB memory from de computer and use it in any other computer to see your images or videos.

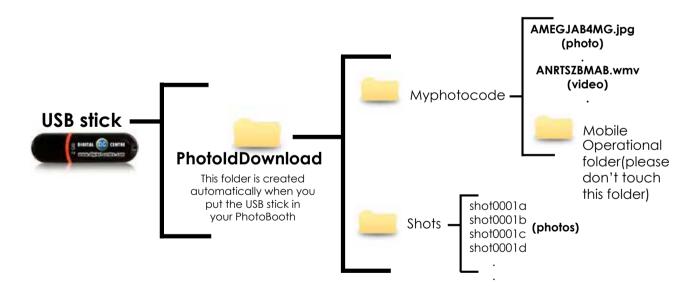

If the logo is activated, you will have 3 shoots for each print, with the loaded logo printing in the fourth frame.



9-UPLOADING CUSTOM USB STICK TO PHOTOBOOTH

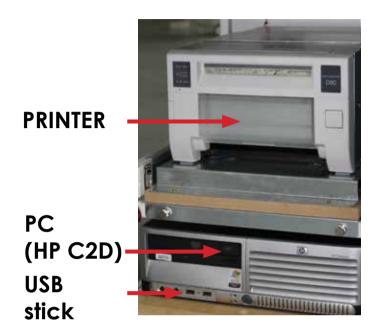

SERVICE CONTROL PANEL



- 1-Switch ON the PhotoBooth
- 2-Open the Photo slot door*
 You will need 1314 keys (included on your PhotoBooth)

3-Insert the USB Stick to the PC (HP C2D) (the usb connection is on the left side of the PC)

4-Open the back door of your photoBooth.

5-Press the yellow button from the Service Control Panel, to access the Setup Menu.

6-Go to Setup customize and select **LOAD**



Check logo and text: You can check the logo and text that will appear in the photos. This screen disappears after a few seconds.







10-DOWNLOADING



FOLDER PhotoIDownload

This folder is created automatically

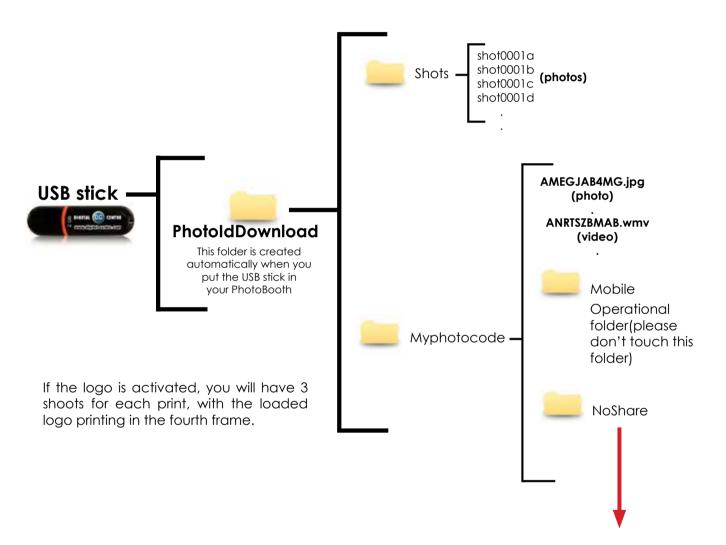

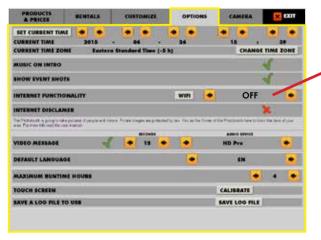

In the folder called NoShare saved the photos not to share in the cloud. If "Internet funcionality" is in OFF mode, photos taken will be saved in this folder.

If you have the option "Internet Disclamer" and the user decides "Print Only" the picture, this photo will also be saved in the folder NoShare.

These photos are saved in this folder but not up to the cloud, not be able to be shared.



11-SETUP MENU

The setup menu is very useful for the owner of the PhotoBooth. You can configure the Photo Booth depending on what kind of service you want to offer to your clients. You can control the timer, check the prices, adjust the camera settings or consult the accounting functions. To go to the setup menu while the PhotoBooth is in Demo Mode, press the yellow button (Menu) from the Service Control panel inside the PhotoBooth.

SERVICE CONTROL PANEL













- 1. Volume Control lever
- 2. Menu (Yellow Button): It enters setup Menu and allows options such as pricing, logos, camera adjustments, and features to be changed.
- 3. Accounts (Black Button): It prints detailed vending report including number of prints available.
- 4. Credit (Red Button)
- 5. Coin Counter

· SETUP MENU SCREENSHOOTS



SETUP MENU CONFIGURATION


The configurable parameters are divided in 5 groups:

- · Products & Prices
- · Rentals
- $\cdot \, \text{Customize}$
- · Options
- ·Camera



11.1 PRODUCTS & PRICES

You can set the prices of the different products with the arrows.

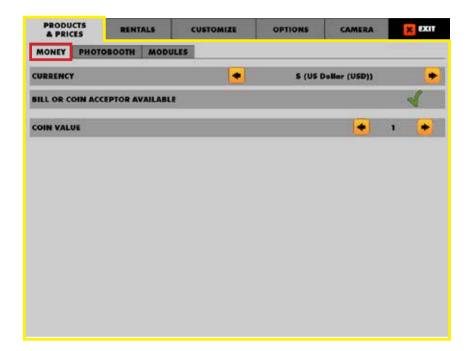

11.1.1 **MONEY**

There are several currency options. You can choose the most interesting option for you.

- -US Dollar
- -Australian Dollar
- -Canadian Dollar
- -Euro
- -British Pound
- -Japanese Yen
- -UAE Dirham



You can enable/disable the products for each event.

YES //NO X

11.1.2 PHOTOBOOTH


You can set the prices of the different products using the arrows.

You can turn on the options of extra copies and CoinOp Extra Product. In case of not have these options available, these screens will not appear in the game.

You can set the prices of the different products using the arrows.

You can turn on the option of extra copies. In case of not have this option in the setup menu, this screen will not appear in the game.



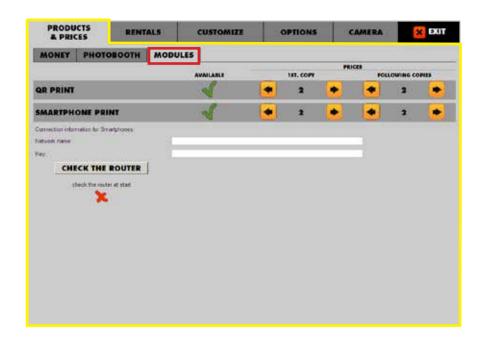

11.1.3 MODULES

You can enable/disable.

YES //NO X

For information see section (6-Using the PhotoBooth 6.4 Options Menu)


11.2 RENTALS



11.2.1 SIGN OPTION


You can chose the Blinking option or the On option.



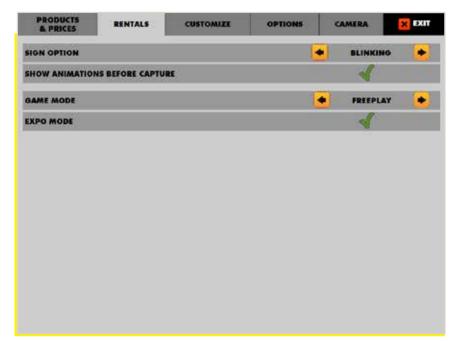

11.2.2 SHOW ANIMATIONS BEFORE CAPTURE

If you want to show animations before capture, enable this option.

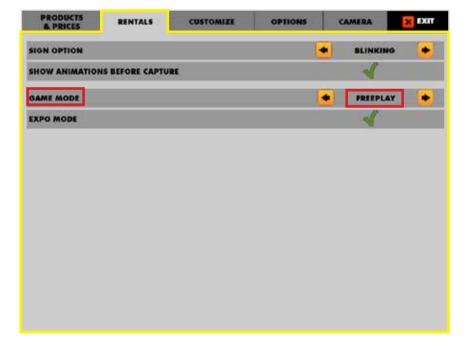

11.2.3 GAME MODE

Use the arrows to configure the game.


FREEPLAY

If the option Expo Mode is ON, after the capture will appear the extra product options.

COIN-OP


To use the coin-op option the PhotoBooth must have installed a payment option.



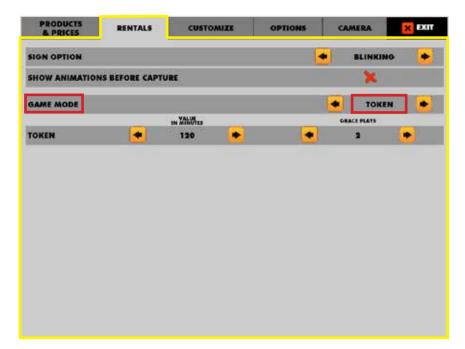

TOKEN

Configure the duration of each token and the grace plays.

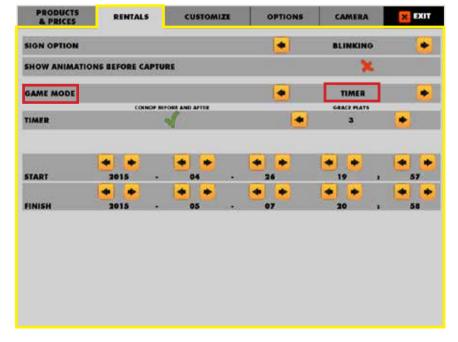


TIMER

The PhotoBooth will be a freeplay mode from the STAR time to the FINISH time. You can enable / disable this coin-op option before and after the time.



11.3 CUSTOMIZE

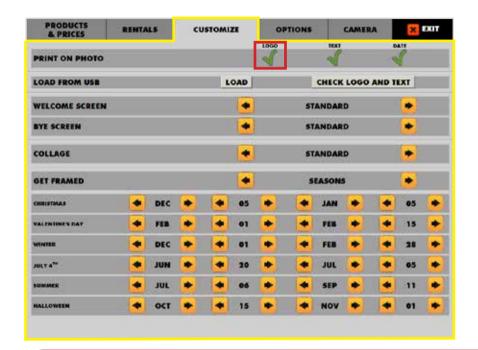

11.3.1 LOGO


1-The menu is displayed on the screen.

2-Select customize and activate ✓ the logo with the green check mark. (the logo will appear on the 3rd screen, if you can't see your logo it means that the upload is not correct.

3-Touch "X" EXIT. The PhotoBooth is ready to work.

*It's very important to follow the exact specifications to upload your logo.

Not working? Please refer to section 13.1 for assistance

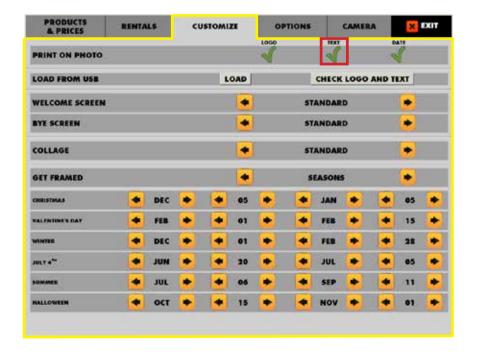


11.3.2 TEXT

1-The menu is displayed on the screen

2-Select customize and activate the text the green check mark.


3-Touch "X" EXIT. The PhotoBooth is ready to work



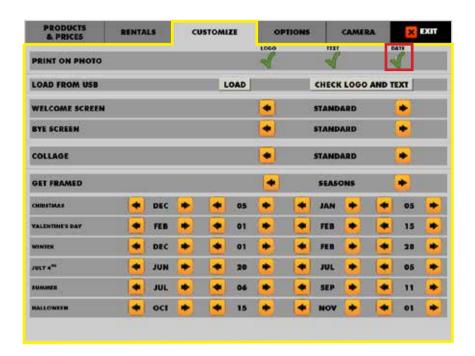

11.3.3 DATE

- 1-The menu is displayed on the screen
- 2-Select customize and activate the date the \checkmark green check mark.
- 3-Touch "X" EXIT. The PhotoBooth is ready to work

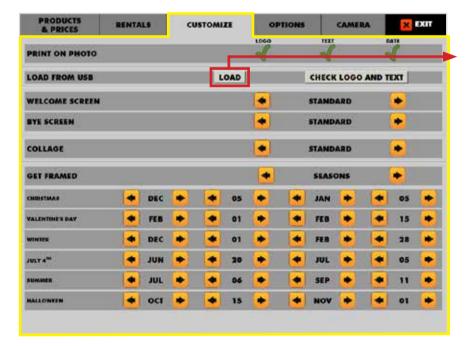


11.3.4 LOAD FROM USB


Load: To upload your customizations: put the USB Stick in the pc, go to the Setup Menu Customize, and press the LOAD button. If your USB is not detected, press EXIT and enter again to the Setup.

While uploading, appears a screen that disappears only when the software has finished loading.



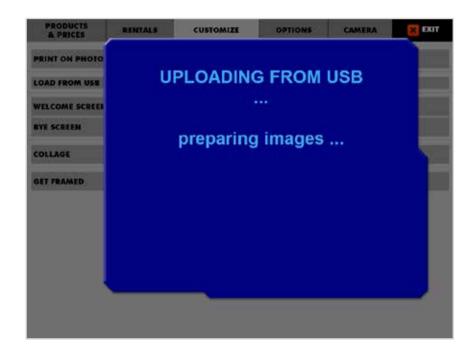

Uploading from USB

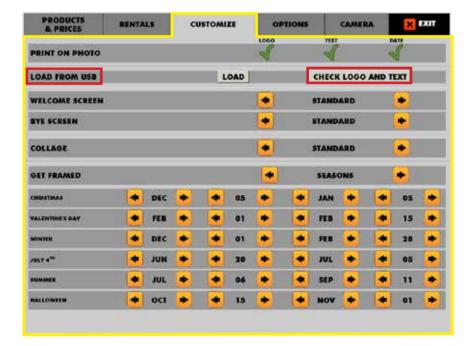


Check logo and text: You can check the logo and text that will appear in the photos. This screen disappears after a few seconds.






Check logo and text

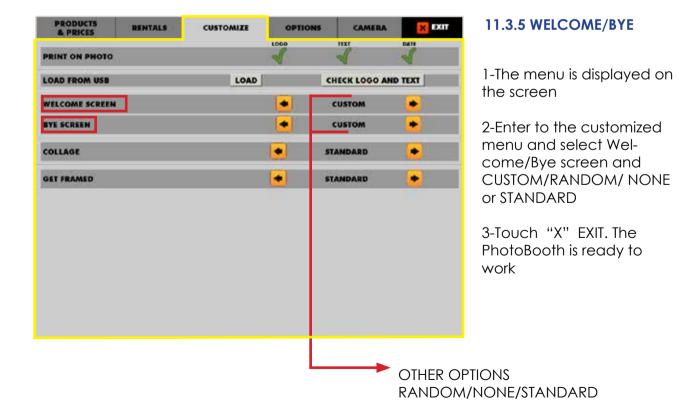



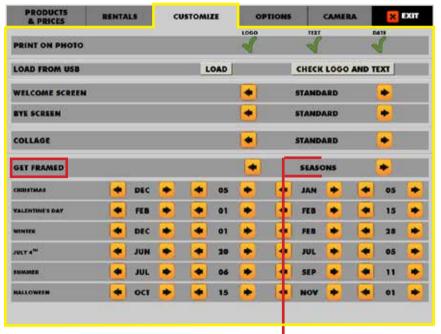

11.3.6 FRAMES


1-The menu is displayed on the screen

2-Enter to the customized menu and select GET FRAMES and CUSTOM / STANDARD or SEASONS

3-Touch "X" EXIT. The PhotoBooth is ready to work

OTHER OPTIONS
CUSTOM/STANDARD

11.4 OPTIONS

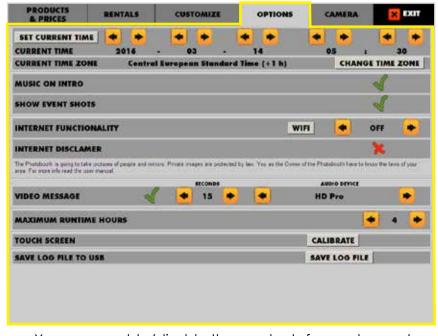

You can enable/disable the products for each event.

YES //NO X



Defines the parameters for some available features:

Current Time: 2012-X-X (Day) XX:XX(Hour)

Current Time Zone: 2

Music on intro: YES√/NOX

Show events shots: Screen savers of photos already loaded by you. YES \(\frac{1}{1}\) NO \(\times\) Internet functionality (WIFI): If you want to connect via wifi your PhotoBooth OFF, QR, CODE ONLY, UPLOAD ONLY.

- ·OFF: Deactivate the QR Code and the Human Code
- · QR: Activate the QR Code and Human Code
- · CODE ONLY: Not appears the QR Code, only the Human Code.
- · UPLOAD ONLY: The photos upload to the cloud but only are visibles for the rental through MyPhotoCode.com Rentals Login. The users can't view their photos via online at MyPhotoCode.com



Internet Disclamer: If this option is enabled, during the game, before taking the first picture, a screen appears that asks whether the photo, as well as being printed, also want to share in the cloud to recover at any time. (Print &Share button). In this screen the users can press "Terms of use" and read the info about share their photos to the cloud. The PhotoBooth is going to take pictures of people and minors. Private images are protected by the law. You as the Owner of the PhotoBooth have to know the laws of your area. YES \(\sqrt{NO}\)X

Video message: Select this option to record a video (IMPORTANT: Internet must be activated). YES \(\sqrt{NO} \times \)

Default language: Depending on the verision you can change the language.

Maximum runtime hours: The PhotoBooth will restart after these hours.


Touch screen: Press the yellow button and after 7 seconds press again.

Automatically the menu is openend to calibrate the touch screen. (See section 15-FAQS)

Save a log file to USB: Plug the USB to the machine and press this button. A LOG file will be saved in the USB.



11.5 CAMERA

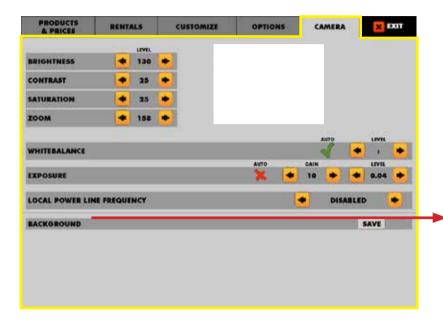

In the submenu CAMERA, the owner can set the camera zoom position and brightness.

Background:

This option is used to capture the depth of your Photo-Booth. This option is used for hats and hairstyles, the background is that appears with this options. If for any reason you had to change the white decal or your decal is old, click SAVE and you will have a snapshot of the background of your photobooth, thus the pictures of hats and hairstyles was not 2 different colors of background.



12-INTERNET

WHY CONNECT THE PHOTOBOOTH TO THE INTERNET?

By having the PhotoBooth connected to the Internet, you are able to get the most out of the PhotoBooth; alerts, audits, additional products for your clients...

All the photos taken will be uploaded to the Cloud, and your clients will be able to share them via social networks and/or email. You will also have access to statistics regarding your PhotoBooth. This feature will let you know if it is working, if it's online, if there is any type of issue, and if you are running low on film.

If the PhotoBooth has the credit/debit card payment option, the PhotoBooth needs to be connected to Internet. (Only USA and CANADA)




MARNING: Please use DC's autorized components. DC's PhotoBooths are manufactured to operate with specific hardware only. Any alterations will void the warranty.




12.1 INTERNET CONNECTION STATUS AT A GLANCE

The PhotoBooth screen displays an icon and a text giving the information you need.

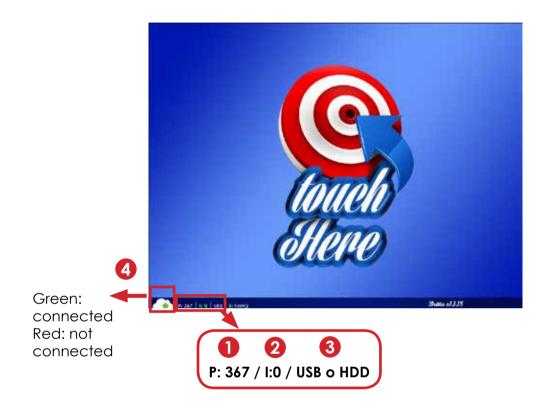

- Displays the film stock
- 2 Displays the photos that haven't been uploaded to the Cloud, if X=0 it means that there are no photos waiting to upload to the Cloud.

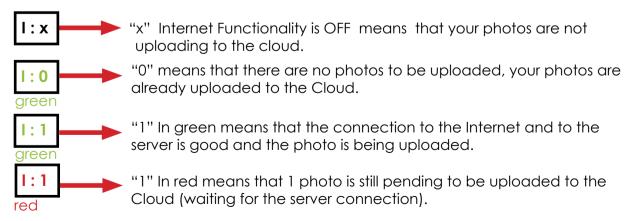

3 Shows if the PhotoBooth is working with the USB stick (USB) or not (HDD).



12.2 CONNECTING VIA ETHERNET



Internet connection

- 1- Turn OFF the PhotoBooth and unplug the power cord.
- 2- Check the distance between the Internet connection and the position of your PhotoBooth.
- 3- Ensure you have an Ethernet cable (RJ45) that is long enough.
- 4- Take the Ethernet cable (RJ45) and plug



Ethernet cable (RJ45) (Not provided with the PhotoBooth)

 $ilde{\mathbb{A}}$ **WARNING:** Please turn OFF and unplug the PhotoBooth before doing this process to avoid any injury



12.3 CONNECTING VIA Wi-Fi

The PhotoBooth needs a Wi-Fi adapter to be able to access to any Wi-Fi network. The Wi-Fi adapter has to be the TRENDNET TEW-648 UB.

Other Wi-Fi adapters will not work and will cause malfunctioning.

To connect your PhotoBooth to Internet via Wi-Fi you should connect the USB Wi-Fi adapter to the PhotoBooth.



The PhotoBooths has a USB slot at the top right of the chassis. Plug the USB Wi-Fi adapter in this slot.

Mini Wireless "N" USB Adapter



 \triangle


WARNING: use TRENDNET N150 TEW-648UB only. DC's PhotoBooths are manufactured to operate with specific hardware only. Any alterations will void the warranty.




12.4 SETTING UP THE WI-FI NETWORK TO ACCESS THE INTERNET

After connecting the Wi-Fi adapter, you need to link the PhotoBooth to a network to access the Internet. Follow the steps below.

- 1- Turn "ON" the PhotoBooth.
- 2- Open the back door and press the yellow button from the Control Panel, to access the menu.

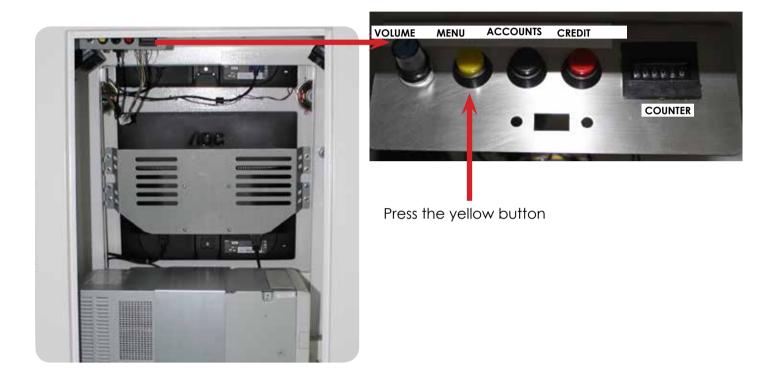


3- In order to upload the photos/videos to the Cloud, we need to turn ON the "Internet Functionality" from the settings menu. Go to OPTIONS and choose the correct option from the "Internet Functionality" menu. If the "Internet Functionality" is OFF the photos will not be uploaded to the Cloud.

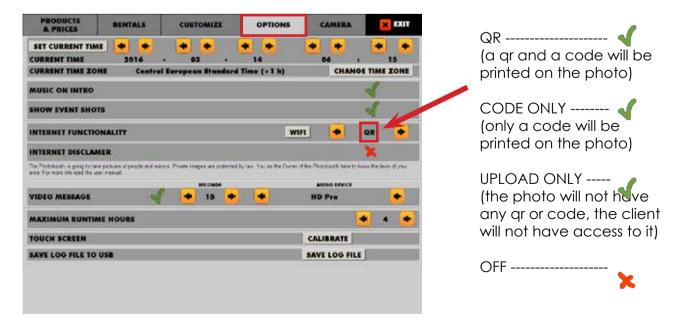



4- Once selected the correct "Internet Functionality", touch on the Wi-Fi button.

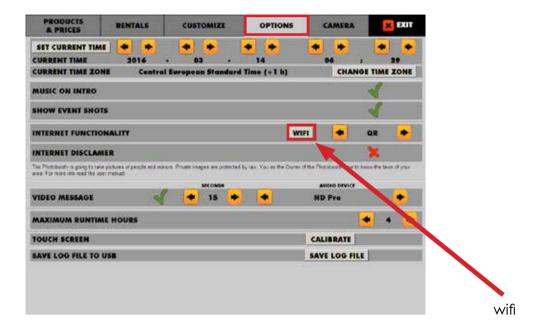

PRODUCTS RENTALS CUSTOMIZE OPTIONS CAMERA X EXIT

WIFI MANAGER CLOSE


INTERFACE:
TRENDnet Wireless N USB Adapte|disconnected

LIST AVAILABLE NETWORK

5- Touch the "List Available Network" button.



6- A list of available networks appears, select the network you want to connect to. It should have a minimum strengh of 60%.

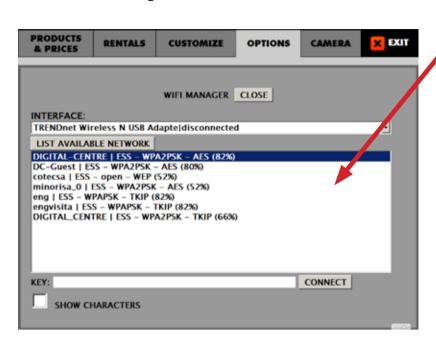




Warning: any signal under 60% will not assure a solid connection


7- Enter the network pasword. Upon touch, a keyboard appears on the screen. Type the password and touch ACCEPT.

If the network does not have any pasword leave it blank and touch ACCEPT.

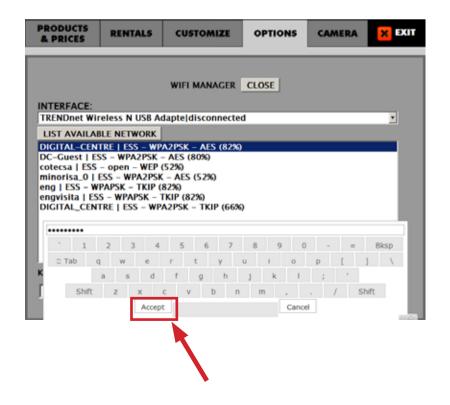



8- Touch CONNECT.

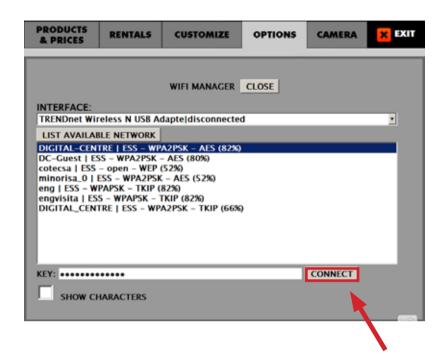


9- You will see this window appear for a few seconds.






10- Your interface info text will change to "connected to" your selected network, then EXIT setup menu by touching EXIT.

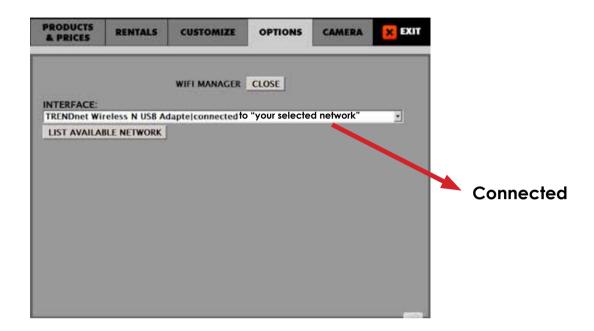

* If the screen shows "disconnected" means that the PhotoBooth failed to connect to that network.

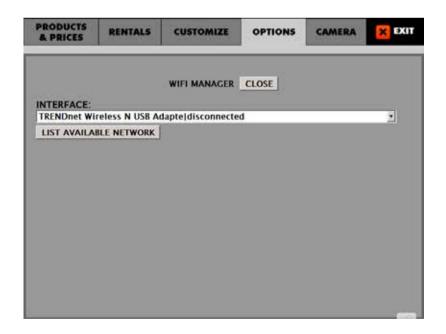

MARNING: use TRENDNET N150 TEW-648UB only. DC's PhotoBooths are manufactured to operate with specific hardware only. Any alterations will void the warranty.



13-TROUBLESHOOTING

13.1 GENERAL PROBLEMS

Problem

The unit switch is ON, but it does not turn on.

Causes

The unit is not plugged in.
The voltage is incorrect.
Overload: the fuse over the electric socket has been blown.

Solutions

Check if the unit is correctly connected to the electric ground. Check if the electric ground is receiving electricity.

Be sure that the voltage is correct. Change the fuse.

Problem

The fluorescent does not turn on.

Causes

The fluorescent lights have been blown. The transformer has been blown.

Solutions

Replace the fluorescent lights. Replace the transformer.

13.2 MONITOR'S PROBLEMS

Problem

The monitor image looks darker or lighter.

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.

Problem

The monitor image moves up and down.

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.



13.3 MONITOR NO SIGNAL MESSAGE



Lights are ON

Check if the PC lights are ON.

If the lights are on then it appears that the PhotoBooth is working but the monitor is not. Next steps:

When you turn ON the PhotoBooth, can you see any message on the screen? (ex; manufacturer name, or "NO SIGNAL")?

If this is the case, the VGA cable is probably unplugged or damaged.

But if nothing is on the screen (when you turn ON the PhotoBooth), please check if there is power to the Monitor. Power cable is probably unplugged from the monitor.

13.4 PRINTER PROBLEMS

Problem

The printer does not switch on.

Causes

The printer is disconnected.

The printer does not receive electric supply.

Solutions

Connect the printer.

Be sure that the cable is correctly connected.

Problem

It prints one or more white lines.

Causes

Thermal head is broken.

Solutions

Replace thermal head.



13.5 PRINTER ERROR

After a printer error please follow the steps:

1. Check the printer lights ON. Should be ON the power light.



2 · Check the printer connections, USB and power cable.



3 · Check the computer connections, USB from printer to PC.



P.8 Printer



13.6 PC PROBLEMS

Problem

Install a brand new Control Board with Atmel chip and jumpers.

Causes

This problem is due to a hardware malfunction.

Check the green Capture Board, as it is probably out or half way in.

Solutions

Turn OFF the PC.

Take out the Capture Board. And put it again (all the way in).

Screw in tightly and check again that it is all the way in, and did not move little out during screwing.

Turn ON the PB and check it.

13.7 HARD DRIVE ERROR

This procedure is to check if the BIOS settings are correct for an Automatic BOOT-DVD.

WARNING!!! This procedure is very dangerous and could cause a PC Malfunction. Please read it carefully and follow all steps one by one.

- 1 · Plug in a Keyboard to the PC.
- 2 · Turn ON the PC (or the whole Photo Booth).
- 3. When the ASRock screen appears, press "F10" several times until the "BIOS SETUP UTILITY" appears on the screen. If it does not come up, and the software continues uploading, then go back to the Step 2.









- 4. With the Keyboard arrows, move up to the Storage Menu, here we are going to check the following thing:
- · Device Configuration (step 5)
- · Boot Order (step 6)

- $5 \cdot$ Once you are inside the "**DEVICE Configuration**" please check the following points:
 - "Hard disk" should be connected at SATAO
 - "CD-ROM" should be connected at SATA1


If everything is OK, press ESC to return the Main menu. If Hard disk or CD-ROM or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8





- 6 · Once you are inside the "Boot Order" please check the following points:
 - "ATAPI CD-ROM"
 - "Hard Drive"

If ATAPI CD-ROM or Hard Drive or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8

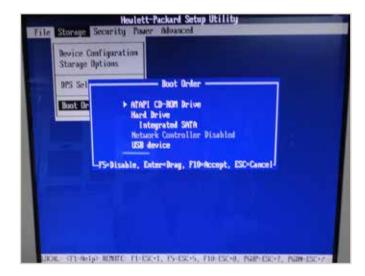

- $7 \cdot$ With the Keyboard arrows, move right to the Advanced Menu here we are going to check the following thing:
- ·Select Power-On Option and confirm that the "After Power Loss" is ON







- 8. Unplug the PC from the power.
- 9. Open the top cover (there are 2 screws in the top back side of the PC)
- 10. Check connections as follows:

Please pull up the green arrows from the DVD ROM and from the Power supply and check the connection as it shows in the following pictures.

IF The Hard Disk is SATA + DVD SATA it will be like this:

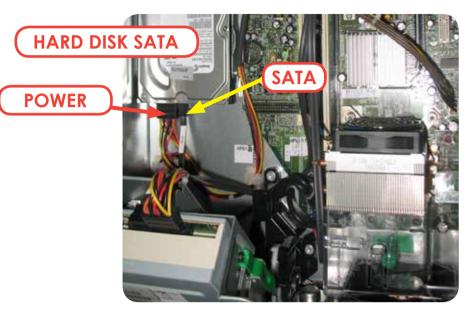



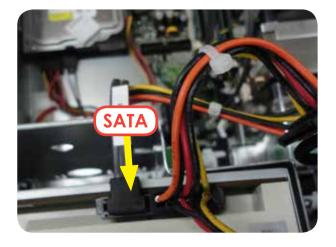



11 · If all connections are fine (as it appears in the pictures), then it is possible that the component, which is not detected at the "IDE CONFIGURATION" Menu, is physically damaged. Please contact Digital Centre for a new part.



13.8 DONGLE ERROR

If you switch on the PhotoBooth and the following message appears; "Sentinet HASP key not found (H0007)", it means that the printer dongle is not well connected. The USB dongle must be connected on P.5 (please see picture).





P.7 Dongle



13.9 CAMERA ERROR

When you take a picture and your screen appears black please check the USB connection from the camera. The USB must be connected on P.10 (please see picture).






P.10 USB Extension AM / AF From Camera to PC. (180 cm - Inch 70,87)



13.10 CONTROL BOARD ERROR

Check following points:

- 1 · Check the Control Board Serial Connection "P.2".(That is the common problem point). (attach 2 pictures: Correct and Error "Please Wait"). This connection is very easy to lose during transport, or when you work at that area.
- 2 · If all connections are good, then check that the Control Board Red LED is ON.
- 3·If all the 2 points are OK, but still doesn't work, please send the Control Board to Digital Centre (contact the Support Team before sending)

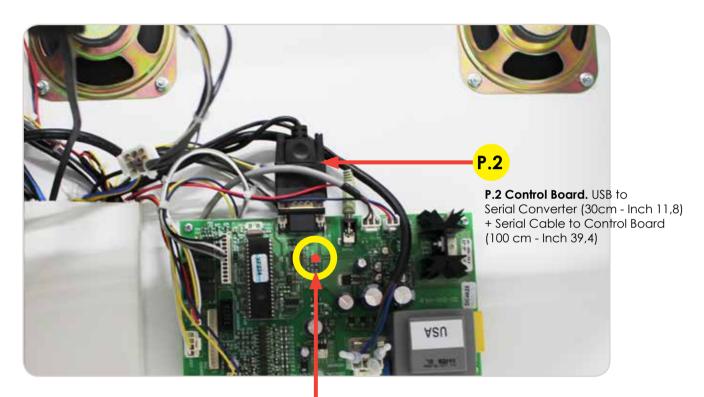

Red LED is ON



P.2 Control Board. USB to Serial Converter (30cm - Inch 11,8) + Serial Cable to Control Board (100 cm - Inch 39,4)



13.11 SOUND PROBLEMS

Problem

The sound does not work

Causes

The volume is not correct.

The configuration menu has the sound set to OFF.

Solutions


Adjust the volume with the control placed below the test, free-play and start buttons. Change the sound configuration from the test menu (black button).

13.12 PROBLEMS UPLOADING THE LOGO

Possible causes:

1-USB is damaged

- · Let's make a test to see if it works at the computer.
- \cdot Plug the USB STICK at the front of the PC (HP C2D), and go to Set Up Menu. Then exit the Menu.
- · Take a picture by choosing the product you want.
- · After the game, Remove the USB STICK.
- · Plug the USB STICK in your PC or LapTop.
- · Check if the USB STICK contents the **PhotoIdDownload** folder.
- · It should be 2 folders into the PhotoldDownload and your picture should be there.

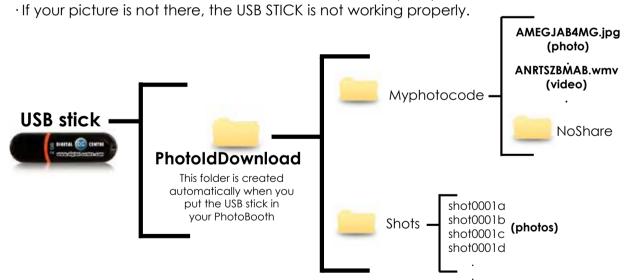

It's recommended to use a USB drive with LED and 2GB of space.







2-The logo specifications/characteristics are not correct

- · Plug the USB Stick in your PC or Laptop.
- · Locate the logo, Placed on the logo and click the right button on your computer mouse to open properties.

Click the right button

· The properties should be as follows.

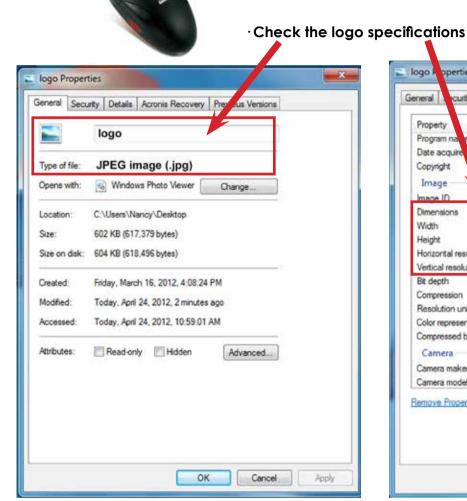

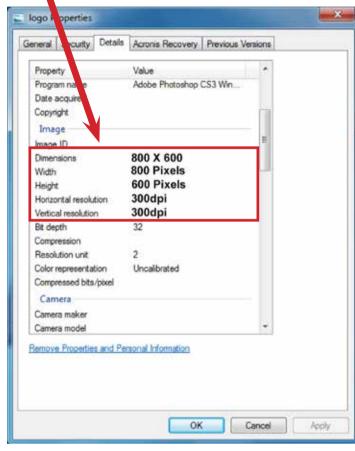

Logo specifications:

Name: logo

Size: width: 800 pixels

height: 600 pixels

Resolution: 300dpi

We recommend 300dpi, but it will also work with

less resolution. Extension:JPG Color mode:RGB




If it doesn't working, consult a professional designer to assist in changing the logo. **ADVANCED USERS:**Use the following web site for suggestions; http://www.webresizer.com



14-CHARACTERISTICS

14.1 CONTROL BOARD DIAGRAMS

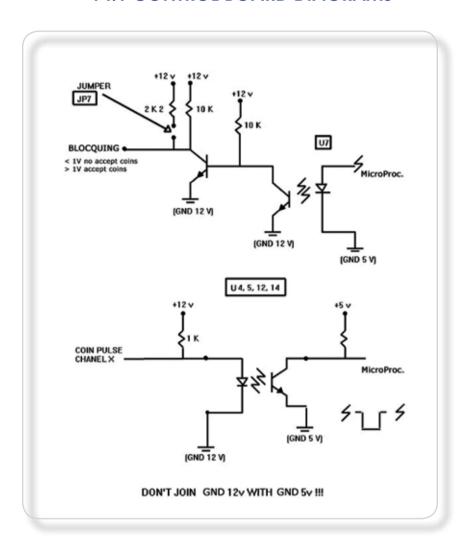

PIN NUMBER	SIGNAL	REMARKS
1	GND	
2	12V	
3,4,5	N.C.	
6	BLOCQUING	U7 PUT THIS TO >= 3v WHEN THE PROGRAM LETS YOU TO USE COINS. MINOR THAN 1v WHEN MC
7	COIN PULSE CHANEL 1	U12 PULSE TIME DURATION > 50 msc
8	COIN PULSE CHANEL 2	U4 THE PROGRAM DOESN'T USE IT
9	COIN PULSE CHANEL 3	U14 THE PROGRAM DOESN'T USE IT
10	COIN PULSE CHANEL 4	U5 THE PROGRAM DOESN'T USE IT



14.2 DECALS

You can use images of 300 dpi to personalize the decals if needed. Save in a JPG format.

The size cm (for EUR) or inch (for USA) for each one must be:


1-(DE3400) DECAL. STRIP #1 Bottom Left Lateral Door (Photo Slot) (30x23 cm - Inch 9,1x11,8)

MAGNETS

1-Thanksgiving (55,5x80,5 cm - Inch 21,9x31,7)


2-Thanksgiving (55,5x78 cm - Inch 21,9x30,7)

MAGNETS

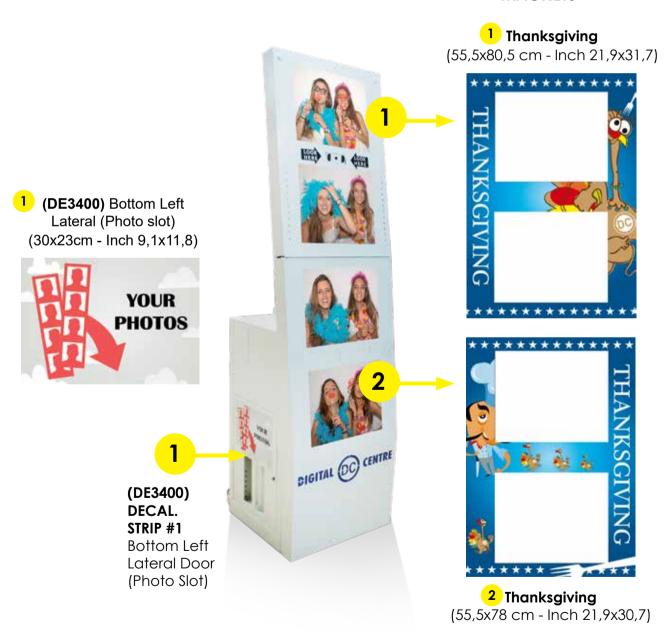



14.3 DIAGRAM PHOTOBOOTHS PARTS

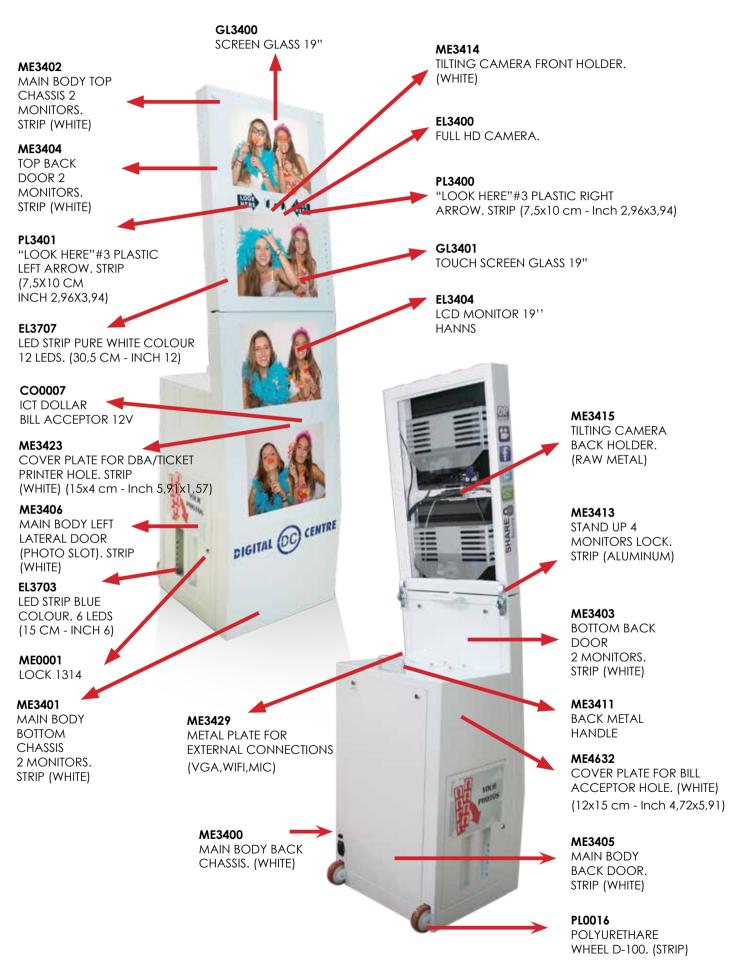



14.4 PARTS LIST

C 4 000 /	DILL DEADED CARLETOT DC 10V/00 F and the de 0/ 41V
CA0006	BILL READER CABLE ICT-DC. 12V (92,5 cm - Inch 36,41)
CA0007	BILL READER CABLE MEI-DC. 110V
CA0004	NETWORK CABLE 50 CM (INCH 19,69)
CA2912 CA2902	POWER CORD 230V - EUR POWER CORD 110V - USA
CA2902 CA3400	MAIN POWER CABLE (4 MONITORS + PC + PRINTER). STRIP
CA3400 CA3402	VGA CABLE M/M. (180 cm - Inch 70,87)
CA3402	VGA CABLE M/M. (180 cm - Inch 70,07) VGA CABLE M/M. (150 cm - Inch 59,06)
CA3404	VGA CABLE M/M. (130 cm - Inch 39,37)
CA3405	VGA CABLE M/M. (100 cm - Inch 86,61)
CA3407	USB EXTENSION AM/AF. (180 cm - Inch 70,87)
CA3409	VGA CABLE TO 4 MONITORS
CA3410	CABLE FROM CONTROL BOARD TO SERVICE PANEL + SPEAKERS + LED
CA3411	INTERNAL PC 12V DIVIDER
CA3412	TOUCH CABLE FROM TOUCHBOARD TO USB PC & 12V ADAPTOR (200cm - Inch 78.74)
CA3413	TOUCH CABLE 12V ADAPTER (44cm - Inch 17.32)
CA3414	USB CABLE FROM PRINTER TO PC. AM/BM (180 cm - Inch 70,87)
CA3415	LED CABLE. (BLACK) (53 cm - Inch 20,87)
CA3416	JACK STEREO CABLE. (180 cm - Inch 70,87)
CA3417	USB CABLE AM/AF-PANEL. STRIP (50 cm - Inch 19,69)
CA3422	SERIAL CABLE FROM PC TO CONTROL BOARD. STRIP (200 cm - Inch 78,74)
CA3425	CABLE FROM EXTERNAL MIC JACK TO PC
CA3426	CABLE FROM CONTROL BOARD TO LED
CA4406	MINI VGA F/F ADAPTOR (PC TO MONITOR)
DE3400	DECAL. STRIP # 1 - BOTTOM LEFT LATERAL DOOR (PHOTO SLOT)
	(30x23 cm - Inch 9,10x11,80)
DE0001	DECAL. Share Secure (QR Photo Planet) (16,2 x 37,2 cm - Inch 6.4 x 14.6)
DE3401	DECAL. SOCIAL NETWORKS. TOP RIGHT/LEFT LATERAL (WHITE) (Strip / I-Go)
EL 0.400	(6,5x50cm - Inch 2.4 x 15.7)
EL3400	FULL HD CAMERA
EL34201	CONTROL BOARD V4.0 EVO LED (220V) 3 RELÉS
EL3419	CONTROL BOARD V4.0 EVO LED (110V) 3 RELÉS LED-ATMEL CHIP ON CONTROL BOARD WITH SOFTWARE EVO LED
EL3403	
EL3404 EL3707	LCD MONITOR 19'' HANNS LED STRIP PURE WHITE COLOUR - 12 LEDS. (30,5 cm - Inch 12)
EL3707	LED STRIP BLUE COLOUR. 6 LEDS (15 cm - Inch 6)
EL3703	FILTER 2 FUSES STANDARD 6A
EL3407	TOUCH BOARD
EL3408	FAN (2 UNITS 12V) TWIN
EL3604	SERVICE CONTROL PANEL - MODEL 2
EL3410	SPEAKERS 1W. (7,5 cm - Inch 2,95)
EL3411	LED STRIP CONNECTOR M/M (FROM EL3405 TO CA3415)
EL3417	TRANSFORMER 2A 12V
GL3400	SCREEN GLASS 19"
GL3401	TOUCH SCREEN GLASS 19''
ME0001	LOCK 1314
ME0002	KEY FOR LOCK 1314
ME3400	MAIN BODY CHASSIS. STRIP (WHITE)
ME3401	MAIN BODY BOTTOM CHASSIS 2 MONITORS. STRIP (WHITE)
ME3402	MAIN BODY TOP CHASSIS 2 MONITORS. STRIP (WHITE)
ME3403	BOTTOM BACK DOOR 2 MONITORS, STRIP (WHITE)
ME3404	TOP BACK DOOR 2 MONITORS. STRIP (WHITE)



ME3405	main body back door. Strip (white)
ME3406	main body left lateral door (photo slot). Strip (white)
ME3407	MONITOR 19'' HOLDER. STRIP (RAW METAL)
ME3408	MONITOR 19" (4th) HOLDER FOR FUTURE EXPANSION. STRIP (RAW METAL)
ME3409	PRINTER HOLDER CP9550DC. (RAW METAL)
ME3410	PC HP-C2D HOLDER. (RAW METAL)
ME3411	BACK METAL HANDLE
ME3412	CHASSIS MONITOR'S LOCKER FOR TRANSPORT. STRIP (WHITE)
ME3414	TILTING CAMERA FRONT HOLDER. (WHITE)
ME3415	TILTING CAMERA BACK HOLDER. (RAW METAL)
ME3417	PRINTER DONGLE BRACKET. (INOX)
ME3429 ME3418	METAL PLATE FOR EXTERNAL CONNECTIONS (VGA,WIFI,MIC) LED SUPPORT FOR 12 LEDS (RAW METAL) (2,5x28 cm - Inch 0,97x11,02)
ME3410 ME4411	LED SUPPORT FOR 6 LEDS (RAW METAL) (2,5x16cm- Inch 0.97x6,24)
ME4411 ME4414	SET 2 PRINTER SUPPORT GUIDEWAY
ME4408	PRINTER SUPPORT I-GO / strip
ME3423	COVER PLATE FOR DBA/TICKET PRINTER HOLE. STRIP (WHITE)
WL0420	(15x4 cm - Inch 5,91x1,57)
ME4632	COVER PLATE FOR BILL ACCEPTOR HOLE. (WHITE) (12x15 cm - Inch 4,72x5,91)
PC0001	DONGLE USB SECURITY AND SOFTWARE
PC0004	RAM MEMORY MODULE. DDR2 5300 667 (512Mb)
PC0005	HARD DRIVE SATA
PC0006	DVD READER SATA
PC0007	PC PROCESSOR HP-C2D
PC0008	PC MOTHER BOARD HP-C2D
PC0009	PC POWER SUPPLY HP-C2D
PC0011	PC HP-C2D
PC0013	PC BUTTON BATTERY 2032
PC0016	VIDEO CARD 4 MONITOR
PC0025	PC COVER PAINTED
PC0024	USB 3.0 PCI CARD (3EXT+1INT)
PL0005	METHACRYLATE DC. STRIP (BLUE) (14x54 cm - Inch 5.51x21.21)
PL0016	POLYURETHANE WHEEL D-100. (STRIP)
PL0032	PLASTIC PB CHASSIS PROTECTION FOOT
PL3400	"LOOK HERE" #3 PLASTIC ARROW RIGHT (7,5x10 cm - Inch 2,96x3,94)
PL3401	"LOOK HERE" #3 PLASTIC ARROW LEFT (7,5x10 cm - Inch 2,96x3,94)
PR9550	PRINTER MITSUBISHI CP9550DW-DC
WO3400	WOOD PC BASE. STRIP (RAW)
WO3401	WOOD PRINTER BASE. STRIP (RAW)
PL0001	RUBBER BAND PROTECT TO FALLING DOWN THE MONITOR
PL0002	BOOT DVD PLASTIC HOLDER
PL0033	CLAMP-SCREW MOUNT EXWHC2-500-01
SC3408	WHEELS SET SCREW. STRIP
SC3422	PCB FOOT
SE0046	HOLDING CLAMP ATC-22
SE0055	RJ45 CONNECTOR F/F
SE0052	HEAT SHRINK TUBE 1,91 cm
SE3402	TRANSFORMER SOCKET PLASTIC BASE. (WHITE)
SE3410	USER MANUAL STRIP
PK0002	BUBBLE PLASTIC FILM
PK0001	SHRINK-WRAPPING PLASTIC FILM
PK0012	STRAP (BLACK) 13 MM (1200 M) CARDROARD BOX BACK STRIP (50x70x130 cm., Inch 28 01x28 08x50 7)
PK3403	CARDBOARD BOX PACK. STRIP (59x72x130 cm - Inch 28,01x28,08x50,7)
PK3401	WOOD PALLET. STRIP (89x61 cm - Inch 28,74x35,03)



15-FAQS

RECOMMENDATION: USE EMPTY USB STICK

Whenever you create an USB Stick for a new event, make sure the USB stick does not contain photos of past events, this could lead to mix photos of past events with new events, and even lose some photos.

To ensure this, check if your USB Stick has a folder called PhotoIdDownload and make sure this folder is empty. If the USB Stick does not have this folder, do not worry, when you plug the USB Stick at the PhotoBooth, this folder will be created automatically.

NOT DETECT THE USB STICK

Please try the following procedure.

1-Plug the USB stick

2-Go to configuration and press LOAD, if it says USB not found then EXIT the configuration and GO IN again.

3-Maybe the first time it does not have enough time to recognize, it but the 2nd time probably yes. If it keeps saying USB not connected, please try another one.

RECOGNITION DEVICE

When you connect the USB sometimes it takes a while to be recognized by the computer.

CARD READER

If you want a card reader please contact DCA.

Sales: Ph: +1.305.387.5005 / sales@dc-image.com


Tech Support: Ph: +1.305.387.5115 / support@dc-image.com




MARNING: Is very important connectar card reader in the slot indicated (see section 4.2)


TOUCH SCREEN CALIBRATION

Press the yellow button and after 7 seconds press again. Automatically the menu is openend to calibrate the touch screen.

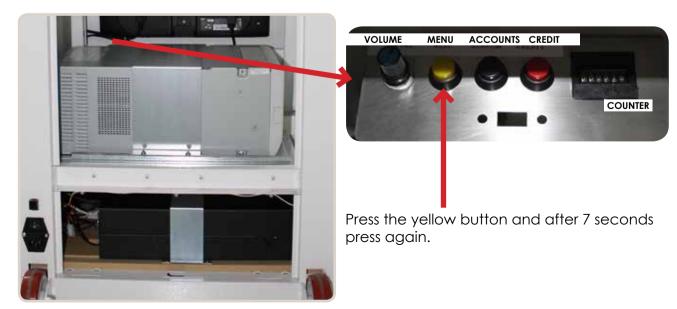

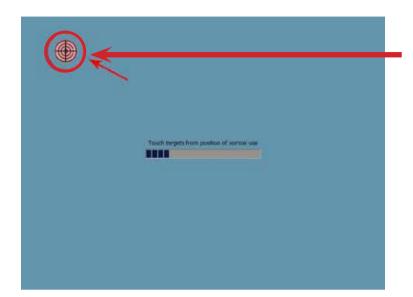

Calibrate the screen: Touch the center of the target (1 time only)

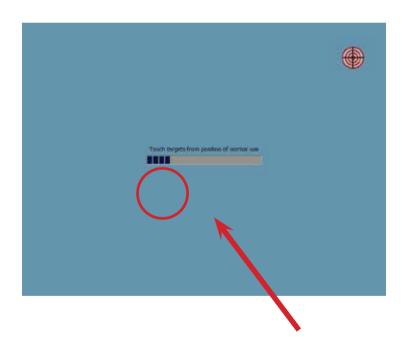


After the 3 targets, drag your finger all around the screen to make sure the cursor follow finger and press OK.



PRINTER TRANSPORTATION

The transportation of the printer will be in their original packaging or suitably protected to prevent damage to the internal mechanism.

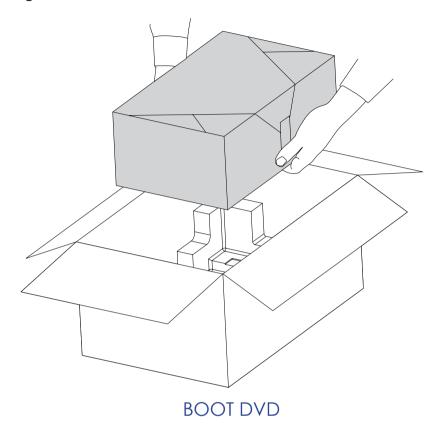

To Update the Machine or change the software version, please follow these steps:

- 1 · Open the DVD Driver.
- 2 · Insert the "Boot DVD".
- 3 · Plug Off the Machine.
- 4 · Plug On the Machine after 10 seconds.
- **5** · Wait while the restore program reinstalls the software (a progress bar appears on the screen).

The time process is about 30 minutes

- 6 · A black screen appears when the process finishes.
- 7 · Extract the DVD disk.
- 8 · Plug Off the Machine.
- 9 · Plug On the Machine after 10 seconds.

CUSTOMIZED FRAMES:

If you have customized frames and/or logos now is the time to upload.

CUSTOMIZED FRAMES. If you have customized frames and /or logos now is the time to upload.

To upload your customizations: put the USB Stick in the pc, go to the Setup Menu Customize, and press the LOAD button. If your USB is not detected, press EXIT and enter again to the Setup.

To view your frames, in the Setup menu, the Frames Option has to be in Custom mode.



PRINT REPORT

Here below we are going to explain how to read a print report.

To get a print report you should press the black button on the service control panel:



- 1. Report number: 17
- 2. Date: 10-16-2014 10:20
- Software: Expression 2.1 10.0.0.5
- Plays in report: 87
- Cash in report: 263
- 6. Errors-> Printer: 0; Paper: 0; Board: 0;
- 7. Total-> BW: 28: Color: 37: Hair: 1: Hats: 1: StreetArt: 5: Frames:
- 8. 10-02-2014 09:38 10-02-2014 20:40 Plays: 6; Cash:18; Stock: 46
 10-03-2014 09:33 10-03-2014 20:44 Plays: 7; Cash:21; Stock: 39
 10-04-2014 09:34 10-04-2014 21:17 Plays: 4; Cash:12; Stock: 35
 10-05-2014 09:42 10-05-2014 21:03 Plays: 10; Cash:30; Stock: 25
 10-06-2014 09:37 10-06-2014 20:43 Plays: 7; Cash:21; Stock: 18
 10-07-2014 09:41 10-07-2014 20:40 Plays: 9; Cash:28; Stock: 9
 10-08-2014 09:36 10-08-2014 20:33 Plays: 7; Cash:22; Stock: 87
 10-10-2014 09:33 10-10-2014 20:34 Plays: 10; Cash:30; Stock: 77
 10-11-2014 09:33 10-11-2014 21:03 Plays: 0; Cash:0; Stock: 77
 10-12-2014 09:42 10-12-2014 21:09 Plays: 8; Cash:24; Stock: 69
 10-13-2014 09:37 10-13-2014 20:36 Plays: 6; Cash:18; Stock: 63
 10-14-2014 09:37 10-14-2014 20:44 Plays: 9; Cash:27; Stock: 54
 10-15-2014 09:38 10-15-2014 20:38 Plays: 4; Cash:12; Stock: 50
 10-16-2014 10:19 10-16-2014 10:20 Plays: 0; Cash:0; Stock: 50
- 1.Report number: number of the report
- 2.Date: date and hour when the report has been made
- **3.Software:** software version
- **4.Plays:** number of plays done between the last report and this
- **5.Coins:** number of coins that has been gained between the last report and this
- **6.Errors:** number of errors that your PhotoBooth has had between the last report and this
- **7.Total:** number of plays by type between the last report and this
- 8.Each line shows a session of your PhotoBooth between the last report and this Sample:

10-02-2014 9:38 – 10-02-2014 20:40 Plays: 6; Cash: 18; Stock: 46 The PhotoBooth was turned ON on October 2nd at 09:38 and was turned OFF on October 2nd at 20:40, during this session 6 plays has been made, 18 cash (the PhotoBooth was on Freeplay mode) and stock of film that remains in the printer is 46 (the PhotoBooth can make 46 plays more)



16-OPTIONALS











- High quality external Microphone
- Microphone support with screws
- XLR Jack microphone cable



kit wifi



With this kit it is possible to establish a connection with the Internet in your PhotoBooth without any cable.





17-NOTES



EUROPE

Digital Centre
Dr. Ferran, 27-29. Bufalvent
08243 Manresa, BARCELONA
Spain +34.938.748.158
info@dc-image.com

AMERICA

Digital Centre America Inc. 13651 SW 143rd CT Unit #105 Miami, FL 33186 USA +1.305.387.5005 sales@dc-image.com

www.cligital-centre.com