

## Hot Wheels King of the Road

HTW-65-4001 (4 players)

HTW-65-6001 (6 players)



**Operation & Service Manual** 

Version 3.3

\* Read this manual before use

### **General Remark**

If you encounter any difficulties or if you need support on how to update and/ or install your Hot Wheels King of the Road product, we invite you to contact your local distributor or reach us at <a href="mailto:support@aagames.com">support@aagames.com</a> or by calling our support line +1-450-824-1671

Adrenaline Amusements Team

Adrenaline Amusements 2273 Antonio-Héroux street Terrebonne, QC Canada J6X 4R3



## **Table of Contents**

Contents
General Remark2
Table of Contents3
Chapter 01 - Preface6
Precaution for Game Operation6
Safety7
Environmental Conditions7
Operating & Voltage7
Chapter 02 - Game Features8
How to Play8
Chapter 03 – Unit Features9
Hardware Features9
Cabinet Facts – 6 players version9
Cabinet Facts – 4 players version 10
Chapter 04 – Unit Installation11
How to assemble your Hot Wheels King of the Road unit 6 players version
How to assemble your Hot Wheels King of the Road unit 4 players version
How to assemble the header of your Hot Wheels King of the Road unit (4 players & 6 players
version)
Chapter 05 – Operator Menu18
Operator Menu
Payout Structure – 6 players version 20
Payout Structure – 4 players version21
Chapter 06 – Service & Repair22
Computer Connections22
Troubleshooting



Video Troubleshooting	23
Audio Troubleshooting	23
RGB Led Troubleshooting	
Wireless Internet Configuration	
Operator Settings keeps resetting	
Computer not powering at boot	
Chapter 07 - Parts	34
Printed Panels – 6 players version	
Printed Panels – 4 players version	
Front of Small Cabinets	
Metal Parts – 6 players version	
Metal Parts – 4 players version	
Small Cabinet Parts	
Monitor Replacement Parts	
Electronics	
Cameras	
Camera kit Error! Book	mark not defined.
Steering wheels	
Steering Mechanism Assembly Parts available from Suzohapp	42
Header: HTW-07-0060-KIT	
Side LEDs – 6 players version	
Side LEDs – 4 players version	
Misc. Parts	
Wiring Harnesses	
Cabling	
Hardware Kit	
Hardware Kit Chapter 08 – Diagrams & Schematics	
	49



Power Distribution Schematics	53
Tray Assembly Schematics	55
Fuse Holders Schematics	56
RGB LED Schematics	57
Chapter 09 – Software Recovery	58
Chapter 10 – Card Reader	59
Limited Warranty Policies	60
J J	



### **Chapter 01 - Preface**

## Please read this page before preparing your Hot Wheels King of the Road Arcade product for game play.

The following safety instructions apply to all game operators and service personnel. Specific warnings and cautions will be included throughout this manual.

Use the following safety guidelines to help protect the system from potential damage and to ensure your personal safety:

- Electronic components in the game cabinet run on 110V AC 60Hz (220V/ 50Hz in most of Europe, the Middle East and the Far East delivered units).
- To help prevent electric shock, plug the system into a properly grounded power source. These cables are equipped with 3-prong plugs to help ensure proper grounding. Do not use adapter plugs or remove the grounding prong from a cable. If you must use an extension cable, use a 3-wire cable with properly grounded plugs. We do recommend a 15A rated current or higher power cord.
- To help protect your system from sudden increases and decreases in electrical power, use a surge suppressor, line conditioner or Uninterruptible Power Supply (UPS).
- Be sure nothing rests on the system's cables and that the cables are not located where they can be stepped on or tripped over.
- Keep your system far away from radiators and other heat sources.
- Do not block cooling vents.

#### **Precaution for Game Operation**

Adrenaline Amusements Inc. assumes no liability for injuries incurred while playing our games.

Operators should be aware that certain health and physical conditions may make people susceptible to injury when playing video games.





To avoid electrical shock, unplug the cabinet before performing installation or service procedures.

If a power cord is damaged, it must be replaced by the equivalent power cord available from your distributor.



Adrenaline Amusement Inc. assumes no liability for any damages or injuries incurred while setting up or servicing the cabinet. Only qualified service personnel should perform installation or service procedures.

#### **Environmental Conditions**

Cabinet is intended for indoor use only. Be sure to keep the cabinet dry and maintain operating temperatures of 59° - 86°F (15° - 30°C).

#### **Operating & Voltage**

Voltage	Operating				
110V AC	4.0 AMP				
220V AC	2.0 AMP				



### **Chapter 02 - Game Features**

#### Are you a skilled driver?

Then show us your racing abilities in the virtual world of Hot Wheels King of the Road.

#### How to Play

- Use the steering wheel to navigate and avoid obstacles
- Use the pedal to control your velocity
- Collide with other players to deviate them from their path
- Collect coins to win more tickets








### **Chapter 03 – Unit Features**


#### **Hardware Features**


- 4 to 6 Players Game
- Steering wheels & accelerator pedals for each player
- 65 inches LCD Screen

### **Cabinet Facts - 6 players version**

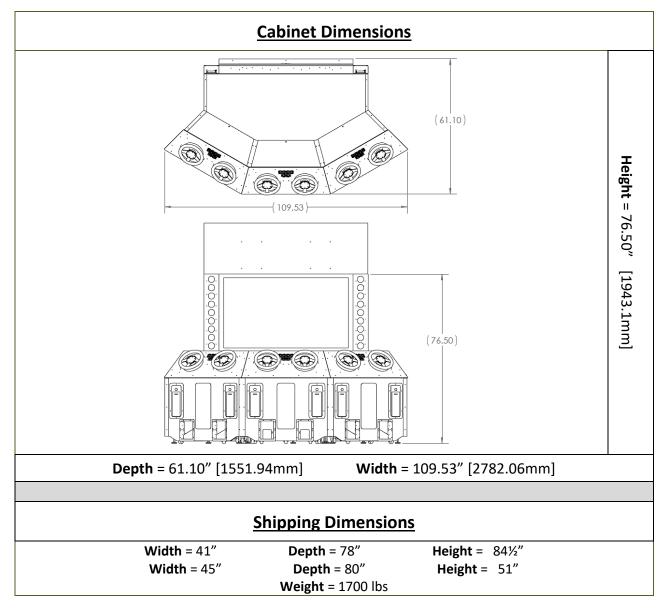



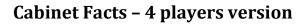

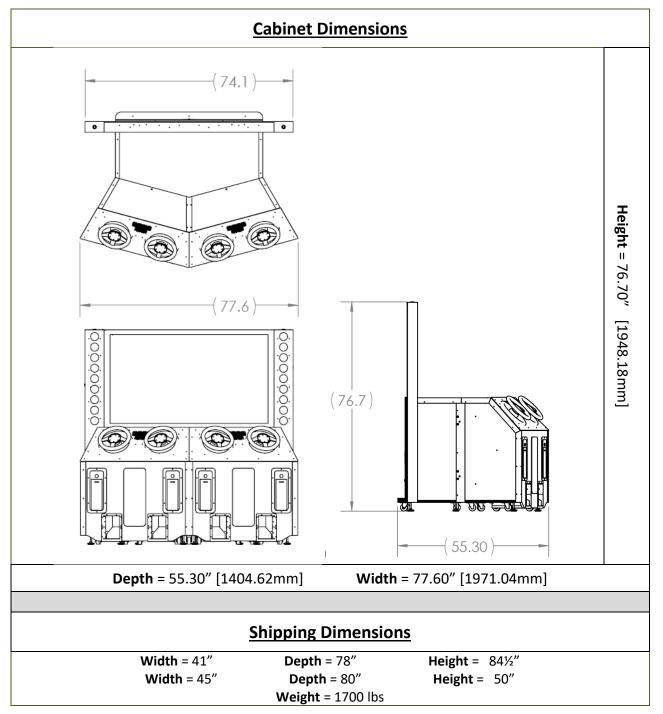





### **Chapter 04 – Unit Installation**

### How to assemble your Hot Wheels King of the Road unit 6 players version

**1)** Position all dash assemblies together. Secure their position with Philipps 10-24 x 1<sup>1</sup>/<sub>4</sub> bolts between each dash assembly. Make sure to screw from towards the exterior

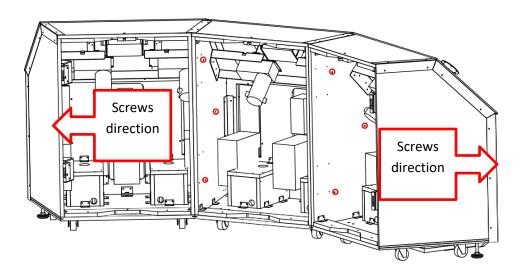


**2)** Between each dash's front, install metal part HTW-01-0009 (2x) with Philipps 10-24 x <sup>3</sup>/<sub>4</sub> machine screws

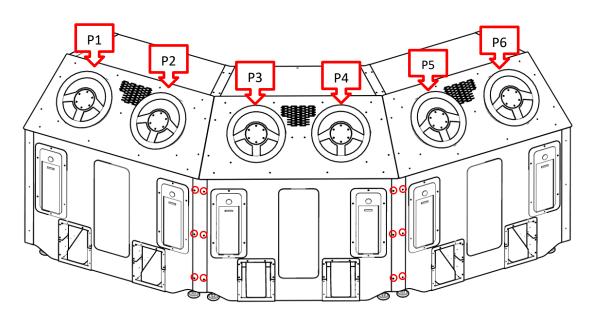




**3)** Between each dash's top, install metal part HTW-01-0008 (2x) with Philipps 10-24 x <sup>3</sup>/<sub>4</sub> machine screws

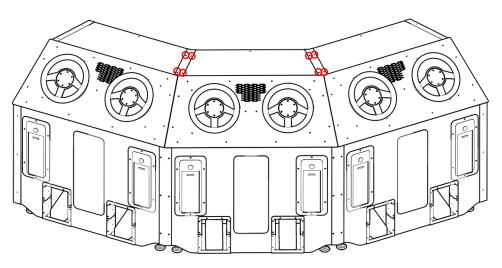


4) Move all dash assemblies towards the large cabinet assembly
For each of the cabinets: Connect all cables coming from the cabinet to the screen module

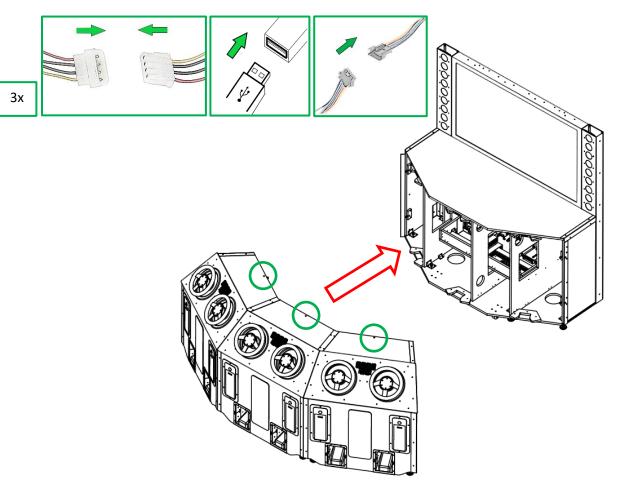




**5)** Using a 5/16" hexagonal key, turn the draw latches clockwise in order to connect the dash assemblies to the large cabinet assembly.

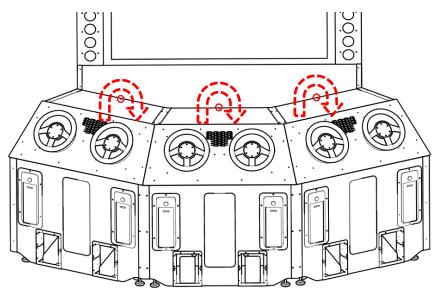

- 6) Install side brackets HTW-01-0058 (R/H) & HTW-01-0059 (L/H) with 3 Philipps 10-24 x ¾ machine screws for each side Using a 5/16" hexagonal key, turn the draw latches on each side of the large cabinet.
  - Turn the draw latches clockwise for the left side
  - Turn the draw latches counterclockwise for the right side

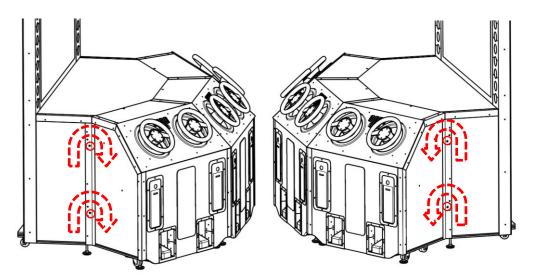





### How to assemble your Hot Wheels King of the Road unit

#### 4 players version

**1)** Position all dash assemblies together. Secure their position with Philipps 10-24 x 1¼ bolts between each dash assembly. Make sure to screw from towards the exterior

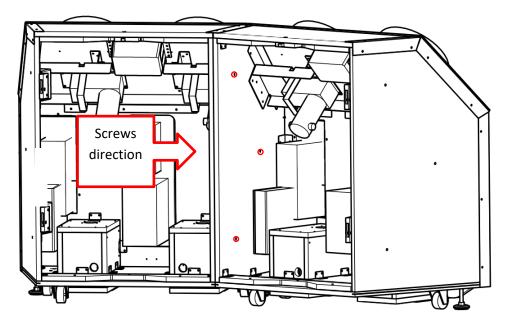


**2)** Between each dash's front, install metal part HTW-01-0009 with Philipps 10-24 x <sup>3</sup>/<sub>4</sub> machine screws

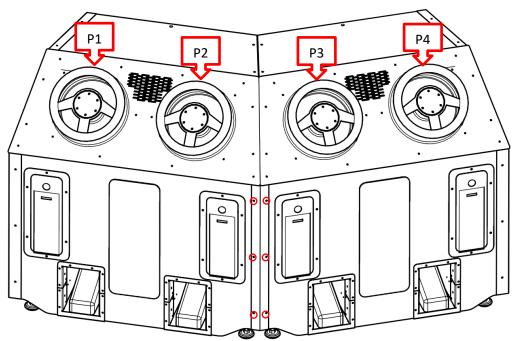




**3)** Between each dash's top, install metal part HTW-01-0008 with Philipps 10-24 x <sup>3</sup>/<sub>4</sub> machine screws

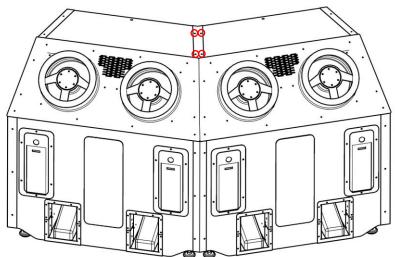


4) Move all dash assemblies towards the large cabinet assembly
For each of the cabinets: Connect all cables coming from the cabinet to the screen module

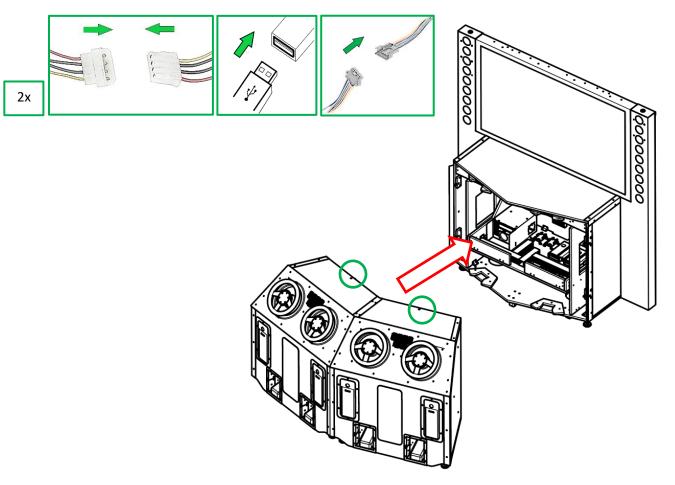




**5)** Using a 5/16" hexagonal key, turn the draw latches clockwise in order to connect the dash assemblies to the large cabinet assembly.

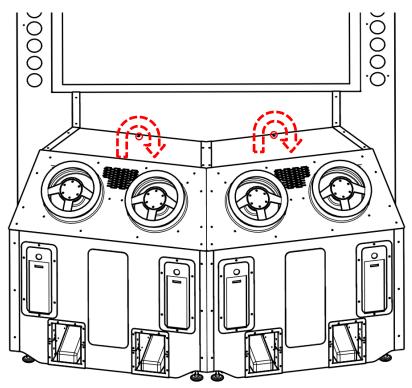


- 6) Install side brackets HTW-01-0068 (R/H) & HTW-01-0069 (L/H) with 3 Philipps 10-24 x ¾ machine screws for each side Using a 5/16" hexagonal key, turn the draw latches on each side of the large cabinet.
  - Turn the draw latches clockwise for the left side
  - Turn the draw latches counterclockwise for the right side

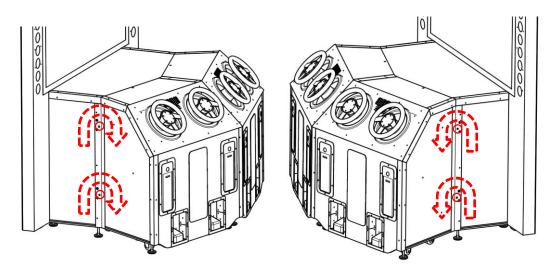



# How to assemble the header of your Hot Wheels King of the Road unit (4 players & 6 players version)

- 7) To install the header, position both header brackets
  - 1 hex head ¼-20 x ¾" bolts for each bracket 😳
  - 4 Philipps pan head 8-32 x ¾ screws for each bracket O

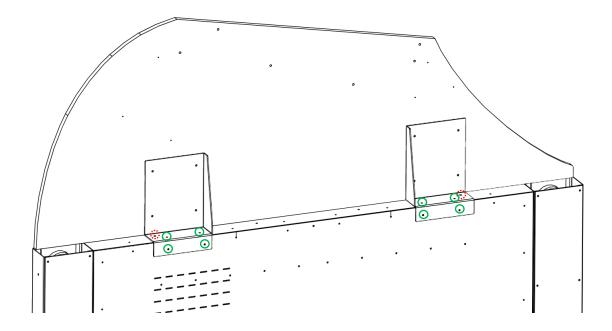




### **Chapter 05 – Operator Menu**

### **Operator Menu**

Access the Operator Menu by pressing the white operator menu button behind the center door of player 3's cabinet.

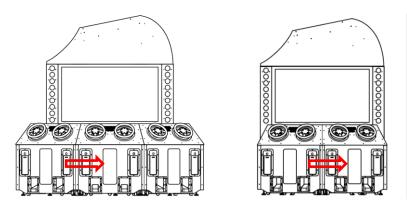

Navigate through the menu using player 3's steering wheel and pedal

			ENALI ames.c	NE om		
		THIS CABINE	т	REVISIO ID		
	USE PLAYER 3:		<b></b>	FIRMW	ARE 4	2
		SETTINGS				
		Credits per game		-	2 🔶	
		Game Audio Volume			4	
		Attract Audio Volume			4	
		Attract Steering Waltz	ON	0		
Keyboard Controls		Tickets value				
Press D to disable steering input		Payment Type		Credits	>	
Press KeyPad 1 for previous setting Press KeyPad 2 to select setting Press KeyPad 3 for next setting		New Jersey Settings	ON		FF	
		Redemption Mode	ON		FF	
		Redemption Unit Name		Tickets	2	
		Minimum Tickets			י 🛉	
		Credits Sharing 1_2 / 3_4			FF	
		Language		English	2	
		Payout Structure		_		
		Jackpot	ON		FF	
		Jackpot Value		= 4		
		Jackpot Average Games		5		
		Free Game	ON		FF	
		Take Picture	ON	0		
		Fixed Camera Position	ON	0	FF	
		CLEAR C	REDITS			
RESUME	QUIT	CALIBRATE PEDALS	CAT	MERAS		CTIVATE PLAY



<b>Operator Menu</b>	Values	What It Does
Credits Per Game	1-20	Adjusts the number of credits required to play. "0" sets the unit in free play mode.
Game Audio Volume	0-20	Adjusts the in-game audio volume. "0" will mute the game.
Attract Audio Volume	0-20	Adjusts the volume of the voice attract loop. "0" will mute the voice
Attract Steering Waltz	On/Off	
Ticket Value	1-2	Adjusts the value of physical tickets. Physical tickets are either worth "1" ticket or "2" tickets.
Payment Type	Credit / Card	Changes the credit type. "Credits" = Coins and "Card" = Card Reader. This will change the in-game text accordingly.
New Jersey Settings	On/Off	If set to On, a message will be displayed if more than 40 credits are inserted.
Redemption Mode	On/Off	Adjusts the redemption availability
Redemption Unit Name	Tickets/Coupon	Adjusts the in-game text accordingly
Minimum Tickets	0-20	Adjusts the minimum number of tickets dispensed per play.
Credit Sharing	On / Off	Adjusts the credit sharing option between each player. (Off: Sharing Disabled // On: Sharing Enabled) If you have Card Readers (2X) please use OFF.
Language	English/Français	Switches the game and the menu's language
Payout Structure	1-8	Changes the number of tickets won by the winner of the game (see payout structure table below)
Jackpot	On/Off	Enables a bonus value of tickets when the winner reaches 200 coins
Jackpot Value	100-1000	Amount of tickets won by the winner when jackpot is enabled. This value must be greater than the number of tickets already allowed in the payout structure
Jackpot Average Games	50-1000	Average number of games needed to reach the jackpot. This is a difficulty setting that is computed with the last 1000 games.
Free Game	On / Off	Gives the winner the opportunity to play a free game
Take Picture	On / Off	Takes pictures of each player at the start of the game
Clear Credits		Resets the Inserted credits to 0 if more than 40 credits are entered.
Resume Game		Exits the Operator Menu and returns to the game.
Quit Game		Exits the game and returns to the Windows desktop.
Calibrate Pedals		Displays the previous errors
Activate Players		Exits the Operator Menu and returns to the game.

### **Payout Structure – 6 players version**

Here are the number of tickets won by the winner of the game for each payout structure

Number of Players	Payout 1	Payout 2	Payout 3	Payout 4	Payout 5	Payout 6	Payout 7	Payout 8
Single- Player Game	5 Tickets	20 Tickets	25 Tickets	50 Tickets	75 Tickets	100 Tickets	100 Tickets	150 Tickets
2-Players Game	5 Tickets	20 Tickets	25 Tickets	50 Tickets	75 Tickets	100 Tickets	100 Tickets	150 Tickets
3-Players Game	10 Tickets	25 Tickets	45 Tickets	75 Tickets	100 Tickets	125 Tickets	150 Tickets	200 Tickets
4-Players Game	25 Tickets	30 Tickets	60 Tickets	100 Tickets	125 Tickets	150 Tickets	250 Tickets	300 Tickets
5-Players Game	35 Tickets	50 Tickets	75 Tickets	125 Tickets	150 Tickets	200 Tickets	350 Tickets	400 Tickets
6-Players Game	50 Tickets	100 Tickets	150 Tickets	200 Tickets	300 Tickets	400 Tickets	500 Tickets	750 Tickets
Coins per ticket	50 Coins	35 Coins	25 Coins	20 Coins	15 Coins	10 Coins	10 Coins	10 Coins

### **Payout Structure – 4 players version**


Here are the number of tickets won by the winner of the game for each payout structure

Players	Payout 1	Payout 2	Payout 3	Payout 4	Payout 5	Payout 6	Payout 7	Payout 8
Single-Player Game	5 Tickets	20 Tickets	25 Tickets	50 Tickets	50 Tickets	75 Tickets	75 Tickets	100 Tickets
2-Players Game	10 Tickets	20 Tickets	25 Tickets	50 Tickets	50 Tickets	75 Tickets	75 Tickets	150 Tickets
3-Players Game	25 Tickets	25 Tickets	45 Tickets	75 Tickets	100 Tickets	125 Tickets	150 Tickets	200 Tickets
4-Players Game	50 Tickets	50 Tickets	75 Tickets	125 Tickets	150 Tickets	200 Tickets	350 Tickets	400 Tickets
coins per ticket	50 Coins	35 Coins	25 Coins	20 Coins	15 Coins	10 Coins	10 Coins	10 Coins



### **Chapter 06 – Service & Repair**

### **Computer Connections**

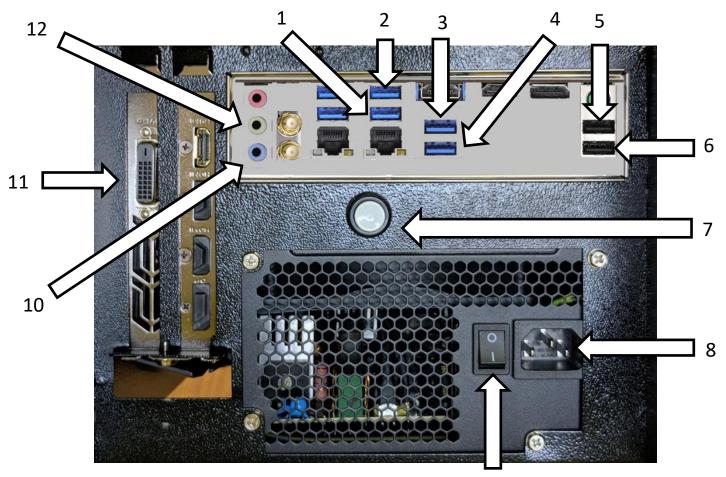

9

<u>No</u> .	Description
1	USB Port to USB Hub (
2	USB Port to Windows License Dongle
3	USB Port to RGB Controller
4	USB Port to I/O Board
5	USB Port to I/O Board
6	USB Port to I/O Board
7	Power Button
8	AC Inlet Power Supply
9	AC Power Switch
10	Blue Audio Jack 3.5 mm for Speaker 3
11	DVI Port for 65" Monitor
12	Green Audio Jack 3.5 mm for Speakers 1 & 2



### Troubleshooting

#### \* <u>NOTE: When requesting a warranty replacement, you will be asked to</u> give the unit's serial number from the back of the unit.

Video Troubleshooting								
	There might have loose or faulty connections between the monitor and the computer. Make sure the DVI cable is connected properly in the computer's video card and in the monitor connector.							
No Picture or Display Problem	Verify that the Computer is powered on. The fan on the side of the computer case should be spinning as a reference, if it's not spinning press the Power Button on the front of the computer.							
Audio Troubleshooti	ing							
Low Volume / No Sound	Increase the volume in the game by pressing the Operator Button and adjusting the volume options in the Operator Menu. You might also Quit the game to Windows desktop and increase the volume via the Speaker icon on the bottom right of your screen.							
	Verify the wirings behind the speakers and the amplifiers. Verify that the 1/8" audio jack is plugged in the computer's sound input jack and that the other end RCA's are plugged in the sound amplifier.							



### **RGB LED Troubleshooting**

If the RGB LEDs are not working properly verify that the RGB LED Controller is connected on a valid COM Port.

Press the Operator Button and Quit/Exit the game to Windows Desktop.


Connect a USB mouse.

Right-click on the windows flag on the bottom left corner and select Device Manager.





Expand the "Ports (COM & LPT)" line by clicking on the >.

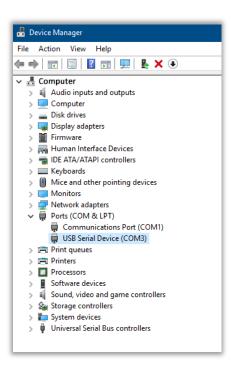

Verify that the "USB Serial Device" is set between COM2 to COM9.



#### Hot Wheels King of the Road Manual V3.3 Chapter 06 – Service & repair

If it's outside this range, double-click on it to open its properties. Select the "Port Settings" Tab. Click on "Advanced..."

💾 Device Manager
File Action View Help
USB Serial Device (COM3) Properties
General Port Settings Driver Details Events
Bits per second: 9600 ~
> Data bits: 8 ~
> Parity: None ~
> Stop bits: 1 ~
> Flow control: None ~
Advanced Restore Defaults
>
>
>
>
> > OK Cancel



Click on the COM Port Number scrolling menu and select COM9. Click on OK. Click on OK again.

Close the Device Manager window and restart Windows.

🗄 De	🛓 Device Manager — 🗆 🗙									
	Action View Help				_					
4	USB Serial Device (CO	M3) Properties		$\times$						
✓ ∄ >	Advanced Settings for	or COM3						×		
5										
>	Use FIFO b	uffers (requires 16550	compatible UAR	T)				ОК		
>	Select lowe	r settings to correct co	nnection problem	15.				Cancel		
>	Select high	er settings for faster pe	rformance.							
>	Receive Buffer:	Low (1)				High (14)	(14)	Defaults		
>					Υ.					
>	Transmit Buffer:	Low (1)				High (16)	(16)			
~										
	COM Port Number:	COM3 ~								
>	COM Port Number.	COM1 (in use) 🔺								
>		COM2 COM3							_	
>		COM4 COM5								
>		COM6 COM7								
>		COM8 COM9								
>		COM10 COM11	ОК	Cancel						
L		COM12 COM13								
		COM14 COM15								
		COM16 COM17								
		COM18 COM19								
		COM20 COM21								
		COM22 COM23								
		COM24 COM25								
		COM26 COM27								
		COM28 COM29								
		COM30 ¥								
							_			

Closes all apps, turns off the PC and then turns it again.			
Restar	£		
Φ			
-			



### **Wireless Internet Configuration**

Your network can be configured via Ethernet cable or Wireless.

If you have an Ethernet cable available to be plugged in, insert it into the motherboard LAN RJ45 connector.

If not, here's how to configure your wireless network with your own existing Wi-Fi network.

-Start the unit.

-There will be Adrenaline Amusements wallpaper with a 150 seconds delay before the attract mode shows up. It gives enough time for a wireless network to connect. (*This delay will be present on each reboot if you don't connect your unit to the Internet*)\*.

-Open the service door and press the Operator button.

-Choose Exit/Quit to Windows.

-Connect the provided USB hub and into it the USB keyboard and mouse.

- Open Connect to a Network by clicking the network icon (📶) in the lower right corner of the screen.

-In the list of networks, click the network you want to connect to and click connect.

-Enter your security key.

-Once connected, double-click the GameLauncher shortcut on the desktop.

Having your unit connected to the Internet includes free software live update!

\*If you do not connect your unit to the Internet, you can double-click the Disable\_Network shortcut on the Windows desktop to bypass the 150seconds Internet lookup delay.

### **Operator Settings keeps resetting**

Operator Settings keeps resetting back to default values after powering off the breakers.

The Windows & SSD Device write cache needs to be disabled:

-Exit the game to Windows.

- -Press on Start
- -Right click on My Computer
- -Choose Properties
- -Click on Device Manager
- -Expand Disk Drives

-Double click the SSD Hard Drive 60Gb or 120Gb Device (<u>Not the USB drive</u> if there is one) -Go to Policies

-Remove the check in front of "Enable Write caching on the device" as seen below, press OK and then YES to reboot the computer. If it doesn't ask to reboot the computer you need to do it by pressing Start, Restart.

W	ite-caching policy
	Enable write caching on the device Improves system performance by enabling write caching on the device, but a power outage or equipment failure might result in data loss or corruption.
	Turn off Windows write-cache buffer flushing on the device To prevent data loss, do not select this check box unless the device has a separate power supply that allows the device to flush its buffer in case of power failure.
Mo	pre information about write-caching settings



#### Computer not powering at boot

If your computer is not powering on by itself at boot you'll need to verify the Bios Setting.

-Power off the computer. -Plug a USB keyboard and a USB mouse.

-Press the power button on the computer.

Press and hold on the keyboard until you see the Bios screen.

H370M-ITX/ac P3.00 Intel(R) Core(TM) 15-8400 CPU @ 2.80GHz Processor Speed: 2800MHz Total Memory: 8GB	0	() C 06: Sun 01/27/		English CPU Temperature M/B Temperature CPU Voltage	Advanced Mode (F6) Switch To Advanced Mode 3 3D. U 27.0 °C 4 0.896 V	
💷 DRAM Information		🚱 Fan Status		Boot Priority		
DDR4_A1: Crucial 8GB (2400	n	CPU Fan 1	1513	UEFI: Generic F Partition 1	Tash Disk 8.07,	
DDR4_B1: None		Chassis Fan 1	1513	🖞 USB: Generic F	lash Disk 8.07	
Profile 1: DDR4-2666 16-17-17-36 1	L-20V	Chassis Fan 2				
XMP Profile Auto						
<pre>Storage Configuration</pre>		CPU Fan 1	Setting			
		Standa	ard			
		🌣 Tools				
RAID Mode Disable	ed					

-Press on F6 or using a mouse click on advanced on the top right corner.



-Click on Advanced tab and then click on Chipset Configuration.

	/ISR@	ck uefi	
📰 Main 🎄 OC Tweaker 🛛 术 Advanced	<b>X</b> Too1	🛈 H/W Monitor 📧 Secu	rity 🕛 Boot 🗊 Exit
			My Favorite (Easy Mode (F6)
🛭 📹 CPU Configuration			
👔 📹 Chipset Configuration			
👔 📹 Storage Configuration			Description
👔 📹 Super IO Configuration			CPU Configuration Parameters
👔 📹 ACPI Configuration			
👔 📹 USB Configuration			
👔 📹 Trusted Computing			
UEFI Configuration			
I UEFI Setup Style		Easy Mode	
Active Page on Entry		Main	
I Full HD UEFI		Auto	
			Get details via OR code
		No.	And The second
		English	Sun 01/27/2019, 06:56:21



-Go to the bottom of that page, click/select the line Restore AC Power Loss, click on the drop box where it displays "Power Off" and select Power On.

	/15Re	di UEFI				
📰 Main 🎄 OC Tweaker 🛛 🖈 Advanced	<b>X</b> Too1	C H/W Monitor	🖲 Security	ڻ Boot	I Exit	
Advanced\Chipset Configuration			Q	My Favorite	Easy Mode (F6)	
I DMI ASPM Support		Disabled				
I PCH DMI ASPM Support		Enabled				
			1	Description		
I Share Memory		Auto		Select the power state after a power		
I IGPU Multi-Monitor	Restore on AC/Power Loss		th	failure. If [Power Off] is selected, the power will remain off when the		
I Intel(R) Ethernet Controller I211	Power On Power Off		se	power recovers. If [Power On] is selected, the system will start to boot up when the power recovers.		
I Onboard HD Audio		Auto				
Ⅰ Front Panel		HD				
I WAN Radio		Enabled				
I Deep Sleep		Disabled	Get	t details via OR coo	ie etter	
I Restore on AC/Power Loss		Power Off				
			The second			
1		Eng	lish	Sun 01/27/2019	06:56:44	

-On your keyboard press on and then click on OK to confirm and save the settings. Or go to the Exit tab, click save and Exit.



#### **Cameras troubleshooting**

If your cameras are not working properly, go to the operator menu.


Select "Cameras" in the bottom menu



To calibrate the cameras, align your face with player 1's steering wheel

	MERAS CALIBRATION	RESET
Instructions Align your face over P1's steering wheel. Press P1's pedal when your face is displayed.		


When the camera shows your face properly, press the pedal Repeat this step for every player

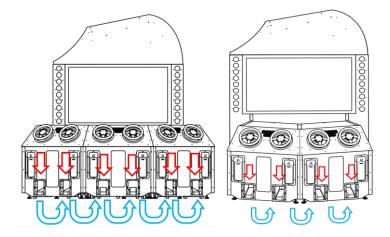



### **Chapter 07 - Parts**

### Printed Panels - 6 players version

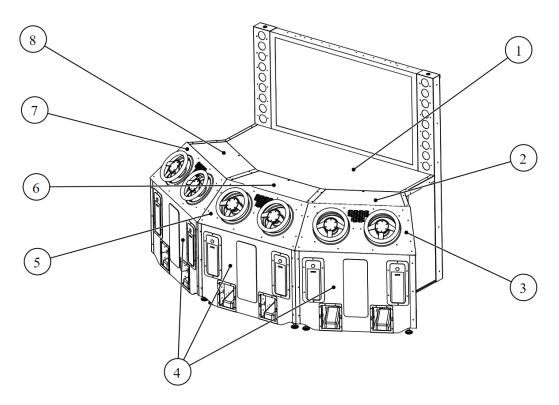


Ref	Part Description	Part #
1	Printed Melamine for Main Cabinet Hot Wheels 6 Players	HTW-02-6501-01
2	Printed Melamine HTW 6 Players Blue and Purple P5-P6	HTW-02-0002-04-P5-P6
2	Printed Melamine HTW 6 Players D&B Blue and Purple P5-P6	HTW-02-0002-04-P5-P6-D&B
3	Acrylic Dash Top Cover, HTW 6 Players, Blue and Purple P5-P6	HTW-07-0003
4	Printed Front Melamine for all Cabinets	HTW-02-0002-01
4	Printed Front Melannine for all Cabinets	HTW-02-0002-01-D&B
5	Acrylic Dash Top Cover, HTW 6 Players, Yellow and Green P3-P4	HTW-07-0002
6	Printed Melamine HTW 6 Players Yellow and Green P3-P4	HTW-02-0002-04-P3-P4
	Printed Melamine HTW 6 Players D&B Yellow and Green P3-P4	HTW-02-0002-04 P3-P4-D&B
7	Acrylic Dash Top Cover, HTW 6 Players, Red and White P1-P2	HTW-07-0001
8	Printed Melamine HTW 6 Players Red and White P1-P2	HTW-02-0002-04-P1-P2
	Printed Melamine HTW 6 Players Red and White P1-P2	HTW-02-0002-04 P1-P2-D&B

### 00

Ref	Part Description	Part #
1	Printed Melamine for Main Cabinet, Hot Wheels 4 Players	HTW4-02-6601-05
2	Printed Melamine HTW 4 Players Blue and Purple P3-P4	HTW4-02-0002-04-P3- P4
3	Acrylic Dash Top Cover, HTW 4 Players, Blue and Purple P3-P4	HTW4-07-0003
4	Printed Front Melamine for all Cabinets	HTW-02-0002-01
5	Acrylic Dash Top Cover, HTW 4 Players, Red and Green P1-P2	HTW4-07-0002
6	Printed Melamine HTW 4 Players Red and Green P1-P2	HTW4-02-0002-04-P1- P2


### Front of Small Cabinets

Printed Panels - 4 players version

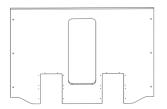

Part Description	Part #
Kit of 3x Printed Front Melamine for all Cabinets D&B	HTW-02-0002-01-D&B




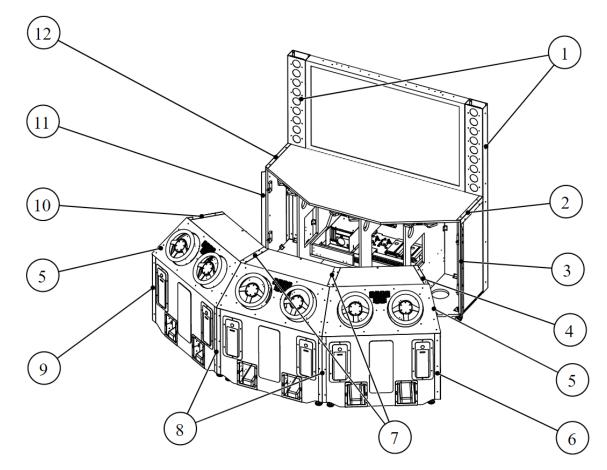

### Metal Parts – 6 players version

Ref	Part Description	Part #
1	Screen Support 6 players	HTW-01-0003
2	Top Right Horizontal Bracket for Screen Cabinet 6 players	HTW-01-0017
3	Side Right Connection Bracket for Screen Cabinet to Small Cabinet 6 players	HTW-01-0058
4	Top Right Horizontal Bracket for Right Cabinet	HTW-01-0052
5	Top Side Angle Bracket for Left/Right Cabinet	HTW-01-0038
6	Front Right Bracket for Right Cabinet	HTW-01-0006
7	Top Connection Bracket for Small Cabinet	HTW-01-0008
8	Front Connection Bracket for Small Cabinet	HTW-01-0009
9	Front Left Bracket for Left Cabinet	HTW-01-0007
10	Top Left Horizontal Bracket for Left Cabinet	HTW-01-0053
11	Side Left Connection Bracket for Screen Cabinet to Small Cabinet 6 players	HTW-01-0059
12	Top Left Horizontal Bracket for Screen Cabinet 6 players	HTW-01-0018



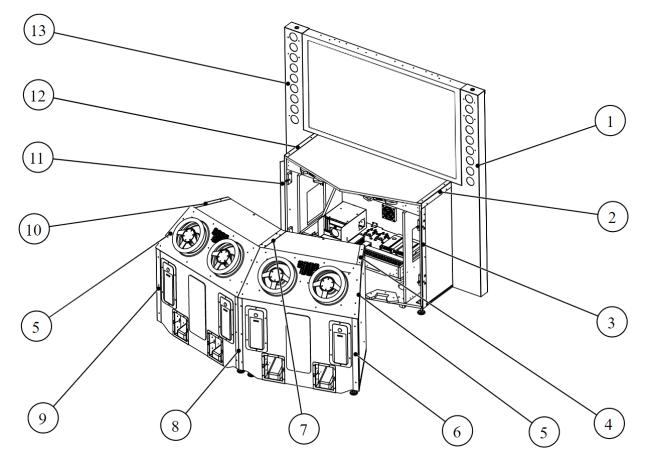

# Metal Parts - 4 players version

Ref	Part Description	Part #
1	Left Screen Support 4 players	HTW-01-0013
2	Top Right Horizontal Bracket for Screen Cabinet 4 players	HTW-01-0047
3	Side Right Connection Bracket for Screen Cabinet to Small Cabinet 4 players	HTW-01-0068
4	Top Right Horizontal Bracket for Right Cabinet	HTW-01-0052
5	Top Side Angle Bracket for Left/Right Cabinet	HTW-01-0038
6	Front Right Bracket for Right Cabinet	HTW-01-0006
7	Top Connection Bracket for Small Cabinet	HTW-01-0008
8	Front Connection Bracket for Small Cabinet	HTW-01-0009
9	Front Left Bracket for Left Cabinet	HTW-01-0007
10	Top Left Horizontal Bracket for Left Cabinet	HTW-01-0053
11	Side Left Connection Bracket for Screen Cabinet to Small Cabinet 4 players	HTW-01-0069
12	Top Left Horizontal Bracket for Screen Cabinet 4 players	HTW-01-0048
13	Right Screen Support 4 players	HTW-01-0014

## (2) $\begin{pmatrix} 1 \end{pmatrix}$ (3) F 4 0 0 5 6 T#1 7 Inside view transparency added for illustrative purposes

Ref	Part Description	Part #
1	Speaker 4''	ADR-50-9986-00
2	Speaker Bracket	BLX-01-2033
3	Bracket Support for Steering Holder	HTW-01-0021
4	Steering Holder Bracket	HTW-01-0020
5	Top Step Bracket	HTW-01-0025
6	Pedal Assembly with Potentiometer	AAG-13-0001
7	Bottom Step Bracket	HTW-01-0024

**Outside view** 

# **Small Cabinet Parts**


#### Hot Wheels King of the Road Manual V3.3 Chapter 07 – Parts

**Other Cabinet Parts** 




Ref	Part Description	Part #
1	General Duty Rubber Caster, 2-1/2"	INV-F25083
2	Leg Leveler 1/2"-13 x 4" Thread, 2-3/8" Base Diameter	INV-62805K-39
3	Kit for Fan 138CFM With Harness, 120mm	ADR-FAN-120MM-02-KIT
4	Grill 120mm	ADR-GRILLE-120MM
5	Male R2/R5 Concealed Butt-Joint Panel Fastening Latches	INV-R5-0074-07
6	Female R2/R5 Concealed Butt-Joint Panel Fastening Latches	INV-R5-0079-07
7	Miniature Round Pushbutton, White Center	ADR-49-0577-01
8	Meter, 12V, 7 Digit with Bracket	ADR-42-08012-072
9	Multi-Stage Filter 6A	ADR-817-1321-ND


# **Monitor Replacement Parts**

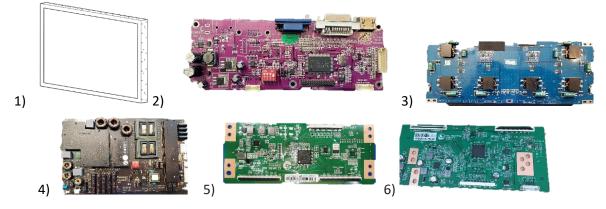

Ref	Part Description	Part #
1	Monitors 65", Black Frame, With Safety Glass	RAM-10-0001
2	Video Board for 65 Monitor	RAM-10-0001-VIDEO-BOARD
3	Inverter Backlight Board with Cable and Harness for 65" Monitors	RAM-10-0001-INVRT
4	Power Supply for 65" Monitors	RAM-10-0001-PS
5	Logic Panel Control Board with Ribbons Cables for 65" Monitors, Type 1	RAM-10-0001-LB-TYPE1
6	Logic Panel Control Board with Ribbons Cables for 65" Monitors, Type 2	RAM-10-0001-LB-TYPE2



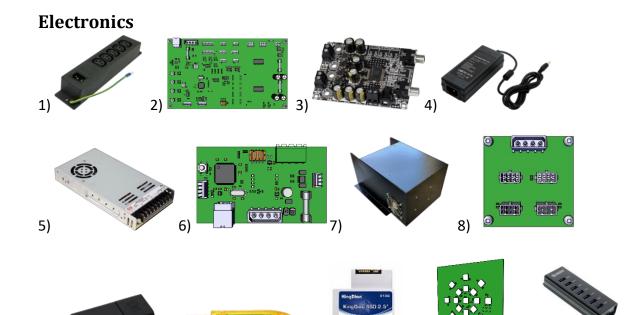

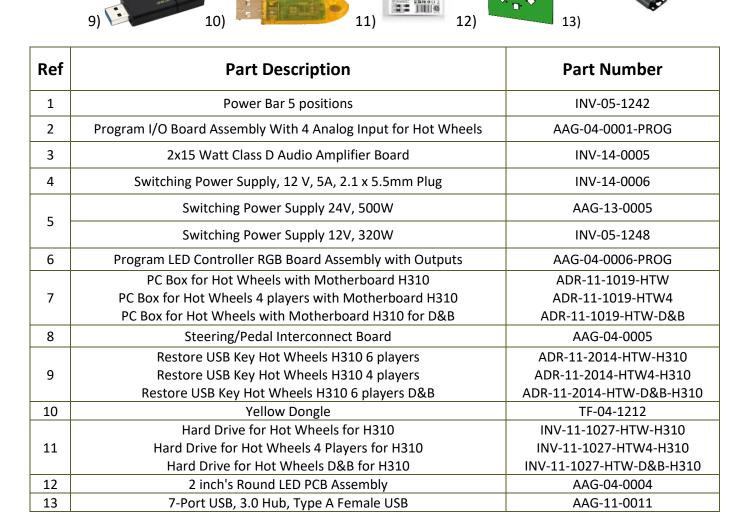




## Cameras



Part Description	Part Number
USB 1.3 Megapixel Mini camera	AAG-10-0001
7-Port USB, 3.0 Hub, Type A Female USB	AAG-11-0011
Left Plastic Cover for 1.3 Megapixel Mini camera	AAG-07-0001-L
Right Plastic Cover for 1.3 Megapixel Mini camera	AAG-07-0001-R
Complete Mini Camera Installation Kit for Hot Wheels	AAG-10-0001-KIT




# **Steering wheels**

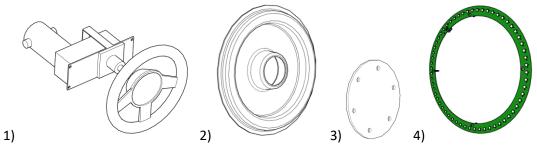

Ref	Part Description	Part Number	
1	Steering Mechanism Assembly with Motor AAG-13-0002		
2	Front White Ring Led Cover for Hot Wheels		
	Red Steering Cap	HTW-07-0021-R	
	White Steering Cap	HTW-07-0021-W	
3	Yellow Steering Cap	HTW-07-0021-Y	
5	Green Steering Cap	HTW-07-0021-G	
	Blue Steering Cap	HTW-07-0021-B	
	Purple Steering Cap	HTW-07-0021-P	
4	4 12 inch's Round LED PCB assembly AA		
	5K Ohm Potentiometer	AAG-13-0002-POT	
	Steering Hoop	AAG-13-0002-HOOP	
	Motor 90 VDC 1.5 Amp	AAG-13-0002-MOTOR	
	Timing Belt for Steering Wheel	AAG-13-0002-BELT	

## Steering Mechanism Assembly Parts available from Suzohapp

TEM NO.	QTY.	PART NO.	DESCRIPTION
1	1	43-0341-00	SCREW 1/4-28 X 1" SHC BLK OX
2	1	50-4014-00	SHAFT, 270 DEG. ACTIVE WHEEL
3	1	43-0305-00	KEY 3/16 SQUARE × .74 LG FOR ACTIVE STEERIN
4	2	43-0232-00	NUT, HEX NYLOCK 1/2-20
5	1	43-0340-00	LOCKWASHER M12 SERRATED EXTERNAL TOOTH
6	1	50-2092-00	KEY, SHAFT 4MM × 4MM × 25MM
7	1	43-1170-00	SCREW, #6-32 × 3/8" SHCS
8	1	50-4043-00	MOTOR & CONNECTOR ASY.
9	1	50-4016-00	WHEEL MTG BRACKET 270 DEG ACTV WHEEL
10	1	50-8129-00	DIECAST HOUSING FOR STEERING WHEEL W/O
11	2	50-8130-00	BEARING BALL 6002zz .59 ID X 1.259 OD X .35 THK
12	1	50-8455-00	MOTOR MOUNTING BRACKET FEEDBACK WHEEL
13	1	50-2659-00	BEARING SPACER
14	1	50-4040-00	PULLEY 1/5 PITCH 16 TEETH ALL ALUMINUM 3/8
15	4	43-0188-00	SCREW 8-32 X 3/8" HWHMS SEMS
16	1	43-0576-00	SCREW M6 X 60MM HHCS PARTIAL THREAD ZIN
17	1	90-1208-00	5/16 FLAT WASHER .06T ZINC PLT
18	1	50-2545-00	BRKT M6 BELT TIGHTENER FEEDBACK
19	4	42-0093-00	NUT, 10-32 HEX SEMS, ZINC PLTD
20	2	43-0117-00	SCREW M10 X M30 HHCS GRADE 8.8
21	2	43-0978-00	SCREW M10 X 40MM HHCS
22	4	43-0034-00	LOCKWASHER M10 RIBBED
23	4	43-0035-00	NUT HEX M10
24	1	50-4045-PL	STOPPER PIE CAM & PLASTIC PULLEY
25	1	50-4041-90	TIMING BELT FOR STEERING WHEEL URETHANE STEEL
26	1	50-4018-00	POT MOUNTING BRACKET 270 DEG ACTIVE WHEEL
27	1	50-4032-00	SPACER, POT MTG. BRACKET
28	1	43-0184-00	SCREW 10-32 X 3/8" PPHMS
29		43-0995-00	WASHER 10 SAE FLAT ZP
30	2	43-1059-00	SCREW 8-32 X 5/8" SHCS W/NYLOK PATCH BLK OX
31		50-4089-00	HARNESS WHEEL 3 PIN IDC POT
32		50-2525-00	SPLIT HUB FOR 5/8" SHAFT & 1/4-20 TAP
33	1		HOOP, SOFT
34		50-4135-00	WHEEL CAP FOR SOFT HOOP WITH NAMCO LOGO
35		43-0328-00	SCREW 1/4-20 X 3/4" SHCS BLK OX
36	-	43-0284-00	SCREW 8-32 X 1/2" TORX BHCS BLK OX
37	-	43-1554-00	STAR WASHER M14 EXTERNAL TOOTH
38		96-4916-00	LONG LIFE POT WITH NUT AND WASHER 5K 320

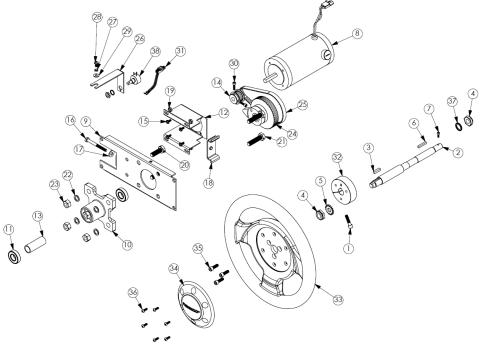

#### Hot Wheels King of the Road Manual V3.3 Chapter 07 – Parts

# Doors




Ref	Part Description	Part Number
1	Ticket Dispenser Door Including LEDs, Without Dispenser	ADR-40-0540-00KA
2	Door Assembly with Two Upper Mech Holder, Round Corner, Universal Logo	ADR-40-0038-KA
3	Door and Frame Assembly with Blank Upper and Bottom Door, Round Corner	ADR-40-0128-00KA
4	Door Assembly with One Upper Mech Holder, Round Corner, Universal Logo, NO Bottom Door	ADR-40-0512-06NMKA
5	Metal Plate for Ticket Door	SHT-01-0070
6	Round Corner Blank Door Only	ADR- 42-3145-100C15
7	Ticket Bin with Level Sensor Switch	ADR-42-1015-00
8	Ticket Dispenser D-TYPE	ADR-TD-0001




#### Header: HTW-07-0060-KIT



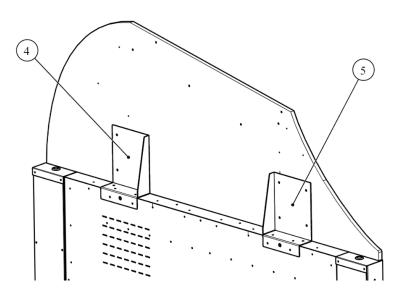

Ref	Part Description	Part Number
4	Right Side Header Bracket for Hot Wheels	HTW-01-0065
5	Left Side Header Bracket for Hot Wheels	HTW-01-0064




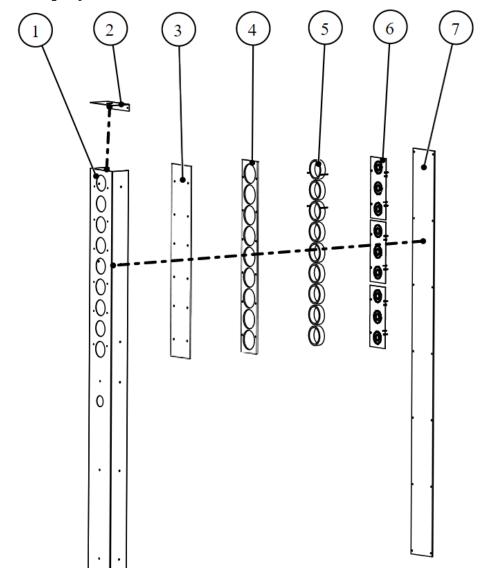


# Side LEDs – 6 players version

Ref	Part Description	Part Number
1	Screen Support 6 players	HTW-01-0003
2	Top Wire Cover	HTW-01-0001
3	LED Light Diffuser for Side of The Screen, Kit of 2	HTW-07-0050
4	: Light Guide PVC Foam on Side of The Screen, Kit of 2	HTW-07-0031
5	Round Black Plastic Spacer 3" Diameter x 1" Large (each)	HTW-07-0009
6	3 Round LED PCB Assembly	AAG-04-0003
7	Rear Screen Support Cover, Kit of 2, Hot Wheels 6 Players	HTW-07-0040



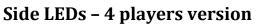

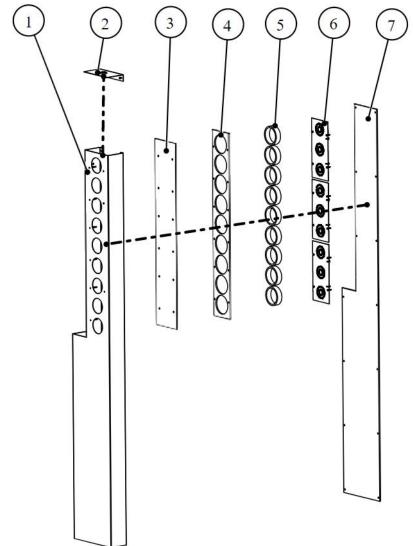

Ref	Part Description	Part Number
1	Screen Support Left Side for HTW4 Screen Support Right Side for	HTW-01-0810
1	HTW4	HTW-01-0811
2	Top Wire Cover	HTW-01-0001
3	LED Light Diffuser for Side of The Screen, Kit of 2	HTW-07-0050
4	Light Guide PVC Foam on Side of The Screen, Kit of 2	HTW-07-0031
5	Round Black Plastic Spacer 3" Diameter x 1" Large (each)	HTW-07-0009
6	3 Round LED PCB Assembly	AAG-04-0003
7	Rear Screen Support Cover, Kit of 2 for Hot Wheels 4 Players	HTW-07-0041



### Misc. Parts



Ref	Part Description	Part Number
1	Fuse Glass, 10A, 250V, 5 x 20 mm	ADR-486-1865-ND
2	Fuse Glass, 5A, 250V, 5 x 20 mm	ADR-507-1232-ND
3	Hex L-Key, 5/16'', Long Arm	INV-0911LA00079001
4	Full Extension Ball Bearing Slide, 20", 100 lbs Capacity	INV-28602500

# Wiring Harnesses

Part Description	Part Number	
Harness for Ground On 3 Doors for Small Cabinet	AAG-03-0004	
Harness Interconnection Female Power 12V/24V to I/O Board & Speakers for Front Cabinet	AAG-03-0005	
Harness For 2 Steering Motor To I/O board	AAG-03-0006	
Harness 9" Jumper To 3 Round Led PCB	AAG-03-0007	
Harness 5' Interconnect Board To 12" Round Led PCB	AAG-03-0008	
Harness for Steering Potentiometer To I/O Board	AAG-03-0009	
Harness 6' Interconnect Board To 2" Round Led PCB	AAG-03-0010	
Harness 4.5' Main Entry Interconnect Board to Front Cabinet	AAG-03-0011	
Harness 15' Power Header to RGB Led Controller	AAG-03-0012	
Harness 12' Power/Data 3 Round Led PCB To RGB Led Controller	AAG-03-0013	
Harness Interconnection Male Power 12V/24V to I/O Board & Speaker (Rear Cabinet)	AAG-03-0014	
Harness 12' Main Entry Interconnect Board to Rear Cabinet	AAG-03-0015	
Harness 4.5' Operator Button To I/O Board	AAG-03-0016	
Harness 8" PSU To Connector Barrier Strip	AAG-03-0017	
Harness 8" PSU to 5 Fuses Holders	AAG-03-0018	
Harness 18" PSU To RGB Led Controller	AAG-03-0019	
Harness 8" Earth Ground to Connector Barrier Strip	AAG-03-0020	
Harness 6' EMI Filter To Power Bar	AAG-03-0021	
Harness for PSU Power	BLX-03-0014	
Harness for IO Board Power to Rear Cabinet	BLX-03-0016	
Harness for Coin MEC	BLX-03-0024	
Harness for Ticket, Player 3	RAM-03-0006	



Part Description	Part Number	
Barrel Connector Wire "Y", 2.1mm Female to 2 x	TF-05-1223	
2.1mm Male, 300mm		
Power Entry EMI Filter	ADR-05-1241	
Power Cord, PDU to CPU, IEC-C13 to IEC-C14,	INV-PW-100-03	
18AWG, 3'		
Power Cord, PDU to CPU, IEC-C13 to IEC-C14,	INV-PW-100-08	
18AWG, 8'	110	
Power Cord, IEC-C14 to IEC-C7 (2-Prong) SPT-2,	INV-PW-117-03	
18AWG, 3'		
Cable Usb 2.0 'AB', White, 3'	INV-USB-AB1-03	
Cable Usb 'AA' 2.0, Male to Female, 10'	USB-AA3-10BK	
Cable Usb 2.0 'AB', White, 6'	INV-USB-AB1-06	
DC Power Connector Female 2.1mm x 5.5mm, 8"	INV-CN-DCF-8IN	

# Cabling

### Hardware Kit

6 Players Kit: HTW6-HARDWARE


4 Players Kit: HTW4-HARDWARE



Ref	Part Description	Part #	6 PLY Qty	4 PLY Qty
1	Hex Head Bolts ¼-20 x ¾"	HS-HH-Z-1/4-20X3/4	2	2
2	Philipps Pan Head Machine Screws Zinc 8-32 x <sup>3</sup> / <sub>4</sub> "	MS-PP-ZS-08-32X3/4	8	8
3	Philipps Pan Head Machine Screws Black 10-24 x ¾	MS-PP-BS-10-24X3/4	34	22
4	Philipps Pan Head Machine Screws Black 10-24 x 1¼"	MS-PP-BS-10-24X1-1/4	6	3
5	Allen Key 5/16"	INV-0911LA00079001	1	1


# **Chapter 08 – Diagrams & Schematics**

I/0 Board AAG-04-0001

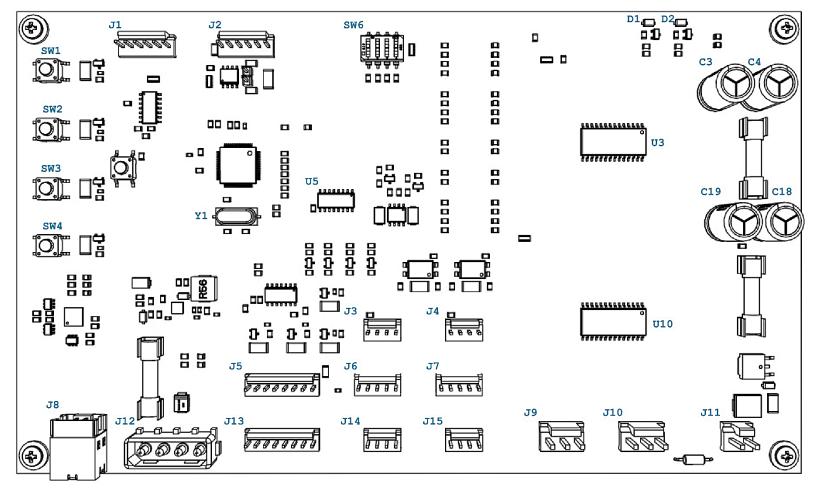


J1	<u>J2</u>	<u>J3</u>	J4	
(Player 3's module only*)		1. (White) 12V	1. (White) 12V	
1. (Red) OPERATOR		2. (Red) OUTA	2. (Red) OUTB	
2. Not Connected		3. (Black) OPTOA	3. (Black) OPTOB	
3. Not Connected		4. (Green) GND	4. (Green) GND	
4. Not Connected				
5. (Black) GND				
6. Not Connected				
0. Not connected				
	16		10	
<u>15</u>	<u>J6</u>	<u>J7</u>	<u>18</u>	
	1. (Orange) U.POT	1. (Orange) U.POT	USB to Computer	
	2. (Green) S.POT	2. (Green) S.POT		
	3. (Black) GND	3. (Black) GND		
	4. Not Connected	4. Not Connected		
	5. Not Connected	5. Not Connected		
10	J10	<u></u>	<u>J12</u>	
<u><u>J9</u></u>				
A. (Red)	A. (White)	1. (White) 24V	1. (Red) +12V	
B. (Black)	B. (Green)	2. (Green) GND	2. Not Connected	
			3. (Black) GND	
			4. Not Connected	
J13	J14	J15	110	
			<u>J16</u>	
. ,	1. (Green) U.POT	1. (Green) U.POT		
2. (Black) GND	2. (White) S.POT	2. (Red) S.POT		
3. (Red) IN1	3. (Black) GND	3. (Black) GND		
4. (Yellow) IN2	4. Not Connected	4. Not Connected		
5. (Blue) GND	5. Not Connected	5. Not Connected		
6. (Brown) OUT1				
7. (Orange) OUT2				
8. (Green) 12V				
<u>J17</u>	<u>J18</u>	<u>J19</u>	<u>J20</u>	



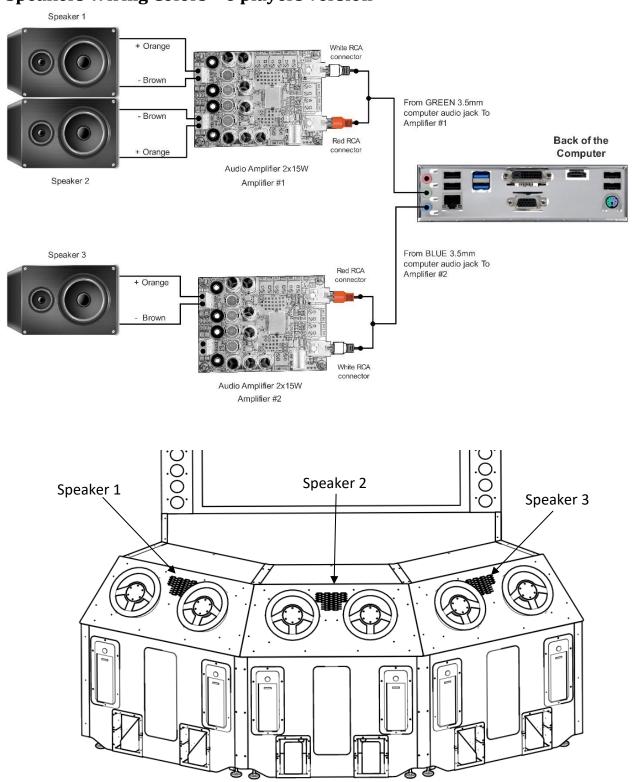






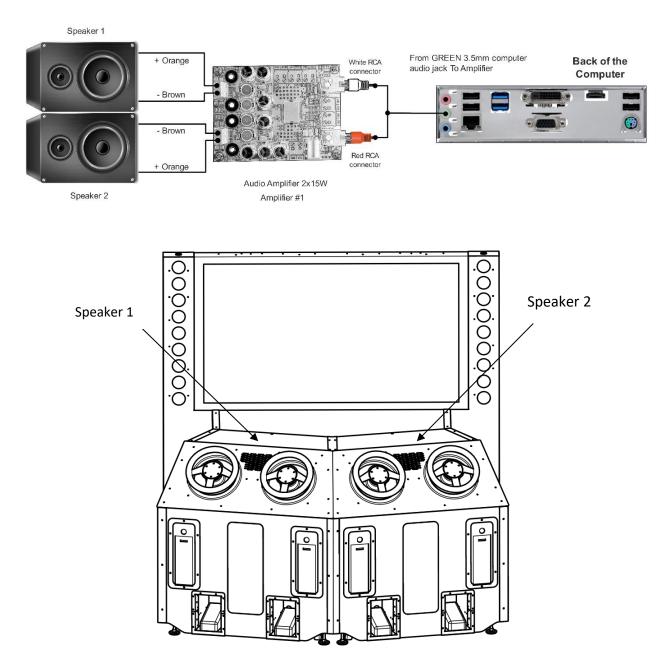


# Speakers Wiring Colors – 4 players version



#### **Power Distribution Schematics**

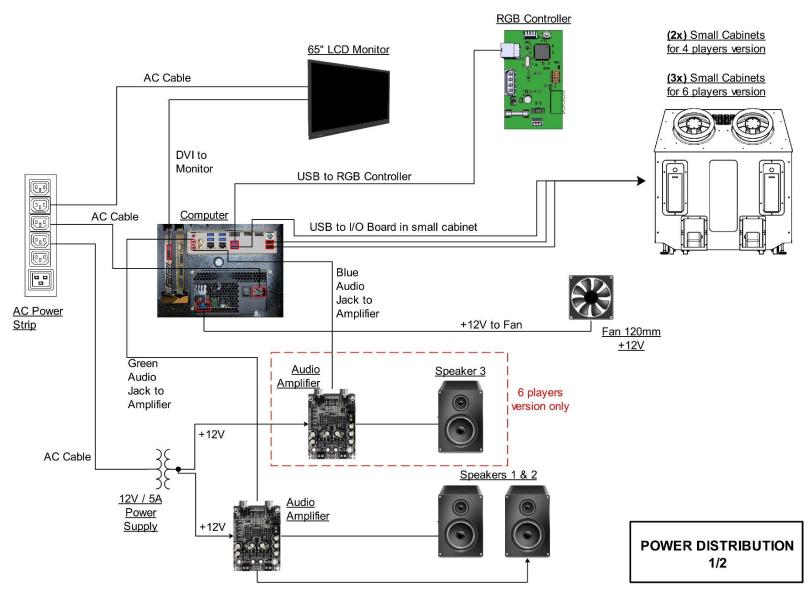




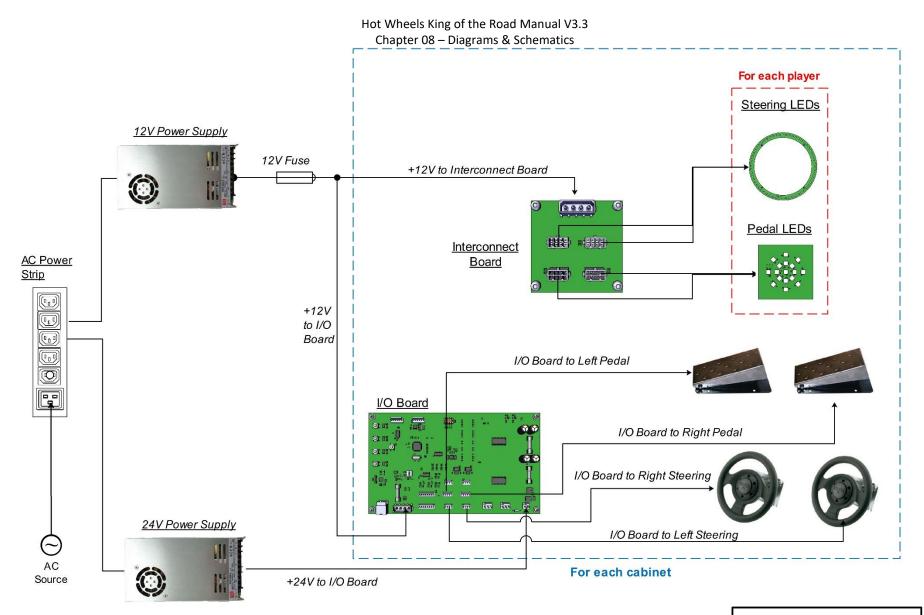



#### **Tray Assembly Schematics**

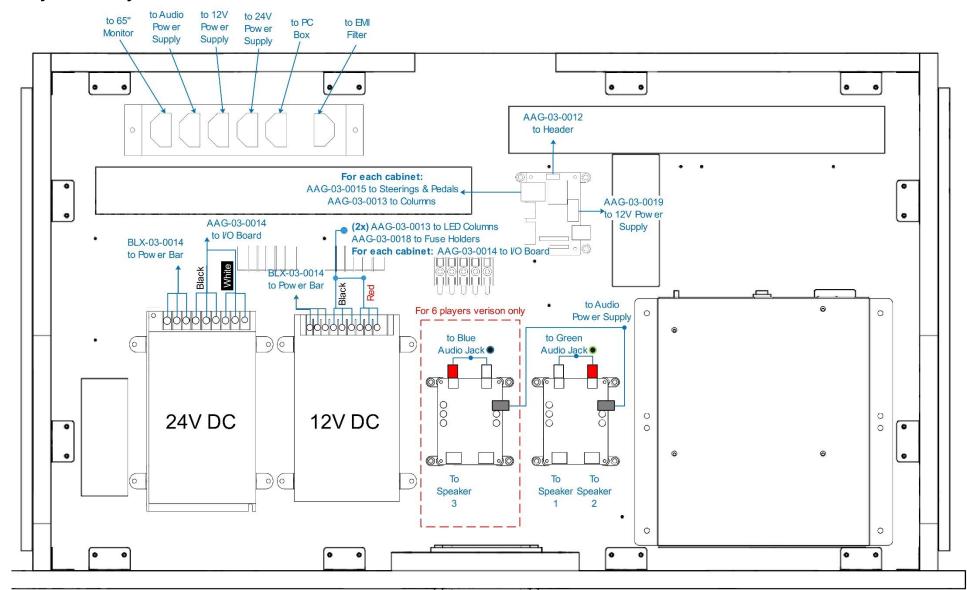




### **Fuse Holders Schematics**

(as seen from the back of the unit when opening the tray)


#### **Fuse Holder**

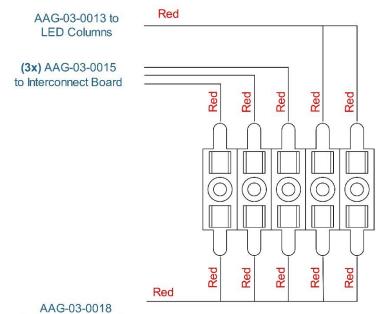


AAG-03-0018 to 12V Power Supply

#### Left Barrier Strip



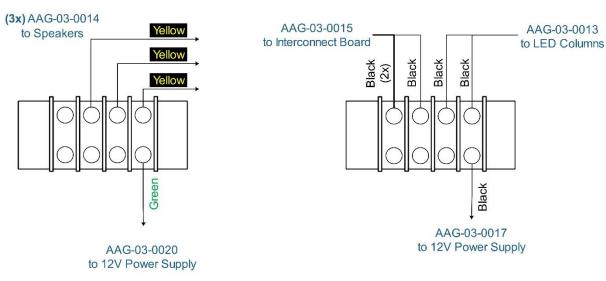

#### **RGB LED Schematics**

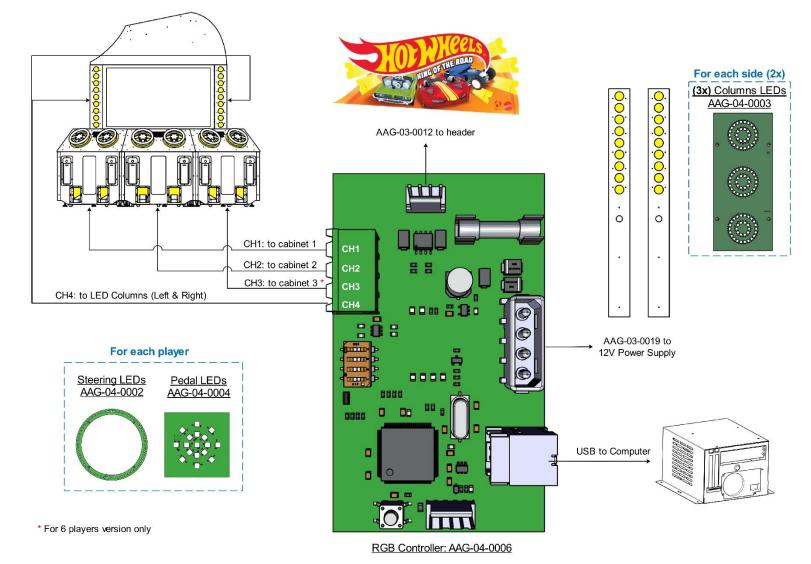



# **Chapter 09 – Software Recovery**

If your unit software needs to be restored, please follow those instructions.

- Connect a USB keyboard to the motherboard.
- Connect the provided USB Recovery flash disk is in a **<u>Black</u>** USB port.
- Power on the unit and press F11 on the keyboard to display the boot menu.
- Choose the <u>UEFI: USB device ~16GB</u>

The process takes 25-30 minutes and the unit will reboot back in the game at the end. The Wireless credentials will need to be re-entered and Operator settings will be back at the default ones.

# **Chapter 10 – Card Reader**

Configure your Operator settings as seen in Chapter 5 - Operator Menu.

#### **Embed System**

If you are using an Embed system, you need to connect your harnesses to Adrenaline Amusements I/O board & harnesses. You should refer to the Embed instructions manual for wiring pin-out.

The typical Embed settings are *Standard* except:

-Ticket Mech Type: Dumb DC

-Drive Polarity: Positive

-Notch Polarity: Negative

-Game ticket notch width = 6 (60ms)

-Game ticket notch spacing = 24 (240ms)

-Game Drive Threshold = 15 (1.5V or 1500mV)

-Drive Debounce = 40ms



#### Customers must provide the unit serial number when claiming any warranty request.

Adrenaline Amusements (AAGames) warrants this Arcade unit (Including accessories) against defects in material or workmanship as follows:

This unit has a 1-year warranty against defective hardware from date of delivery.

Other than abuse or improper servicing, Adrenaline Amusements covers at no charge the replacement parts including standard shipping.

We offer an advanced replacement program and the customers have 30 days from delivery date to return back the defective equipment at their fees or they will be charged automatically for the replacement parts.

### Improper servicing or abuse will VOID existing warranties.

All warranty request needs to be validated with our technical support department.

After the 1-year warranty, Adrenaline Amusements offers repairs & sales services options. Please contact the technical support department for information.

> Adrenaline Amusements 2273 Antonio-Héroux street Terrebonne, QC J6X 4R3 Canada +1.450.824.1671